



ADLINK
TECHNOLOGY INC.

PXIe-3975

PXI Express™ Embedded Controller

User's Manual



Manual Rev.: 2.00
Revision Date: Dec 29, 2011
Part No: 50-17035-1000



Recycled Paper

Advance Technologies; Automate the World.

Revision History

Revision	Release Date	Description of Change(s)
2.00	2011/12/29	Initial Release

Preface

Copyright 2011 ADLINK TECHNOLOGY INC.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

Disclaimer

The information in this document is subject to change without prior notice in order to improve reliability, design, and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

Environmental Responsibility

ADLINK is committed to fulfill its social responsibility to global environmental preservation through compliance with the European Union's Restriction of Hazardous Substances (RoHS) directive and Waste Electrical and Electronic Equipment (WEEE) directive. Environmental protection is a top priority for ADLINK. We have enforced measures to ensure that our products, manufacturing processes, components, and raw materials have as little impact on the environment as possible. When products are at their end of life, our customers are encouraged to dispose of them in accordance with the product disposal and/or recovery programs prescribed by their nation or company.

Trademarks

PC, PS/2, and VGA are registered trademarks of International Business Machines Corp. Borland[®], Borland[®] C, C++ Builder[®], and Delphi[®] are registered trademarks of the Borland Software Corporation. LabVIEW[™] is a trademark of National Instruments Corporation. Microsoft[®], Visual Basic[®], Visual C++[®], Windows[®]

98, Windows® NT, Windows® 2000, Windows® XP, and Windows® Vista® are registered trademarks of Microsoft® Corporation. PCI™, is a registered trademark of the Peripheral Component Interconnect Special Interest Group (PCI-SIG).

Product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective companies.

Conventions

Take note of the following conventions used throughout this manual to make sure that users perform certain tasks and instructions properly.



NOTE:

Additional information, aids, and tips that help users perform tasks.



CAUTION:

Information to prevent **minor** physical injury, component damage, data loss, and/or program corruption when trying to complete a task.



WARNING:

Information to prevent **serious** physical injury, component damage, data loss, and/or program corruption when trying to complete a specific task.

Table of Contents

Revision History	ii
Preface	iii
List of Figures	ix
List of Tables	xi
1 Introduction	1
1.1 Features.....	2
1.2 Specifications.....	3
2 Getting Started	7
2.1 Package Contents	7
2.2 Operating System Installation.....	8
2.3 Hardware Instructions.....	9
2.3.1 Faceplate Connectors & Indicators	9
2.3.2 PXI Trigger Connector.....	10
2.3.3 DVI-I Connector.....	11
2.3.4 GPIB Connector	12
2.3.5 Reset Button.....	13
2.3.6 LED Indicators	13
2.3.7 USB 2.0 Ports.....	14
2.3.8 Gigabit Ethernet Ports	15
2.3.9 ExpressCard/34.....	16
2.3.10 Onboard Connections and Settings.....	17
2.3.11 Installation Environment	18
2.3.12 Installing the PXIe-3975	19
2.3.13 Replacing the Hard Drive	20
2.3.14 Replacing the Battery Backup	21
2.3.15 Clearing CMOS Jumper (JP1).....	24

3	Driver Installation.....	25
3.1	Installing Windows Drivers.....	25
3.2	Installing the Chipset Driver.....	25
3.3	Installing the Graphics Driver.....	26
3.4	Installing the Ethernet Driver.....	27
3.5	Installing the GPIB Driver.....	27
3.6	Installing the Management Engine Driver.....	28
3.7	Installing the PXI Trigger Driver.....	28
3.8	Installing the WDT Driver.....	28
4	BIOS Setup.....	31
4.1	Starting the BIOS.....	31
4.2	Main Setup.....	33
4.3	Advanced Setup.....	34
4.4	Chipset Configuration.....	35
4.5	Boot Setup.....	35
4.6	Security Setup.....	36
4.7	Save & Exit Setup.....	36
A	Appendix: PXI Trigger I/O Function Reference.....	39
A.1	Data Types.....	39
A.2	Function Library.....	40
A.2.1	TRIG_Init.....	40
A.2.2	TRIG_Close.....	41
A.2.3	TRIG_SetSoftTrg.....	41
A.2.4	TRIG_Trigger_Route.....	42
A.2.5	TRIG_Trigger_Clear.....	44
A.2.6	TRIG_GetSoftTrg.....	45
A.2.7	TRIG_Trigger_Route_Query.....	46
A.2.8	TRIG_GetDriverRevision.....	48
A.2.9	CONTROLLER_GetHwRevision.....	49
A.2.10	CONTROLLER_GetManufacturer.....	50

A.2.11	CONTROLLER_GetModel	51
A.2.12	CONTROLLER_GetSerialNumber	51
B	Appendix: Watchdog Timer.....	53
B.1	WDT Function Library.....	53
B.1.1	InitWDT	53
B.1.2	SetWDT	54
B.1.3	StartWDT	55
B.1.4	ResetWDT	55
B.1.5	StopWDT	56
	Important Safety Instructions	57
	Getting Service.....	59

This page intentionally left blank.

List of Figures

Figure 1-1:	PXIe-3975 Functional Block Diagram.....	3
Figure 2-1:	PXIe-3975 Faceplate	9
Figure 2-2:	PXI Trigger SMB Jack	10
Figure 2-3:	PXIe-3975 LED Indicators	13
Figure 2-4:	PXIe-3975 Onboard Configuration	17
Figure 4-1:	BIOS Setup Navigation.....	32

This page intentionally left blank.

List of Tables

Table 2-1: DVI-I Pin Assignment.....	11
Table 2-2: GPIB Pin Description	12
Table 2-3: LED Indicator Legend	13
Table 2-4: USB 2.0 Port Pin Assignment.....	14
Table 2-5: PXIe-3975 Ethernet Port Pin Assignments.....	15
Table 4-1: BIOS Hot Key Functions.....	32
Table 4-2: BIOS Main Setup Menu	33
Table 4-3: BIOS Advanced Setup Menu.....	34
Table 4-4: BIOS Chipset Configuration Menu.....	35
Table 4-5: BIOS Boot Setup Menu	35
Table 4-6: BIOS Security Setup Menu.....	36

This page intentionally left blank.

1 Introduction

The ADLINK PXIe-3975 PXI Express™ embedded controller, based on the Intel® Core™ i5 processor, is specifically designed for PXI Express-based testing systems, providing a rugged and stable operating environment for a wide variety of testing and measurement applications.

Combining state-of-the-art Intel® Core™ i5-520E 2.4 GHz processors, and up to 8 GB of 1066 MHz DDR3 memory, the PXIe-3975 utilizes two separate computing engines on a single processor, enabling execution of two independent tasks simultaneously in a multi-tasking environment. With a configurable PCIe switch, the PXIe-3975 can support four links x4 or two links x8 PXI Express link capability, with maximum system throughput of up to 2 GB/s.

PXI Express-based testing systems typically make up a PXI Express platform and diversified standalone instruments for complex testing tasks. The PXIe-3975 provides ample interface choices, including GPIB, USB, and ExpressCard, for connecting and controlling instruments. The PXIe-3975 series also provides dual Gigabit Ethernet ports, one for LAN connection and the other for controlling LXI instruments. With flexible instrument control interfaces and mechanical and electronic reliability, the ADLINK PXIe-3975 is more than equal to the challenges of the most demanding PXIe-based testing systems.



NOTE:

8GB memory addressing is OS-dependent, such that a 32-bit operating system may be unable to address the full 8GB of memory space. To fully utilize the 8GB memory, 64-bit operating systems are required.

1.1 Features

- ▶ PXI™-5 PXI Express Hardware Specification Rev.1.0
- ▶ Intel® Core™ i5-520E 2.4 GHz processor for maximum computing power
- ▶ Dual Channel DDR3 SODIMM
 - ▷ Up to 8 GB 1066 MHz
- ▶ Maximum System Throughput 2 GB/s
- ▶ PXI Express Link Capability
 - ▷ Four Link Configuration: x4 x4 x4 x4
 - ▷ Two Link Configuration: x8 x8
- ▶ Pre-installed SATA hard drive at 160 GB, 7200 RPM
 - ▷ Supports 2.5" HDD or SSD
 - ▷ SATA 3.0 Gb/s
 - ▷ Supports AHCI
- ▶ Integrated I/O
 - ▷ Dual Gigabit Ethernet ports
 - ▷ Four USB 2.0 Ports
 - ▷ Built-in GPIB (IEEE488) controller
 - ▷ DVI-I video connector
 - ▷ ExpressCard/34 expansion slot
 - ▷ Trigger I/O for advanced PXI™ trigger functions
- ▶ Programmable watchdog timer

1.2 Specifications

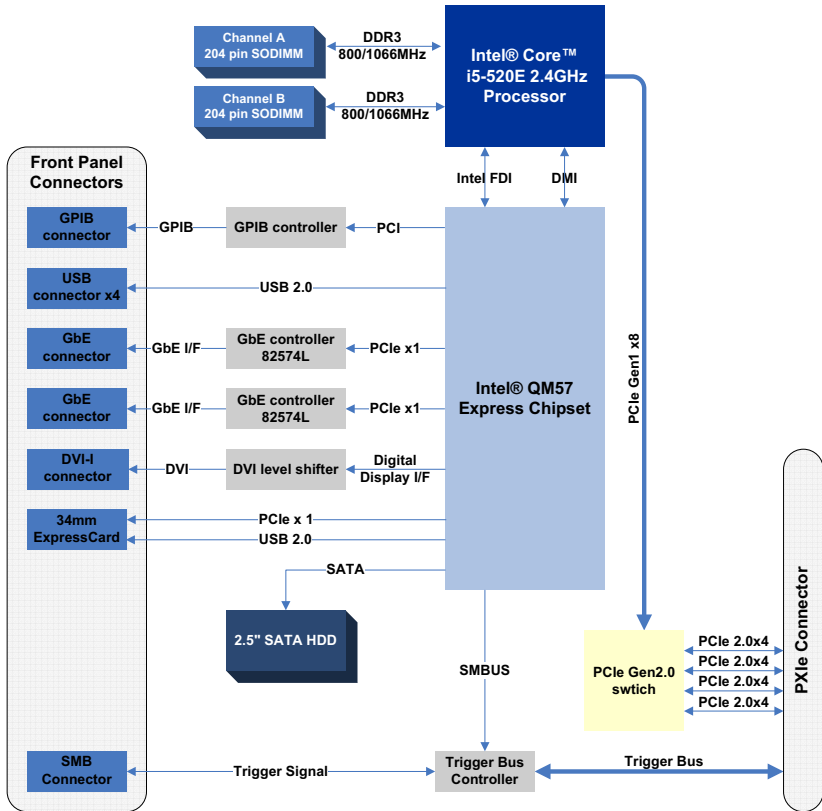


Figure 1-1: PXIe-3975 Functional Block Diagram

Processor

- ▶ Intel® Core™ i5-520E 2.4GHz processor
- ▶ DMI (Direct Media Interface) with 1 GB/s of bandwidth in each direction

Chipset

Mobile Intel® QM57 Express

Memory

- ▶ Two standard 204-pin DDR3 SODIMM sockets
- ▶ Support for +1.5 V DDR3, 800/1066 MHz RAM up to 8 GB total
- ▶ Support for non-ECC unbuffered memory

Video

- ▶ DVI output supporting up to 1920x 1200 @ 60 Hz resolution
- ▶ CRT output for analog CRT route to DVI-I connector on the faceplate, supporting up to 2048 x 1536 bpp at 75Hz
- ▶ DVI-I connector for both digital and analog video signal output

Hard Drive

Built-in 2.5" 160 GB SATA hard drive, 7200 RPM

I/O Connectivity

Dual Gigabit Ethernet controllers through two RJ-45 connectors with speed/link/active LED on the faceplate, with upper connector supporting Wake on LAN.

USB

Four USB 2.0 ports on the faceplate.

GPIB

Onboard IEEE488 GPIB controller through Micro-D 25-pin connector on the faceplate.

ExpressCard/34

34mm wide ExpressCard expansion slot

Trigger I/O

One SMB connector on the faceplate to route an external trigger signal to/from PXI trigger bus

Dimensions (3-slot 3U PXIe module)

3U/3-slot PXI/Compact PCI standard

60.5 W x 128.7 H x 213.2 D mm (2.38 x 5.07 x 8.39 in.)

Slot Requirements

System slot and 2 controller expansion slots

Weight

0.9 kg (exclusive of packaging)

Environmental

Operating temperature 0 to 55°C

Storage temperature -20 to 70°C

Relative humidity 5 to 95%, non-condensing

Shock and Vibration

Functional shock 30 G, half-sine, 11 ms pulse duration

Random vibration:

- ▶ Operating 5 to 500 Hz, 0.21 Grms, 3 axes
- ▶ Non-operating 5 to 500 Hz, 2.46 Grms, 3 axes

Certification

Electromagnetic compatibility:

- ▶ EMC/EMI: CE, FCC Class A
- ▶ CE Compliance EN 61326-1

The PXIe-3975 meets the essential requirements of applicable European Directives.

Power Requirements

Voltage rail	5 V standby	3.3 V	5 V	12 V
Maximum power consumption	0.12 A	0.75 A	0.76 A	2.81 A
Typical power consumption	0.11 A	0.72 A	0.54 A	0.9 A

2 Getting Started

This chapter describes procedures for installing the PXIe-3975 and making preparations for its operation, including hardware and software setup. Please note that the PXIe-3975 is shipped with RAM and HDD pre-installed. Please contact ADLINK or authorized dealer if there are any problems during the installation.



NOTE:

Diagrams and illustrated equipment are for reference only. Actual system configuration and specifications may vary.

2.1 Package Contents

Before beginning, check the package contents for any damage and ensure that the following items are included:

- ▶ PXIe-3975 Controller (equipped with RAM and HDD)
- ▶ DVI-to-VGA adapter
- ▶ PXIe-3975 User's Manual
- ▶ ADLINK All-In-One CD

If any of these items are missing or damaged, contact the dealer from whom you purchased the product. Save the shipping materials and carton in case you want to ship or store the product in the future.



Do not install or apply power to equipment that is damaged or missing components. Retain the shipping carton and packing materials for inspection. Please contact your ADLINK dealer/vendor immediately for assistance and obtain authorization before returning any product.

2.2 Operating System Installation

For more detailed information about the operating system, refer to the documentation provided by the operating system manufacturer. Preferred/supported operating systems for PXIe-3975 are:

- ▶ Windows XP
- ▶ Windows 7 32/64bits
- ▶ For other OS support, please contact ADLINK

Most operating systems require initial installation from a hard drive, floppy drive, or CD-ROM drive. The PXIe-3975 controller supports USB CD-ROM drive, USB flash disk, USB external hard drive, or a USB floppy drive as the first boot device. Please see Section 4.5: Boot Setup for information about setting the boot devices. These devices should be configured, installed, and tested with the supplied drivers before attempting to load the new operating system.



Read the release notes and installation documentation provided by the operating system vendor. Be sure to read all the README files or documents provided on the distribution disks, as these typically note documentation discrepancies or compatibility problems.

1. Select the appropriate boot device order from the BIOS Boot Setup Menu based on the OS installation media used. For example, if the OS is distributed on a bootable installation CD, select USB CD-ROM as the first boot device and reboot the system with the installation CD in the USB CD-ROM drive
2. Proceed with the OS installation as directed and be sure to select appropriate device types if prompted. Refer to the appropriate hardware manuals for specific device types and compatibility modes of ADLINK PXI products.
3. When installation is complete, reboot the system and set the boot device order in the SETUP boot menu accordingly.

2.3 Hardware Instructions

2.3.1 Faceplate Connectors & Indicators

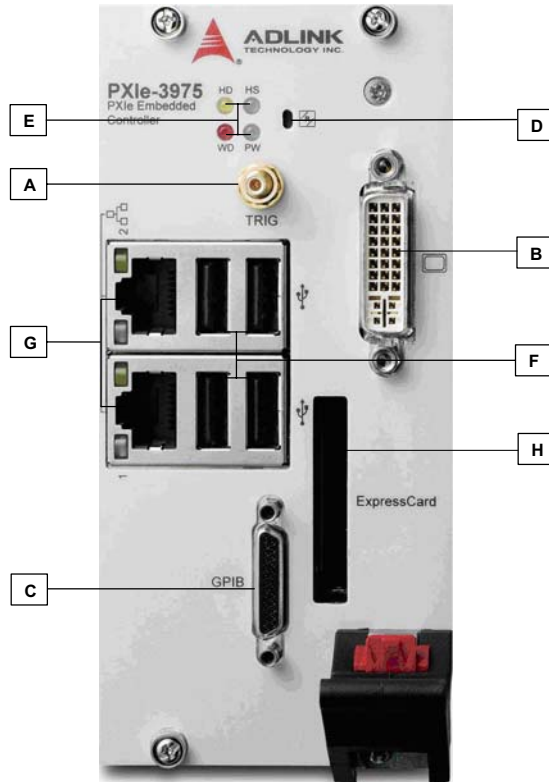


Figure 2-1: PXIe-3975 Faceplate

A	PXI Trigger Connector (SMB jack)	E	LED indicators
B	DVI-I Connector	F	4X Type-A USB connectors
C	GPIB Connector (Micro D-Sub 25P)	G	2X Gigabit Ethernet
D	Reset Button	H	ExpressCard/34

2.3.2 PXI Trigger Connector

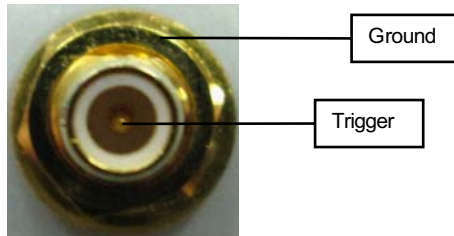


Figure 2-2: PXI Trigger SMB Jack


The PXI trigger connector is a SMB jack, used to route external trigger signals to or from the PXI backplane. Trigger signals are TTL-compatible and edge sensitive. The PXIe-3975 provides four trigger routing modes from/to the PXI trigger connector to synchronize PXI modules, including

- ▶ From a selected trigger bus line to PXI trigger connector
- ▶ From the PXI trigger connector to a selected trigger bus line
- ▶ From software trigger to a selected trigger bus line
- ▶ From software trigger to PXI trigger connector

All trigger modes are programmable by the provided driver. Please refer to Section A: PXI Trigger I/O Function Reference for further information.

2.3.3 DVI-I Connector

The DVI-I connector connects the PXIe-3975 to a monitor, of which both digital (DVI) and analog (VGA) are supported. If connecting to an analog (VGA) monitor, the included DVI-to-VGA adapter must be installed on the DVI-I connector.

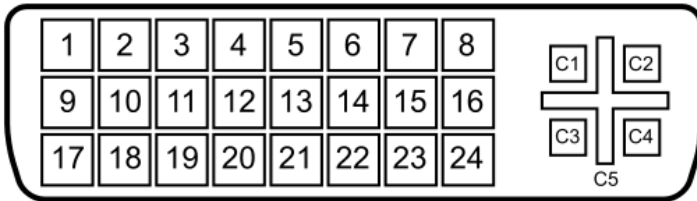


Pin	Signal	Pin	Signal	Pin	Signal	Pin	Signal
1	TMDS Data2-	9	TMDS Data1-	17	TMDS Data0-	C1	Analog Red
2	TMDS Data2+	10	TMDS Data1+	18	TMDS Data0+	C2	Analog Green
3	Shield Ground	11	Shield Ground	19	Shield Ground	C3	Analog Blue
4	Reserved	12	Reserved	20	Reserved	C4	Analog HSYNC
5	Reserved	13	Reserved	21	Reserved	C5	Analog Ground
6	DDC Clock	14	+5V Power	22	Ground		
7	DDC Data	15	Ground	23	TMDS Clock+		
8	Analog VSYNC	16	Hot Plug Detect	24	TMDS Clock-		

Table 2-1: DVI-I Pin Assignment

2.3.4 GPIB Connector

The GPIB connector on PXIe-3975 is a micro D-sub 25P connector, controlling external bench-top instruments. Connection to other instruments requires the ACL-IEEE488-MD1-A cable. The on-board GPIB controller provides:

- ▶ Full compatibility with IEEE 488 standard
- ▶ Up to 1.5MB/s data transfer rates
- ▶ Onboard 2 KB FIFO for read/write operations
- ▶ Driver APIs compatible with NI-488.2 driver software
- ▶ Connection with up to 14 instruments

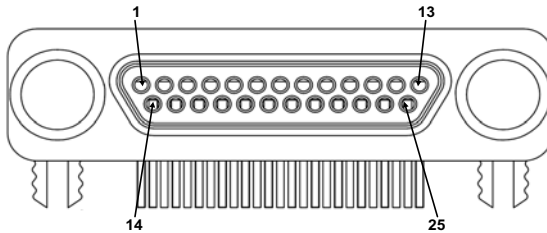

Pin	Signal	Description	Pin	Signal	Description
1	DIO1#	GPIB Data 1	14	DIO5#	GPIB Data 5
2	DIO2#	GPIB Data 2	15	DIO6#	GPIB Data 6
3	DIO3#	GPIB Data 3	16	DIO7#	GPIB Data 7
4	DIO4#	GPIB Data 4	17	DIO8#	GPIB Data 8
5	EOI	End Or Identify	18	REN	Remote Enable
6	DAV	Data Valid	19	Ground	Signal Ground
7	NRFD	Not Ready For Data	20	Ground	Signal Ground
8	NDAC	No Data Accepted	21	Ground	Signal Ground
9	IFC	Interface Clear	22	Ground	Signal Ground
10	SRQ	Service Request	23	Ground	Signal Ground
11	ATN	Attention	24	Ground	Signal Ground
12	Chassis Ground	Chassis Ground	25	Ground	Signal Ground
13	Ground	Signal Ground			

Table 2-2: GPIB Pin Description

2.3.5 Reset Button

The reset button, activated by insertion of any pin-like implement, executes a hard reset for the PXIe-3975.

2.3.6 LED Indicators

Four LED indicators on the faceplate indicate operational status of the PXIe-3975, as follows.

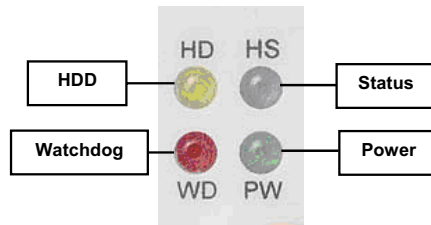


Figure 2-3: PXIe-3975 LED Indicators

LED indicator	Color	Description
Power LED	Green	Indicates system power. Remains lit when the system boots normally and main power supply is functioning.
HDD LED	Yellow	Indicates operating state of the HDD. Flashes during access to or activity on the SATA HDD.
Watchdog	Red	Indicates status of the watchdog timer, lighting when watchdog timer has expired. Please refer to Appendix B for watchdog timer programming information.
HS LED	Blue	Indicates system status, blinking on and off once during boot when system status is good, and continuously blinking or remaining lit when the system malfunctions.



Table 2-3: LED Indicator Legend



In the event of malfunction, clear the CMOS (please see Section 2.3.15: Clearing CMOS Jumper (JP1)) and reboot the system. If the system fails to respond properly, please contact ADLINK for assistance.

2.3.7 USB 2.0 Ports

  The PXIe-3975 provides four USB 2.0 ports via USB Type A connectors on the faceplate, all compatible with hi-speed, full-speed and low-speed USB devices. Supported boot devices include USB flash drive, USB floppy, USB CD-ROM, and others, with boot priority and device settings configurable configured in BIOS. Please see Section 4.5: Boot Setup for more information.



Pin	Signal
1/5	Power 5V
2/6	USB Data-
3/7	USB Data +
4/8	Ground

Table 2-4: USB 2.0 Port Pin Assignment



2.3.8 Gigabit Ethernet Ports

Two Intel 82574L GbE controllers via x1 PCI Express interface provide dual Gigabit Ethernet connectivity, with the upper connector supporting Wake-on-LAN function.

Pin	1000Base-T Signal	100/10Base-T Signal
1	MDI0+	TX+
2	MDI0-	TX-
3	MDI1+	RX+
4	MDI2+	Reserved
5	MDI2-	Reserved
6	MDI1-	RX-
7	MDI3+	Reserved
8	MDI3-	Reserved

Table 2-5: PXIe-3975 Ethernet Port Pin Assignments

The Ethernet ports each include two LED indicators, one Active/Link indicator and one Speed indicator, functioning as follows.

	LED	Status	Description
	Active/Link (Yellow)	Off	Ethernet port is disconnected
		ON	Ethernet port is connected with no data transmission
		Flashing	Ethernet port is connected with data transmitted/received
	Speed (Green/Orange)	Off	10 Mbps
		Green	100 Mbps
		Orange	1000 Mbps



NOTE:

Although the port 2 Intel 82574 Ethernet device remains powered even after shutdown and the Active/Link LED may remain blinking, it is safe to remove the controller or disconnect power.

2.3.9 ExpressCard/34

The PXIe-3975 controller is equipped with an ExpressCard/34 slot on the front panel, which provides I/O expansion. ExpressCard connector signals are as follows.

Pin	Signal	Description	Pin	Signal	Description
1	GND	Ground	14	+3.3V	Power
2	USBD-	USB Data -	15	+3.3V	Power
3	USBD+	USB Data +	16	CLKREQ#	Clock Request
4	CPUSB#	USB Presence	17	CPPE#	PE Presence
5	RESERVED	Reserved for future use	18	REFCLK-	Reference Clock-
6	RESERVED	Reserved for future use	19	REFCLK+	Reference Clock+
7	SMBCLK	SMBus Clock	20	GND	Ground
8	SMBDATA	SMBus Data	21	PERn0	PE Data Receive -
9	+1.5V	Power	22	PERp0	PE Data Receive +
10	+1.5V	Power	23	GND	Ground
11	WAKE#	PE Wake	24	PETn0	PE Data Transmit -
12	+3,3VAUX	Power	25	PETp0	PE Data Transmit +
13	PERST#	PE Reset	26	GND	Ground

2.3.10 Onboard Connections and Settings

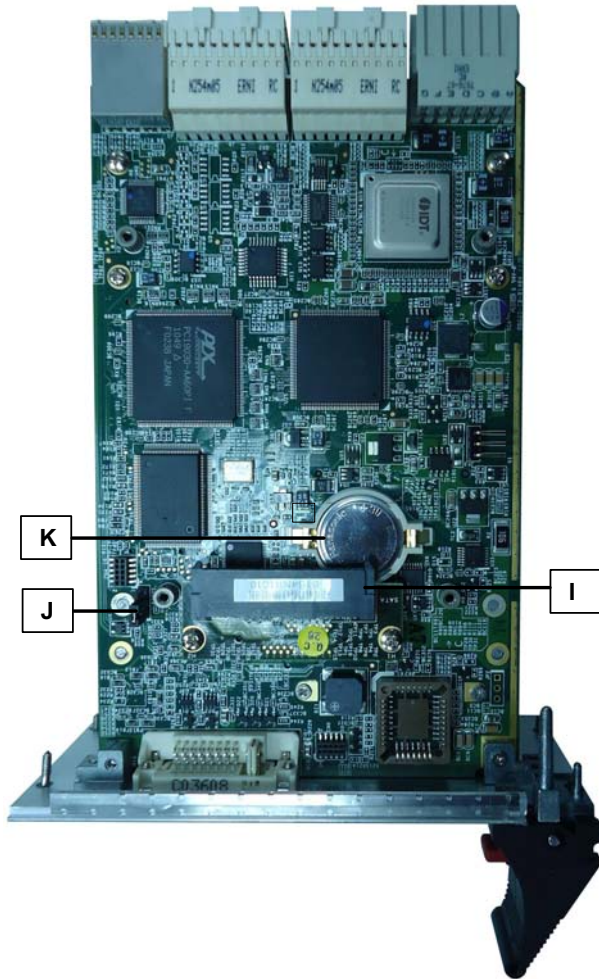


Figure 2-4: PXIe-3975 Onboard Configuration

I	SATA Connector
J	JP1 (CMOS)
K	System Battery



NOTE:

While the PXIe-3975 ships with a 2.5" SATA hard drive pre-installed to the SATA port, no HDD is shown installed, for clarity.

2.3.11 Installation Environment

When preparing to install any equipment described in this manual, please refer to Chapter C: Important Safety Instructions.

Only install equipment in well lit areas on flat, sturdy surfaces with access to basic tools such as flat- and cross-head screwdrivers, preferably with magnetic heads as screws and stand-offs are small and easily misplaced.

Recommended Installation Tools

- Phillips (cross-head) screwdriver

- Flat-head screwdriver

- Anti-static wrist strap

- Anti-static mat

ADLINK PXIe-3975 system controllers are electrostatically sensitive and can be easily damaged by static electricity. The equipment must be handled on a grounded anti-static mat, and operators must wear an anti-static wristband, grounded at the same point as the anti-static mat.

Inspect the carton and packaging for damage. Shipping and handling may cause damage to the contents. Ensure that all contents are undamaged before installing.



CAUTION:

All equipment must be protected from static discharge and physical shock. Never remove any of the socketed parts except at a static-free workstation. Use the anti-static bag shipped with the product to handle the equipment and wear a grounded wrist strap when servicing or installing.

2.3.12 Installing the PXIe-3975

1. Locate the system controller slot (Slot 1)
2. Depress the red locking lever and release the latch
3. Align the controller's top and bottom edges with the card guides, and carefully slide the PXIe-3975 into the chassis, as shown



4. Elevate the latch until the PXIe-3975 is fully seated in the chassis backplane.
5. Fasten the four mounting screws on the faceplate of PXIe-3975, and connect all peripheral devices.

2.3.13 Replacing the Hard Drive

The PXIe-3975 provides a SATA 2.0 port with a pre-installed 2.5" SATA hard drive. Alternatively, a 2.5" solid state disk (SSD) can be used for shock/vibration resistance. This section explains procedures for replacing the HDD.

1. Locate the four screws attaching the hard drive to the bracket on the rear of the PXIe-3975 controller.
2. Remove the screws, as shown.



3. Gently lift and remove the SATA hard drive, as shown, being careful to not bend or break the SATA Board-to-Board connector.



4. To replace the HD with a solid state hard drive or other compatible SATA hard drive, reverse the steps and re-install the PXIe-3975 to the PXI system.

2.3.14 Replacing the Battery Backup

The PXIe-3975 is provided with a 3.0 V “coin cell” lithium battery. To replace the battery, proceed as follows.

1. Turn off the PXIe chassis.
2. Remove the PXIe-3975 embedded controller from the chassis. Observe all anti-static precautions.
3. Locate the four screws attaching the hard drive to the bracket on the rear of the PXIe-3975 controller.
4. Remove the screws, as shown.



5. Gently lift and remove the SATA hard drive, being careful to not bend or break the SATA Board-to-Board connector.
6. The battery backup is exposed.
7. To remove the battery, gently insert a small (approx. 5 mm) flat-head screwdriver under the battery at the negative retaining clip. Gently pry the battery up, again, being careful of the SATA connector. The battery should easily pop out.
8. Place a fresh identical battery (CR2032 or equivalent) in the socket, ensuring that the positive pole (+) is facing upwards. The battery is most easily seated by first being inserted under the positive retaining clip, and then


pushed downward at the negative retaining clip. The battery should easily snap into position.

9. Replace the hard drive.
10. Reinstall the embedded controller into the PXIe chassis and restore power.

2.3.15 Clearing CMOS Jumper (JP1)

In the event of a system malfunction causing the PXIe-3975 to halt or fail to boot, clear the CMOS and restore the controller BIOS to its default settings. To clear the CMOS:

1. Shut down the controller operating system. Turn off the PXIe Chassis.
2. Remove the PXIe-3975 from the chassis. Observe all anti-static precautions.
3. Locate the JP1 jumper on the board. Move the jumper from Normal to Clear (short pin#2 and pin#3), as shown.

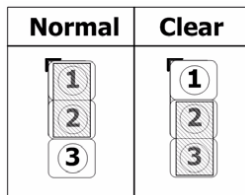

4. Remount the controller into the PXIe chassis.
5. Power on the chassis and immediately depress the Reset button on the faceplate, before any monitor display appears.
6. After the operating system starts, shut down the controller operating system and power down the PXIe chassis.
7. Once again, remove the PXIe-3975 controller from the chassis.
8. Restore jumper JP1 to the Normal position (short pin#1 and pin#2).
9. Remount the controller into the PXIe chassis and restore power.

3 Driver Installation

After installing the operating system, all related drivers must be installed for correct system operation. This section describes drivers needed for Windows operating systems and the procedures to install them. For other OS support, please contact ADLINK.

3.1 Installing Windows Drivers

1. Fully install Windows, which contains most standard I/O device drivers
2. Install the chipset driver
3. Install the graphic driver
4. Install the Ethernet driver
5. Install the GPIB driver
6. Install the management engine driver
7. Install the PXI trigger driver
8. Install the WDT (watchdog timer) driver

3.2 Installing the Chipset Driver

This section describes installation of the chipset driver for PXIe-3975. The chipset driver directs the operating system to configure the Intel® QM57 chipset components to ensure operation of:

- ▶ Core PCI and ISAPNP Services
- ▶ PCIe Support
- ▶ SATA Storage Support
- ▶ USB Support
- ▶ Identification of Intel® Chipset Components in the Device Manager

To install the chipset driver:

1. Close any running applications
2. Insert the ADLINK All-in-One CD (x: denotes the CD-ROM drive)
 - ▷ The WinXP chipset driver is located in the directory x:\Driver Installation\PXI Platform\PXI Controller\PXIe-3975\Chipset\WinXP\INF_Update_Utility
 - ▷ The Win7 chipset driver is located in the directory x:\Driver Installation\PXI Platform\PXI Controller\PXIe-3975\Chipset\Win7\INF_Update_Utility
3. Execute `infinst911autol.exe` and follow on-screen instructions to complete the setup
4. Reboot the system

3.3 Installing the Graphics Driver

To install the graphics driver:

1. Close any running applications
2. Insert the ADLINK All-in-One CD (x: denotes the CD-ROM drive)
 - ▷ The WinXP VGA driver is located in the directory x:\Driver Installation\PXI Platform\PXI controller\PXIe-3975\VGA\WinXP\32Bits
 - ▷ The 32bit Win7 VGA driver is located in the directory x:\Driver Installation\PXI Platform\PXI controller\PXIe-3975\VGA\Win7\32Bits
 - ▷ The 64bit Win7 VGA driver is located in the directory x:\Driver Installation\PXI Platform\PXI controller\PXIe-3975\VGA\Win7\64Bits
3. Execute `setup.exe` and follow on-screen instructions to complete the setup
4. Reboot the system

3.4 Installing the Ethernet Driver

To install the Ethernet driver:

1. Close any running applications.
2. Insert the ADLINK All-in-One CD (x: denotes the CD-ROM drive)
 - ▷ The WinXP Ethernet driver is located in the directory: x:\Driver Installation\PXI Platform\PXI controller\PXIe-3975\LAN\WinXP\32Bits\
 - ▷ The 32bit Win7 Ethernet driver is located in the directory x:\Driver Installation\PXI Platform\PXI controller\PXIe-3975\LAN\Win7\32Bits\
 - ▷ The 64bit Win7 Ethernet driver is located in the directory x:\Driver Installation\PXI Platform\PXI controller\PXIe-3975\LAN\Win7\64Bits\
3. Execute PROWin32.exe or PROWin64x.exe and follow on-screen instructions to complete the setup.
4. Reboot the system

3.5 Installing the GPIB Driver

The PXI-3975 controller features an onboard GPIB controller, providing connectivity between PXI and GPIB instruments. The GPIB driver package also contains function libraries and a utility to interact with GPIB instruments.

To install the GPIB driver:

1. Close any running applications.
2. Insert the ADLINK All-in-One CD (x: denotes the CD-ROM drive); the GPIB driver is located in the directory x:\Driver Installation\PXI Platform\PXI controller\PXIe-3975\GPIB\
3. Execute setup.exe and follow on-screen instructions to complete the setup
4. Reboot the system

3.6 Installing the Management Engine Driver

To install the management engine driver:

1. Close any running applications.
2. Insert the ADLINK All-in-One CD (x: denotes the CD-ROM drive)
 - ▷ The WinXP ME driver is located in the directory x:\ Driver Installation\PXI Platform\PXI controller\PXIe-3975\ME\WinXP\Intel ME
 - ▷ The Win7 ME driver is located in the directory x:\ Driver Installation\PXI Platform\PXI controller\PXIe-3975\ME\Win7\Intel ME
3. Execute MEI_ALLOS_6.1.0.1042_PV.exe or setup.exe and follow on-screen instructions to complete the setup.
4. Reboot the system

3.7 Installing the PXI Trigger Driver

The PXIe-3975 controller provides a trigger I/O on the faceplate to route the trigger signal to and from the PXI trigger bus. Please see Appendix A: PXI Trigger I/O Function Reference for programming information.

To install the PXI trigger driver:

1. Close any running applications.
2. Insert the ADLINK All-in-One CD (x: denotes the CD-ROM drive); the PXI trigger driver is located in the directory x:\ Driver Installation\PXI Platform\PXI controller\PXIe-3975\PXI_Trigger\PXI Trigger 3.23
3. Execute **PXI Trigger IO setup v323.exe** and follow on-screen instructions to complete the setup
4. Reboot the system

3.8 Installing the WDT Driver

The WDT (watchdog timer) resets the system when the operating system or application is halted. The WDT typically starts and periodically resets the timer, and when the timer is expired, the system

resets. Please refer to Appendix B: Watchdog Timer for programming information.

To install the WDT driver:

1. Close any running applications.
2. Insert the ADLINK All-in-One CD (x: denotes the CD-ROM drive); the WDT driver is located in the directory x:\Driver Installation\PXI Platform\PXI controller\PXIe-3975\PXI_WDT\ PXI WDT 3.23
3. Execute **PXI WDT Setup v323.exe** and follow on-screen instructions to complete the setup
4. Reboot the system

This page intentionally left blank.

4 BIOS Setup

The Basic Input/Output System (BIOS) provides a basic level of communication between the processor and peripherals. In addition, the BIOS also contains code for various advanced features applied to the PXIe-3975 controller. The BIOS setup program includes menus for configuring settings and enabling PXIe-3975 controller features.



Changing BIOS settings may result in incorrect operation and possibly an inability to boot. If this occurs, follow the instructions in Section 2.3.15: Clearing CMOS Jumper (JP1) to clear CMOS and restore default settings. In general, do not change a BIOS setting unless you are absolutely certain of the consequences.

4.1 Starting the BIOS

1. Power on or reboot the PXIe-3975 controller.
2. Press the <Delete> key when the controller beeps. This should be concurrent with the main startup screen. The BIOS setup program loads after a short delay.
3. The Main menu is displayed when you first enter the BIOS setup program.



In most cases, the < Delete > key is used to invoke the setup screen. There are several cases that use other keys, such as < F1 >, < F2 >, and so on.

The main BIOS setup menu is the first screen that you can navigate. Each main BIOS setup menu option is described in this user's guide.

The Main BIOS setup menu screen has two main frames. The left frame displays all the options that can be configured. "Grayed" options cannot be configured, "Blue" options can be.

The right frame displays the key legend. Above the key legend is an area reserved for a text message. When an option is selected in the left frame, it is highlighted in white. Often a text message will accompany it.

Navigation

The BIOS setup/utility uses a key-based navigation system called hot keys. Most BIOS setup utility hot keys can be used at any time during setup navigation, as follows.

Key(s)	Function
Right Arrow, Left Arrow	Moves between different setup menus
Up Arrow, Down Arrow	Moves between options within a setup menu
<Enter>	Opens a submenu or displays all available settings for a highlighted configuration option
<Esc>	Returns to the previous menu and shortcuts to the Exit menu from top-level menus
<+> and <->	Cycles between all available settings
<Tab>	Selects time and date fields
<F1>	Opens the general help window for the BIOS
<F2>	Loads previous values into the BIOS
<F3>	Restores default values into the BIOS
<F4>	Saves the current configuration and exits BIOS setup
<F9>	Loads the optimal default BIOS settings

Table 4-1: BIOS Hot Key Functions

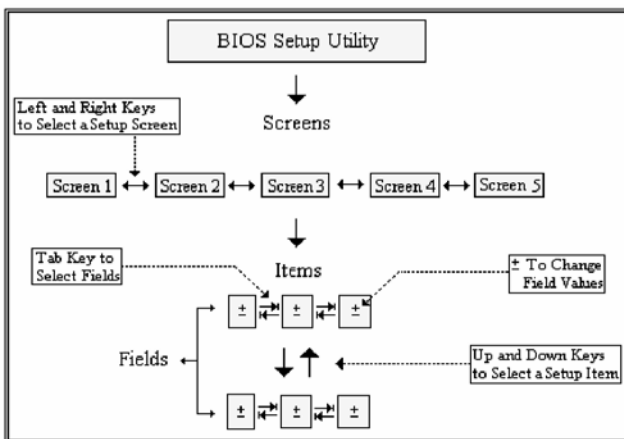


Figure 4-1: BIOS Setup Navigation



NOTE:

A hot key legend is located in the right frame on most setup screens.

The < F8 > key on your keyboard is the Fail-Safe key. It is not displayed on the key legend by default. To set the Fail-Safe settings of the BIOS, press the < F8 > key on your keyboard. It is located on the upper row of a standard 101 keyboard. The Fail-Safe settings allow the motherboard to boot up with the least amount of options set. This can lessen the probability of conflicting settings.

4.2 Main Setup

When you first enter the Setup Utility, you will enter the Main setup screen. You can always return to the Main setup screen by selecting the Main tab.

The Main Setup menu provides basic controller information and allows the system time and date to be set, as follows.

Item	Detail
BIOS Information	Includes BIOS version and the date on which the BIOS was built
Memory Information	Shows memory size, type and speed as detected by the BIOS
ME Information	Indicates the version of the management engine
Board Information	Such as hardware revisions and serial number
System Date & Time	
System Date	Changes system date, date must be entered in MM/DD/YY format
System Time	Changes system time, time must be entered in HH:MM:SS format.
Access Level	Displays current access level, default is Administrator

Table 4-2: BIOS Main Setup Menu

4.3 Advanced Setup

Select the Advanced tab from the setup screen to enter the Advanced BIOS Setup screen. You can select any of the items in the left frame of the screen, such as SuperIO Configuration, to go to the submenu for that item. Display an Advanced BIOS Setup option by highlighting it using the < Arrow > keys. The Advanced BIOS Setup options are as follows.

Item	Detail
Legacy OpROM Support	
Launch PXE OpROM	Enables or disables legacy network device (default is Disabled)
Launch Storage OpROM	Enables/disables the option for Legacy Mass Storage Devices with option ROM (default is Enabled)
Clock Spread Spectrum	Enables/disables spread spectrum for clock
WatchDog Timer	Shows whether the WatchDog Timer is enabled (default is Disabled)
PCI Subsystem Settings	Allows viewing and configuration of PCI and PCIe Subsystem settings
ACPI Settings	Enables/disables AXCPi auto configuration (default is Disabled)
CPU Configuration	Displays processor type, speed, system bus speed, etc.
PCI Express Ports Configuration	Enables/disables PCI Express ports and configures bus and resource padding
SATA Configuration	Sets SATA mode and enables/disables SATA controller
Intel Video Configuration	Sets Intel Video function
USB Configuration	Provides USB support and lists the devices attached to the USB port (keyboard, mouse, and one hub)
H/W Monitor	Displays voltages on the backplane connector (+3.3 V, +5.0 V, +12 V, 5 VSB, and Vbat)
Thermal Configuration	Sets platform thermal configuration and Intelligent Power Sharing
Temperature Monitor	Shows the current operating temperature inside the controller.

Table 4-3: BIOS Advanced Setup Menu

4.4 Chipset Configuration

Item	Detail
North Bridge Configuration	Provides memory and PCIe compliance information
South Bridge Configuration	Provides SMBus, GbE Controller, Wake on LAN, Audio, USB Configuration, and PCIe Port Configuration information

Table 4-4: BIOS Chipset Configuration Menu

4.5 Boot Setup

Item	Detail
Boot Configuration	
Quiet Boot	When disabled, allows POST messages to be viewed (default is Enabled).
Bootup NumLock State	Selects default keyboard number lock setting
CSM16 Module Version	Displays the version of the CSM16 module, e.g. 07.60
Gate A20 Active	Allows GA20 to be disabled by BIOS
Option ROM Messages	Sets display mode for Option ROM
Interrupt 19 Capture	Allows Option ROMs to trap Int 19
Boot Option Priorities	
Boot Option #1	Allows selection of the primary boot source (default is the SATA HDD)
Boot Option #2	Allows selection of the secondary boot source (default is Disabled)
Network Device BBS Priorities	Sets the order of legacy devices in this group
Hard Drive BBS Priorities	Sets the order of legacy devices in this group

Table 4-5: BIOS Boot Setup Menu

4.6 Security Setup

The system can be configured to require all users to enter a password (either Administrator or User) every time the system boots or when Setup is executed. Administrators and User passwords activate different levels of security.

If passwords are used, the system prompts for a three- to twenty-character password. Typed passwords are not displayed.

Item	Details
Password Description	
Administrator Password	Sets an administrative level password for the BIOS.
User Password	Sets user level passwords for the BIOS.
HDD Security Configuration	
HDD0: INTEL SSDSA2	sets HDD password

Table 4-6: BIOS Security Setup Menu



Passwords are not recoverable. Please ensure that all passwords are recorded elsewhere. If your passwords are lost, NVRAM must be erased and reconfigured.

4.7 Save & Exit Setup

The following options for saving and exiting can be chosen in this menu.

Save Changes and Exit

- ▶ Discard Changes and Exit
- ▶ Save Changes and Exit
- ▶ Discard Changes and Reset
- ▶ Save Changes and Reset

Save Option

- ▶ Save Changes
- ▶ Discard Changes
- ▶ Restore Defaults
- ▶ Save as User Defaults
- ▶ Restore User Defaults



NOTE:

The "Restore the default values for all setup options" selection does not restore the original boot priority sequence. You must use the Boot Setup Menu (see Section 4.5: Boot Setup) to manually restore the boot priority sequence.

This page intentionally left blank.

Appendix A - PXI Trigger I/O Function Reference

This appendix describes use of the PXI trigger I/O function library for the PXIe-3975 controller, to program routing of trigger signals between the trigger I/O SMB connector on the faceplate and the PXI trigger bus on the backplane.

A.1 Data Types

The PXIe-3975 library uses these data types in `pxitrigio.h` in the directory `X:\ADLINK\PXI Trigger IO\Include`. It is recommended that you use these data types in your application programs. The table shows the data type names, ranges, and corresponding data types in C/C++, Visual Basic, and Delphi for reference.

Type	Description	Range	Type		
			C/C++ (for 32-bit compiler)	Visual Basic	Pascal (Delphi)
U8	8-bit ASCII character	0 to 255	unsigned char	Byte	Byte
I16	16-bit signed integer	-32768 to 32767	short	Integer	SmallInt
U16	16-bit unsigned integer	0 to 65535	unsigned short	Not supported by BASIC, use the signed integer (I16) instead	Word
I32	32-bit signed integer	-2147483648 to 2147483647	long	Long	LongInt
U32	32-bit unsigned integer	0 to 4294967295	unsigned long	Not supported by BASIC, use the signed long integer (I32) instead	Cardinal

Type	Description	Range	Type		
			C/C++ (for 32-bit compiler)	Visual Basic	Pascal (Delphi)
F32	32-bit single-precision floating-point	-3.402823E38 to 3.402823E38	float	Single	Single
F64	64-bit double-precision floating-point	1.7976831348 62315E308 to 1.7976831348 62315E309	double	Double	Double

A.2 Function Library

This section provides detailed definitions of the functions available in the PXIe-3975 function library. Each function includes a description, list of supported cards, syntax, parameter list and Return Code information.

A.2.1 TRIG_Init

Description

Initializes trigger I/O function of PXIe-3975 controller. TRIG_Init must be called before the invocation of any other trigger I/O function.

Supported Controllers

PXIe-3975, PXI-3950, PXI-3920, PXI-3910, PXI-3800

Syntax

C/C++

```
I16 TRIG_Init()
```

Visual Basic

```
TRIG_Init As Integer
```

Parameter

None

Return Code

```

ERR_NoError
ERR_BoardBusy
ERR_OpenDriverFail
ERR_GetGPIOAddress

```

A.2.2 TRIG_Close**Description**

Closes trigger I/O function of PXIe-3975 controller, releasing resources allocated for the trigger I/O function. Users must invoke TRIG_Close before exiting the application.

Supported Controllers

PXIe-3975, PXI-3950, PXI-3920, PXI-3910, PXI-3800

Syntax

C/C++

```
I16 TRIG_Close()
```

Visual Basic

```
TRIG_Close() As Integer
```

Parameter

None

Return Code

```

ERR_NoError
ERR_BoardNoInit

```

A.2.3 TRIG_SetSoftTrg**Description**

Generates a TTL trigger signal to the trigger I/O SMB connector on the faceplate or the PXI trigger bus on the backplane by software command

Supported Controllers

PXIe-3975, PXI-3950, PXI-3920, PXI-3910, PXI-3800

Syntax

C/C++

```
I16 TRIG_SetSoftTrg(U8 Status)
```

Visual Basic

```
TRIG_SetSoftTrg (ByVal status As Byte) As  
Integer
```

Parameters

Status

Logic level of trigger signal.

Available value description:

0: Logic low

1: Logic high

Return Code

```
ERR_NoError  
ERR_BoardNoInit
```

A.2.4 TRIG_Trigger_Route

Description

Routes the trigger signal between the trigger I/O SMB connector on the faceplate and the PXI trigger bus on the backplane. This function also allows routing of the software-generated trigger signal to SMB connector or trigger bus.

Supported Controllers

PXIe-3975, PXI-3950, PXI-3920, PXI-3910, PXI-3800

Syntax

C/C++

```
I16 TRIG_Trigger_Route (U32 source, U32 dest,
U32 halfway)
```

Visual Basic

```
TRIG_Trigger_Route (ByVal source As Long,
ByVal dest As Long, ByVal halfway As Long) As
Integer
```

Parameters

source

Source of trigger routing. It can be one of the following values.

Available value	Description
PXI_TRIG_VAL_SMB	SMB connector on the faceplate
PXI_TRIG_VAL_SOFT	Software-generated trigger signal
PXI_TRIG_VAL_TRIG0	PXI trigger bus #0
PXI_TRIG_VAL_TRIG1	PXI trigger bus #1
PXI_TRIG_VAL_TRIG2	PXI trigger bus #2
PXI_TRIG_VAL_TRIG3	PXI trigger bus #3
PXI_TRIG_VAL_TRIG4	PXI trigger bus #4
PXI_TRIG_VAL_TRIG5	PXI trigger bus #5
PXI_TRIG_VAL_TRIG6	PXI trigger bus #6
PXI_TRIG_VAL_TRIG7	PXI trigger bus #7

dest

Destination of trigger routing. It can be one of the following values.

Available value	Description
PXI_TRIG_VAL_SMB	SMB connector on the faceplate
PXI_TRIG_VAL_TRIG0	PXI trigger bus #0
PXI_TRIG_VAL_TRIG1	PXI trigger bus #1
PXI_TRIG_VAL_TRIG2	PXI trigger bus #2
PXI_TRIG_VAL_TRIG3	PXI trigger bus #3
PXI_TRIG_VAL_TRIG4	PXI trigger bus #4

Available value	Description
PXI_TRIG_VAL_TRIG5	PXI trigger bus #5
PXI_TRIG_VAL_TRIG6	PXI trigger bus #6
PXI_TRIG_VAL_TRIG7	PXI trigger bus #7

halfway

Halfway point of trigger routing. This parameter is used only to route the software-generated trigger signal to the SMB connector on the faceplate. In this case, the halfway should be set as one of the trigger bus lines, otherwise as PXI_TRIG_VAL_NONE.

Available value	Description
PXI_TRIG_VAL_NONE	No halfway point
PXI_TRIG_VAL_TRIG0	PXI trigger bus #0
PXI_TRIG_VAL_TRIG1	PXI trigger bus #1
PXI_TRIG_VAL_TRIG2	PXI trigger bus #2
PXI_TRIG_VAL_TRIG3	PXI trigger bus #3
PXI_TRIG_VAL_TRIG4	PXI trigger bus #4
PXI_TRIG_VAL_TRIG5	PXI trigger bus #5
PXI_TRIG_VAL_TRIG6	PXI trigger bus #6
PXI_TRIG_VAL_TRIG7	PXI trigger bus #7

Return Code

```
ERR_NoError
ERR_BoardNoInit
ERR_Set_Path
```

A.2.5 TRIG_Trigger_Clear

Description

Clears the trigger routing setting

Supported Controllers

PXIe-3975, PXI-3950, PXI-3920, PXI-3910, PXI-3800

Syntax

C/C++

```
I16 TRIG_Trigger_Clear()
```

Visual Basic

```
TRIG_Trigger_Clear() As Integer
```

Parameters

None

Return Code

```
ERR_NoError
ERR_BoardNoInit
ERR_Trigger_Clr
```

A.2.6 TRIG_GetSoftTrg**Description**

Acquires the current software trigger state, with default state after system boot of Logic Low

Supported Controllers

PXIe-3975, PXI-3950, PXI-3920, PXI-3910, PXI-3800

Syntax

C/C++

```
I16 TRIG_GetSoftTrg(U8 *Status)
```

Visual Basic

```
TRIG_GetSoftTrg (status As Byte) As Integer
```

Parameters*Status*

Returns the logic level of software trigger signal

Returned value:

0: Logic low

1: Logic high

Return Code

```
ERR_NoError
ERR_BoardNoInit
ERR_Query_Status
```

A.2.7 TRIG_Trigger_Route_Query

Description

Acquires the current trigger signal routing path

Supported Controllers

PXIe-3975, PXI-3950, PXI-3920, PXI-3910, PXI-3800

Syntax

C/C++

```
I16 TRIG_Trigger_Route_Query (U32* source,
U32* dest, U32* halfway)
```

Visual Basic

```
TRIG_Trigger_Route_Query (source As Long, dest
As Long, halfway As Long) As Integer
```

Parameters

source

Returns to the current source of trigger routing, with possible values including:

Available Definition	Defined Value
PXI_TRIG_VAL_NONE	0
PXI_TRIG_VAL_SMB	2
PXI_TRIG_VAL_SOFT	3
PXI_TRIG_VAL_TRIG0	111
PXI_TRIG_VAL_TRIG1	112
PXI_TRIG_VAL_TRIG2	113
PXI_TRIG_VAL_TRIG3	114
PXI_TRIG_VAL_TRIG4	115

Available Definition	Defined Value
PXI_TRIG_VAL_TRIG5	116
PXI_TRIG_VAL_TRIG6	117
PXI_TRIG_VAL_TRIG7	118

dest

Returns to the current destination of trigger routing, with possible values including:

Available Definition	Defined Value
PXI_TRIG_VAL_NONE	0
PXI_TRIG_VAL_SMB	2
PXI_TRIG_VAL_TRIG0	111
PXI_TRIG_VAL_TRIG1	112
PXI_TRIG_VAL_TRIG2	113
PXI_TRIG_VAL_TRIG3	114
PXI_TRIG_VAL_TRIG4	115
PXI_TRIG_VAL_TRIG5	116
PXI_TRIG_VAL_TRIG6	117
PXI_TRIG_VAL_TRIG7	118

halfway

Returns to the current halfway point of trigger routing, with possible values including:

Available Value	Description
PXI_TRIG_VAL_NONE	0
PXI_TRIG_VAL_TRIG0	111
PXI_TRIG_VAL_TRIG1	112
PXI_TRIG_VAL_TRIG2	113
PXI_TRIG_VAL_TRIG3	114
PXI_TRIG_VAL_TRIG4	115
PXI_TRIG_VAL_TRIG5	116
PXI_TRIG_VAL_TRIG6	117
PXI_TRIG_VAL_TRIG7	118

Return Code

ERR_NoError
ERR_BoardNoInit
ERR_Query_Status

A.2.8 TRIG_GetDriverRevision

Description

Acquires the PXI Trigger software driver version; format of the version number is major.minor1.minor2

Supported Controllers

PXIe-3975, PXI-3950, PXI-3920, PXI-3910, PXI-3800

Syntax

C/C++

```
I16 TRIG_GetDriverRevision(unsigned short  
*major, unsigned short *minor1, unsigned short  
*minor2)
```

Visual Basic

```
TRIG_GetDriverRevision (major As Integer,  
minor1 As Integer, minor2 As Integer) As Integer
```

Parameters

major

Returns the major version number of the pxi trigger software driver

minor1

Returns the first minor version number of the pxi trigger software driver

minor2

Returns the second minor version number of the pxi trigger software driver

Return Code

```
ERR_NoError
ERR_Query_Revision
```

A.2.9 CONTROLLER_GetHwRevision**Description**

Acquires the Controller Hardware version and revision number and the version of the trigger module CPLD

Supported Controllers

PXIe-3975

Syntax

C/C++

```
I16 CONTROLLER_GetHwRevision( U8* cpldMajor,
U8* cpldMinor, char* hwRevBuf, U32 hwRevBuf-
Size)
```

Visual Basic

```
CONTROLLER_GetHwRevision (cpldMajor As Byte,
cpldMinor As Byte, hwRevBuf As String,
hwRevBufSize As Long) As Integer
```

Parameters

cpldMajor

Returns the major version number of the pxi trigger module CPLD

cpldMinor

Returns the first minor version number of the pxi trigger module CPLD

hwRevBuf

Character buffer of size declared by the caller of size *hwRevBufSize*, returns a null-terminated string representation of the hardware revision

hwRevBufSize

Size of the hwRevBuf, in bytes

Return Code

ERR_NoError

ERR_InvalidParameterValue

A.2.10 CONTROLLER_GetManufacturer

Description

Ascertains the hardware manufacturer

Supported Controllers

PXle-3975

Syntax

C/C++

```
I16 CONTROLLER_GetManufacturer( char* Buf, U32  
Bufsize )
```

Visual Basic

```
CONTROLLER_GetManufacturer (Buf As String,  
Bufsize As Long) As Integer
```

Parameters

Buf

Character buffer of size declared by the caller of size Buf-Size, returns a null-terminated string representation of the hardware manufacturer

BufSize

Size of the Buf, in bytes

Return Code

ERR_NoError

ERR_InvalidParameterValue

A.2.11 CONTROLLER_GetModel

Description

Acquires the hardware model name

Supported Controllers

PXIe-3975

Syntax

C/C++

```
I16 CONTROLLER_GetModel( char* Buf, U32 Buf-
size )
```

Visual Basic

```
CONTROLLER_GetModel (Buf As String, Bufsize As
Long) As Integer
```

Parameters

Buf

Character buffer of size declared by the caller of size Buf-Size, returns a null-terminated string representation of the hardware model name

BufSize

Size of the Buf, in bytes

Return Code

```
ERR_NoError
ERR_InvalidParameterValue
```

A.2.12 CONTROLLER_GetSerialNumber

Description

Acquires the serial number of the hardware

Supported Controllers

PXIe-3975

Syntax

C/C++

```
I16 CONTROLLER_GetSerialNumber( char* Buf, U32  
Bufsize )
```

Visual Basic

```
CONTROLLER_GetSerialNumber (Buf As String,  
Bufsize As Long) As Integer
```

Parameters

Buf

Character buffer of size declared by the caller of size Buf-Size, returns a null-terminated string representation of the serial number of the hardware

BufSize

Size of the Buf, in bytes

Return Code

```
ERR_NoError  
ERR_InvalidParameterValue
```


Appendix B - Watchdog Timer

This appendix describes use of the watchdog timer (WDT) function library for the PXIe-3975 controller. The watchdog timer is a hardware mechanism resetting the system when the operating system or application halts. After starting, periodic reset of the watchdog timer in the application before expiry is required. Once the watchdog timer expires, a hardware-generated signal is sent to reset the system.

B.1 WDT Function Library

B.1.1 InitWDT

Description

Initializes watchdog timer function. InitWDT must be called before the invocation of any other WDT function.

Supported Controllers

PXIe-3975, PXI-3950, PXI-3920, PXI-3910

Syntax

C/C++

```
BOOL InitWDT()
```

Visual Basic

```
InitWDT() As Boolean
```

Parameter

None

Return Code

True	If watchdog timer is successfully initialized
False	If watchdog timer fails to initialize

B.1.2 SetWDT

Description

Sets the timeout value for watchdog timer. The timeout value uses seconds as a unit. ResetWDT or StopWDT should be called prior to expiration of the watchdog timer, or the system will be reset.

Supported Controllers

PXIe-3975, PXI-3950, PXI-3920, PXI-3910

Syntax

C/C++

```
BOOL SetWDT(unsigned long second)
```

Visual Basic

```
InitWDT(ByVal second as Long) As Boolean
```

Parameter

second

Specifies the timeout value of the watchdog timer.

Value Description

Value	Description
0 to 255	If the value of the <i>second</i> parameter is between 0 and 255, the resolution of the watchdog timer is 1 second
Over 255	If the value of the <i>second</i> parameter exceeds 255, the resolution of the watchdog timer is 1 minute, that is, if a value of 400 is given, the actual timeout value is $400/60 + 1 = 7$ minutes

Return Code

True	If timeout value of watchdog timer is successfully set
False	If timeout value of watchdog timer fails to be set

B.1.3 StartWDT

Description

Starts watchdog timer function. Once invoked, the watchdog timer countdown starts, and ResetWDT or StopWDT should be called before the expiration of the watchdog timer, or the system will be reset.

Supported Controllers

PXIe-3975, PXI-3950, PXI-3920, PXI-3910

Syntax

C/C++

```
BOOL StartWDT()
```

Visual Basic

```
StartWDT() As Boolean
```

Parameter

None

Return Code

True	If watchdog timer starts successfully
False	If watchdog timer fails to start

B.1.4 ResetWDT

Description

Resets the watchdog timer to the initial timeout value specified in SetWDT function, and ResetWDT or StopWDT should be called before the expiration of the watchdog timer, or the system will be reset.

Supported Controllers

PXIe-3975, PXI-3950, PXI-3920, PXI-3910

Syntax

C/C++

```
BOOL ResetWDT()
```

Visual Basic

```
ResetWDT() As Boolean
```

Parameter

None

Return Code

True	If watchdog timer resets successfully
False	If watchdog timer fails to reset

B.1.5 StopWDT

Description

Stops the watchdog timer.

Supported Controllers

PXIe-3975, PXI-3950, PXI-3920, PXI-3910

Syntax

C/C++

```
BOOL StopWDT()
```

Visual Basic

```
StopWDT() As Boolean
```

Parameter

None

Return Code

True	If watchdog timer stops successfully
False	If watchdog timer fails to stop

Important Safety Instructions

For user safety, please read and follow all **instructions**, **WARNINGS**, **CAUTIONS**, and **NOTES** marked in this manual and on the associated equipment before handling/operating the equipment.

- ▶ Read these safety instructions carefully.
- ▶ Keep this user's manual for future reference.
- ▶ Read the specifications section of this manual for detailed information on the operating environment of this equipment.
- ▶ When installing/mounting or uninstalling/removing equipment:
 - ▷ Turn off power and unplug any power cords/cables.
- ▶ To avoid electrical shock and/or damage to equipment:
 - ▷ Keep equipment away from water or liquid sources;
 - ▷ Keep equipment away from high heat or high humidity;
 - ▷ Keep equipment properly ventilated (do not block or cover ventilation openings);
 - ▷ Make sure to use recommended voltage and power source settings;
 - ▷ Always install and operate equipment near an easily accessible electrical socket-outlet;
 - ▷ Secure the power cord (do not place any object on/over the power cord);
 - ▷ Only install/attach and operate equipment on stable surfaces and/or recommended mountings; and,
 - ▷ If the equipment will not be used for long periods of time, turn off and unplug the equipment from its power source.

- ▶ Never attempt to fix the equipment. Equipment should only be serviced by qualified personnel.
 - ▶ A Lithium-type battery may be provided for uninterrupted, backup or emergency power.
-



Risk of explosion if battery is replaced with an incorrect type; please dispose of used batteries appropriately.

- ▶ Equipment must be serviced by authorized technicians when:
 - ▷ The power cord or plug is damaged;
 - ▷ Liquid has penetrated the equipment;
 - ▷ It has been exposed to high humidity/moisture;
 - ▷ It is not functioning or does not function according to the user's manual;
 - ▷ It has been dropped and/or damaged; and/or,
 - ▷ It has an obvious sign of breakage.

Getting Service

Contact us should you require any service or assistance.

ADLINK Technology, Inc.

Address: 9F, No.166 Jian Yi Road, Zhonghe District
New Taipei City 235, Taiwan
新北市中和區建一路 166 號 9 樓

Tel: +886-2-8226-5877
Fax: +886-2-8226-5717
Email: service@adlinktech.com

Ampro ADLINK Technology, Inc.

Address: 5215 Hellyer Avenue, #110, San Jose, CA 95138, USA
Tel: +1-408-360-0200
Toll Free: +1-800-966-5200 (USA only)
Fax: +1-408-360-0222
Email: info@adlinktech.com

ADLINK Technology (China) Co., Ltd.

Address: 上海市浦东新区张江高科技园区芳春路 300 号 (201203)
300 Fang Chun Rd., Zhangjiang Hi-Tech Park,
Pudong New Area, Shanghai, 201203 China

Tel: +86-21-5132-8988
Fax: +86-21-5132-3588
Email: market@adlinktech.com

ADLINK Technology Beijing

Address: 北京市海淀区上地东路 1 号盈创动力大厦 E 座 801 室(100085)
Rm. 801, Power Creative E, No. 1, B/D
Shang Di East Rd., Beijing, 100085 China

Tel: +86-10-5885-8666
Fax: +86-10-5885-8625
Email: market@adlinktech.com

ADLINK Technology Shenzhen

Address: 深圳市南山区科技园南区高新南七道 数字技术园
A1 栋 2 楼 C 区 (518057)
2F, C Block, Bldg. A1, Cyber-Tech Zone, Gao Xin Ave. Sec. 7,
High-Tech Industrial Park S., Shenzhen, 518054 China

Tel: +86-755-2643-4858
Fax: +86-755-2664-6353
Email: market@adlinktech.com

ADLINK Technology, Inc. (French Liaison Office)

Address: 15 rue Emile Baudot, 91300 Massy CEDEX, France
Tel: +33 (0) 1 60 12 35 66
Fax: +33 (0) 1 60 12 35 66
Email: france@adlinktech.com

ADLINK Technology Japan Corporation

Address: 〒101-0045 東京都千代田区神田鍛冶町 3-7-4
神田 374 ビル 4F
KANDA374 Bldg. 4F, 3-7-4 Kanda Kajicho,
Chiyoda-ku, Tokyo 101-0045, Japan
Tel: +81-3-4455-3722
Fax: +81-3-5209-6013
Email: japan@adlinktech.com

ADLINK Technology, Inc. (Korean Liaison Office)

Address: 서울시 서초구 서초동 1675-12 모인터빌딩 8 층
8F Mointer B/D, 1675-12, Seocho-Dong, Seocho-Gu,
Seoul 137-070, Korea
Tel: +82-2-2057-0565
Fax: +82-2-2057-0563
Email: korea@adlinktech.com

ADLINK Technology Singapore Pte. Ltd.

Address: 84 Genting Lane #07-02A, Cityneon Design Centre,
Singapore 349584
Tel: +65-6844-2261
Fax: +65-6844-2263
Email: singapore@adlinktech.com

ADLINK Technology Singapore Pte. Ltd. (Indian Liaison Office)

Address: 1st Floor, #50-56 (Between 16th/17th Cross) Margosa Plaza,
Margosa Main Road, Malleswaram, Bangalore-560055, India
Tel: +91-80-65605817, +91-80-42246107
Fax: +91-80-23464606
Email: india@adlinktech.com

ADLINK Technology, Inc. (Israeli Liaison Office)

Address: 6 Hasadna St., Kfar Saba 44424, Israel
Tel: +972-9-7446541
Fax: +972-9-7446542
Email: israel@adlinktech.com