



ADLINK
TECHNOLOGY INC.

Matrix MXE-5000 Series

MXE-5104M

User's Manual

Manual Revision: 2.00

Revision Date: April 1, 2011

Part Number: 50-1Z075-2000



Recycled Paper

Advance Technologies; Automate the World.

Revision History

Revision	Release Date	Description of Change(s)
2.00	2011/04/01	Initial release

Table of Contents

Revision History	ii
List of Tables	v
1 Introduction	1
1.1 Overview.....	1
1.2 Features.....	2
1.3 Specifications.....	3
1.4 Unpacking Checklist	4
2 System Description	5
2.1 Mechanical Views	5
2.2 Front Panel I/O Connectors	6
2.2.1 Power Button	7
2.2.2 Reset Button	7
2.2.3 LED Indicators	7
2.2.4 USB 2.0 Connectors	8
2.2.5 DVI connector.....	8
2.3 Rear Panel I/O Connectors.....	8
2.3.1 DC Power Supply Connectors	9
2.3.2 COM Ports	10
2.3.3 Gigabit Ethernet.....	10
2.4 Internal I/O Connectors.....	13
2.4.1 SATA Connectors	13
2.4.2 Clear CMOS Jumper	14
2.4.3 Jumper Setting for COM3 and COM4.....	15
3 Getting Started	17
3.1 Replacing a Hard Disk Drive.....	17
3.2 Installing Memory.....	23
3.3 Connecting DC power.....	25

3.4	Mounting MXE-5104M using wall-mount kit.....	26
3.5	Cooling configuration	28
4	BIOS Settings	29
4.1	Main	29
4.1.1	System Time/System Date	29
4.2	Advanced	29
4.2.1	CPU Configuration	29
4.2.2	SATA Configuration	30
4.2.3	SuperIO Configuration	30
4.2.4	Hardware Health Configuration	30
4.2.5	ACPI Configuration	30
4.2.6	USB Configuration	30
4.3	Chipset.....	31
4.3.1	Northbridge Configuration.....	31
4.3.2	Southbridge Configuration	32
4.4	Security	33
4.5	Boot	34
4.5.1	Boot Settings Configuration	34
4.5.2	Boot Device Priority	35
4.6	Exit.....	36
5	Driver Installation.....	37
5.1	Install the Chipset Driver.....	37
5.2	Install the Graphics Driver.....	38
5.3	Install the Ethernet Driver	40
5.4	Install the WDT Driver.....	40
6	Appendix.....	41
A.1	Watchdog Timer (WDT) Function Reference.....	41

List of Tables

Table 1-1: MXE-5104M Series Specifications	3
Table 2-1: LED Indicators	8
Table 2-2: D-sub 9P signal name of COM1 ~ COM4 ports	10
Table 2-3: Active/Link LED	12
Table 2-4: Speed LED	12
Table 2-5: Clear CMOS Jumper	14
Table 4-1: Legacy USB support.....	31
Table 4-2: DVMT Mode Select.....	32
Table 4-3: Restore On Power Loss.....	32
Table 4-4: User Access Level	33
Table 4-5: Password Check.....	34

This page intentionally left blank.

Preface

Copyright 2011 ADLINK TECHNOLOGY INC.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

Disclaimer

The information in this document is subject to change without prior notice in order to improve reliability, design, and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

Trademarks

Borland® C/C++ and Delphi® are registered trademarks of the Borland Software Corporation. Intel® is a registered trademark of Intel Corporation. LabVIEW™ is a trademark of National Instruments Corporation. Linux® and the Linux® Logo are registered trademarks of Linus Torvalds. MATLAB® and the MATLAB Logo are registered trademarks of The MathWorks, Inc. Microsoft®, MS-DOS®, Windows® 95, Windows® 98, Windows NT®, Windows® 2000, Windows® 2003 Server®, Windows® XP, Windows Vista®, ActiveX®, Visual Studio®, Visual Basic®, Visual C#®, and Visual C++® are registered trademarks of Microsoft Corporation. PCI™, CompactPCI®, and PCI Express®, are registered trademarks of the Peripheral Component Interconnect Special Interest Group (PCI-SIG). PXI™ is a trademark of the PXI systems Alliance. VEE™ is a trademark of Agilent.

Product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective companies.

Getting Service

Contact us should you require any service or assistance.

ADLINK Technology, Inc.

Address: 9F, No.166 Jian Yi Road, Zhonghe District
New Taipei City 235, Taiwan
新北市中和區建一路 166 號 9 樓

Tel: +886-2-8226-5877
Fax: +886-2-8226-5717
Email: service@adlinktech.com

Ampro ADLINK Technology, Inc.

Address: 5215 Hellyer Avenue, #110, San Jose, CA 95138, USA

Tel: +1-408-360-0200
Toll Free: +1-800-966-5200 (USA only)
Fax: +1-408-360-0222
Email: info@adlinktech.com

ADLINK Technology (China) Co., Ltd.

Address: 上海市浦东新区张江高科技园区芳春路 300 号 (201203)
300 Fang Chun Rd., Zhangjiang Hi-Tech Park,
Pudong New Area, Shanghai, 201203 China

Tel: +86-21-5132-8988
Fax: +86-21-5132-3588
Email: market@adlinktech.com

ADLINK Technology Beijing

Address: 北京市海淀区上地东路 1 号盈创动力大厦 E 座 801 室(100085)
Rm. 801, Power Creative E, No. 1, B/D
Shang Di East Rd., Beijing, 100085 China

Tel: +86-10-5885-8666
Fax: +86-10-5885-8625
Email: market@adlinktech.com

ADLINK Technology Shenzhen

Address: 深圳市南山区科技园南区高新南七道 数字技术园
A1 栋 2 楼 C 区 (518057)
2F, C Block, Bldg. A1, Cyber-Tech Zone, Gao Xin Ave. Sec. 7,
High-Tech Industrial Park S., Shenzhen, 518054 China

Tel: +86-755-2643-4858
Fax: +86-755-2664-6353
Email: market@adlinktech.com

ADLINK Technology (Europe) GmbH

Address: Nord Carree 3, 40477 Duesseldorf, Germany
Tel: +49-211-495-5552
Fax: +49-211-495-5557
Email: emea@adlinktech.com

ADLINK Technology, Inc. (French Liaison Office)

Address: 15 rue Emile Baudot, 91300 Massy CEDEX, France
Tel: +33 (0) 1 60 12 35 66
Fax: +33 (0) 1 60 12 35 66
Email: france@adlinktech.com

ADLINK Technology Japan Corporation

Address: 〒101-0045 東京都千代田区神田鍛冶町 3-7-4
神田 374 ビル 4F
KANDA374 Bldg. 4F, 3-7-4 Kanda Kajicho,
Chiyoda-ku, Tokyo 101-0045, Japan
Tel: +81-3-4455-3722
Fax: +81-3-5209-6013
Email: japan@adlinktech.com

ADLINK Technology, Inc. (Korean Liaison Office)

Address: 서울시 서초구 서초동 1506-25 한도 B/D 2층
2F, Hando B/D, 1506-25, Seocho-Dong, Seocho-Gu,
Seoul 137-070, Korea
Tel: +82-2-2057-0565
Fax: +82-2-2057-0563
Email: korea@adlinktech.com

ADLINK Technology Singapore Pte. Ltd.

Address: 84 Genting Lane #07-02A, Cityneon Design Centre,
Singapore 349584
Tel: +65-6844-2261
Fax: +65-6844-2263
Email: singapore@adlinktech.com

ADLINK Technology Singapore Pte. Ltd. (Indian Liaison Office)

Address: No. 1357, "Anupama", Sri Aurobindo Marg, 9th Cross,
JP Nagar Phase I, Bangalore - 560078, India
Tel: +91-80-65605817
Fax: +91-80-22443548
Email: india@adlinktech.com

This page intentionally left blank.

1 Introduction

1.1 Overview



ADLINK's Matrix MXE-5000 series provides exceptionally rugged embedded computing for harsh environments. Its -20 to 70°C temperature range allows full four-season 24-hour outdoor operation. The Matrix MXE-5000 can withstand 5 Grms vibration, suiting it perfectly to deployment in manufacturing environments or vehicles. Fanless and cable-free structure ensures extensive durability for long-term usage. The Matrix MXE-5000 series features the Intel® Core™2 Duo P8400 2.26 GHz processor, delivering ample performance with low power consumption. The MXE-5000 also integrates versatile general purpose and dedicated I/O features to support a wide variety of applications. Combining rugged design, integrated I/O functions, and IEC-60945 maritime standards compliance, the ADLINK MXE-5000 series provides a versatile choice for a multitude of applications.

1.2 Features

- ▶ Intel® Core™2 Duo P8400 2.26 GHz processor + GM45 chipset
- ▶ Rugged, -20°C to 70°C fanless operation*
- ▶ Built-in 9 VDC to 24 VDC isolation wide-range DC power input
- ▶ Up to four 1000/100/10 Mbps Ethernet ports
- ▶ Two RS-232 ports and two RS-232/422/485 ports
- ▶ Six USB 2.0 ports
- ▶ DVI-I connector combining analog CRT and DVI-D signals, supporting dual displays

Note: Extending the operating temperature to -20°C to +70°C is optional and requires use of an industrial solid-state drive storage device.

1.3 Specifications

Product Name	MXE-5104M
System Core	
Processor	Intel® Core2™ Duo P8400 2.26 GHz CPU
Chipset	Intel® GM45 Graphic Memory Control Hub
	Intel® I/O Controller Hub 9 Mobile (ICH9-M)
Video	<ul style="list-style-type: none"> ▶ DVI-I connector ▶ Combined Analog CRT and DVI-D ▶ Signal, dual display support
Memory	<ul style="list-style-type: none"> ▶ 2 GB DDR3 SODIMM ▶ 2 socket (supports up to 4 GB DDR3)
I/O Interface	
Serial Port	<ul style="list-style-type: none"> ▶ 2x RS-232 (COM1 & COM2) by DB9 connectors ▶ 2x RS-232/422/485 (COM3 & COM4) by DB9 connectors
Ethernet	<ul style="list-style-type: none"> ▶ 2x GbE ports (Intel® 82574L) on back panel ▶ 2x GbE port (Realtek 8111C) on back panel
USB	6x USB 2.0 ports
Power Supply	
DC Input	<ul style="list-style-type: none"> ▶ Built-in 9-24 VDC isolation DC input ▶ 3P pluggable connector with latch (V-, GND, V+)
Storage Device	
SATA HDD	On-board SATA port for 2.5" HDD/SSD installation
Mechanical	
Dimensions	248 mm (W) x 185 mm (D) x 85 mm (H) (9.76 in (W) x 7.28 in (D) x 3.35 in (H))
Weight	3.7 kg (8.16 lb.)
Mounting	Wall-mount by mounting bracket

Table 1-1: MXE-5104M Series Specifications

Environmental	
Operating Temperature	Standard: 0°C to 55°C w/ extended option: -20°C to 70°C (w/ Industrial Grade SSD)
Storage Temperature	-40°C to 85°C (excl. HDD/SDD/CF)
Humidity	through 95% @ 40°C (non-condensing)
Vibration	Operating, 5 Grms, 5-500 Hz, 3 axes (w/ CF or SSD)
	Operating, 0.5 Grms, 5-500 Hz, 3 axes (w/ HDD)
Shock	Operating, 50 Grms, half sine 11ms duration (w/ CF or SSD)

Table 1-1: MXE-5104M Series Specifications

1.4 Unpacking Checklist


Before unpacking, check the shipping carton for any damage. If the shipping carton and/or contents are damaged, inform the dealer immediately. Retain the shipping carton and packing materials for inspection. Obtain authorization from the dealer before returning any product to ADLINK. Ensure that the following items are included in the package.

- ▶ MXE-5104M controller
- ▶ wall-mount bracket (located under the MXE-5104M)
- ▶ Screw pack for wall-mounting and HDD fixing
- ▶ User's manual
- ▶ ADLINK All-in-One DVD

Note: OEM version packaging may vary depending on customer requests. The assigned controller and/or peripheral modules may be pre-installed and shipped with the chassis. Inquire with your dealer for additional

2.2 Front Panel I/O Connectors

Each of the MXE-5000 series controllers have the same I/O connector configuration on the front panel. This section describes the functions of these I/O connectors

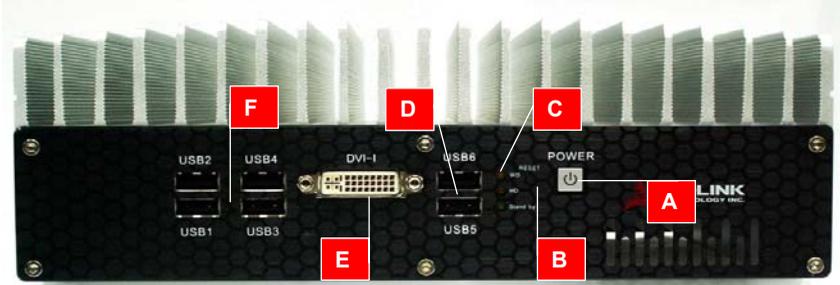

A	Power Button
B	Reset Button
C	LED Indicators
D	USB 2.0 connector x2 (Type A)
E	DVI connector
F	USB 2.0 connector x4 (Type A)

2.2.1 Power Button

The power button is a non-latched push button with a blue LED indicator. The system is turned on when the button is depressed, and the power LED is correspondingly illuminated. To shut down the system, a shutdown command is issued via the operating system, or the power button depressed. If the system crashes, depressing the button for 5 seconds forces a system shutdown.




2.2.2 Reset Button

The reset button executes a hard reset for the MXE-5104M controller. Any pin-like object can be used to depress the reset button.



2.2.3 LED Indicators

In addition to the LED of the power button, three LED indicators are displayed on the front panel. Color, behavior, and function of the LED indicators are as follows.

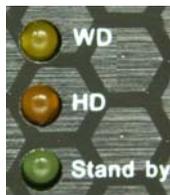

LED indicator	Color	Description
Watchdog (WD)	Yellow	Indicates the status of the watchdog timer. When the watchdog timer is started, the LED flashes. When the timer finishes, the LED is continuously lit.
Hard disk drive (HD)	Red	Indicates the operating state of HDD. When the SATA hard drive or CF card is active, the LED indicator flashes.
Stand by	Green	Indicates standby status. When the plug is received in the DC power jack, the LED lights continuously.

Table 2-1: LED Indicators

2.2.4 USB 2.0 Connectors


The MXE-5104M controller provides six USB 2.0 Type A ports on the front panel. All USB ports are compatible with high-speed, full-speed and low-speed USB devices. The MXE-5104M controller supports multiple boot devices, including USB flash drive, USB external hard drive, USB floppy, USB CD-ROM and others. The boot priority and boot device can be configured in BIOS. Please refer to Section 4.1.5 for details.

2.2.5 DVI connector

The DVI connector connects the MXE-5104M controller to a DVI interface monitor.

2.3 Rear Panel I/O Connectors

The MXE-5104M controller provides a standard-use I/O connector configuration on the rear panel. The entire MXE-5104M controller features DC power input connector, four D-sub 9P connectors COM1 through COM4, and four Gigabit Ethernet RJ45 connectors, LAN1 through LAN4.

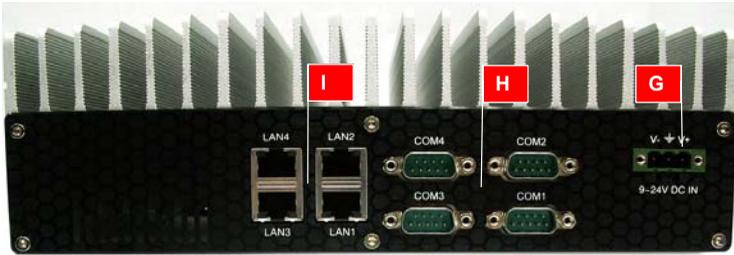

G	DC-IN connector
H	COM Port connector x4
I	Gigabit Ethernet x4 (WG82574L x2 RTL8111C x2)

2.3.1 DC Power Supply Connectors

A DC power supply connector is located on the rear panel of the MXE-5104M controller. The power supply connector consists of three pins, V+, chassis ground, and V- from right to left respectively. V+ and V- pins enable DC power input and chassis ground pin allows grounding of the chassis for optimum EMC compatibility. The DC power input of MXE-5104M controller accepts a voltage input range from 9 VDC to 24 VDC.



2.3.2 COM Ports

The MXE-5104M controller provides four COM ports in the form of D-Sub 9P connectors. COM3 and COM4 ports support RS-232/RS-422/RS-485 by Jumper selection, while COM1 and COM2 ports support RS-232 function only. Please refer to section 2.5 for setting instructions for RS-232/422/485 jumpers of COM3 and COM4 ports.

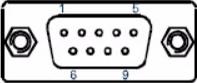
	PIN			
		RS-232	RS-422	RS-485
	1	DCD#	TXD422-	485DATA-
	2	RXD#	TXD422+	485DATA+
	3	TXD#		
	4	DTR#		
	5	GND		
	6	DSR#	RXD422-	
	7	RTS#	RXD422+	
	8	CTS#		
	9	RI#		

Table 2-2: D-sub 9P signal name of COM1 ~ COM4 ports

2.3.3 Gigabit Ethernet


The MXE-5104M series controller provides four Gigabit Ethernet ports on the rear panel, including 2 each of Intel WG82574L and Realtek 8111C Gigabit Ethernet controllers.

The Intel WG82574L Ethernet controller supports the following features:

- ▷ x1 PCI Express® interface with 2.5 GHz signaling
- ▷ PCIe* advanced extensions
- ▷ Message signaled interrupts
- ▷ TCP Segmentation/Transmit Segmentation Offloading (TSO) support
- ▷ IEEE 802.3x and 802.3z compliant flow control support
- ▷ IEEE 802.1q support
- ▷ Compliance with 1 Gb/s Ethernet IEEE 802.3x PHY specifications
- ▷ Automatic MDI/MDIX crossover at all speeds
- ▷ ACPI 2.0 specification
- ▷ Full wake-up support
- ▷ Fully integrated ASF 2.0 functionality with on-chip µc
- ▷ SMBus 2.0 master interface for ASF functionality
- ▷ Preboot eXecution Environment (PXE) flash interface support

The Realtek 8111C Ethernet controller supports the following features:

- ▷ x1 PCI Express® interface with 2.5 GHz signaling
- ▷ Advanced error reporting
- ▷ Message signaled interrupts
- ▷ TCP segmentation offload/large-send support
- ▷ 802.3x flow control-compliant
- ▷ IEEE 802.1p and 802.1q support
- ▷ 10/100/1000 IEEE 802.3-compliant
- ▷ Automatic MDI/MDIX crossover at all speeds
- ▷ ACPI 2.0 specification
- ▷ Wake-On-Link feature
- ▷ Fully integrated ASF 2.0 functionality with on-chip µc
- ▷ SMBus 2.0 master interface for ASF functionality
- ▷ Serial Peripheral Interface (SPI) for ASF firmware

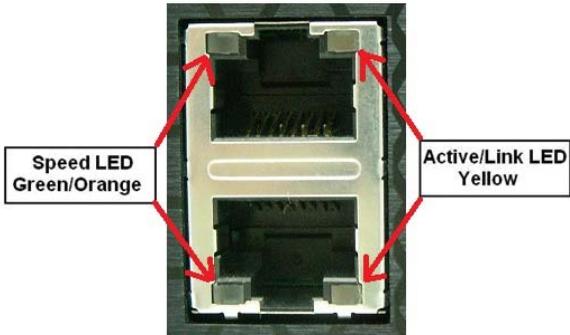

LED Color	Status	Description
Yellow	OFF	Ethernet port is disconnected.
	ON	Ethernet port is connected with no activity.
	Flashing	Ethernet port is connected and active.


Table 2-3: Active/Link LED

LED Color	Status	Description
Green/Orange	OFF	10 Mbps
	Green	100 Mbps
	Orange	1000 Mbps

Table 2-4: Speed LED

2.4 Internal I/O Connectors

This section describes the internal I/O connectors of the MXE-5104M controller. The figure shows the inside of the MXE-5104M controller.

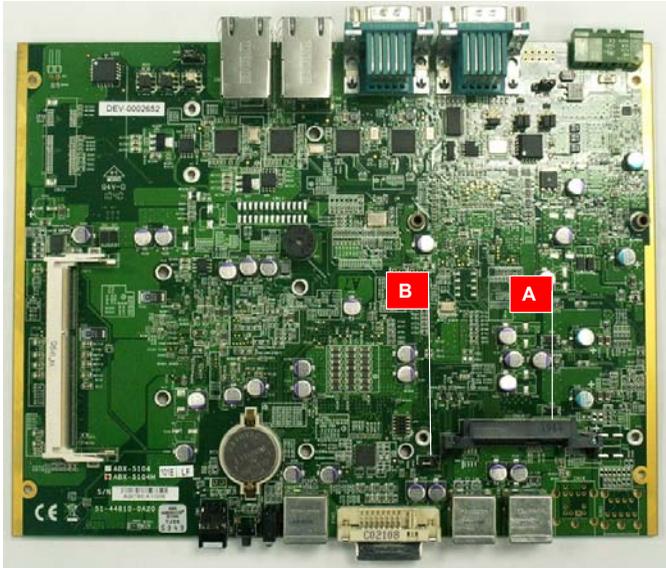

A	SATA connector
B	Clear CMOS jumper

2.4.1 SATA Connectors

The MXE-5104M controller provides a Gen.1 (1.5Gbit/s) speed SATA port. The SATA host controller supports both a legacy mode using I/O space, and AHCI mode using memory space. This SATA connector is designed for installing a 2.5 inch hard disk drive (HDD) or solid state disk (SSD). The HDD or SSD must be installed into the SATA connector with a HDD bracket. Please refer to Section 3.1 for an illustration of 2.5 inch HDD or SSD installation.

2.4.2 Clear CMOS Jumper

When abnormal conditions prevent the MXE- 5104M controller from booting, the BIOS content stored in CMOS can be cleared to restore the default settings.

To clear the CMOS:

1. shorten pin #2 and pin #3 of JP6
2. restore normal mode (shorten pin#1 and pin#2)

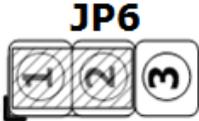
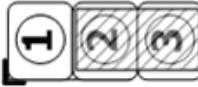
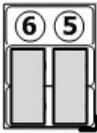
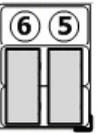
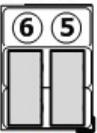
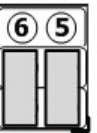
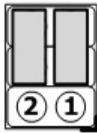
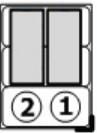
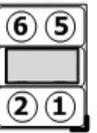
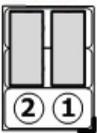
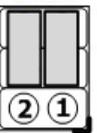
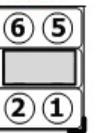
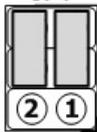
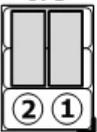
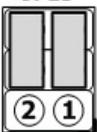
Normal	Clear
 <p data-bbox="269 582 468 703">JP6</p>	 <p data-bbox="612 628 810 715">JP6</p>

Table 2-5: Clear CMOS Jumper

2.4.3 Jumper Settings for COM3 and COM4

COM3 and COM4 of the MXE-5104M controller support RS-232, RS-422 and RS-485. JP2, JP3, JP4, JP12, JP13 and JP14 enable the operation mode of COM3 and COM4 to be set. Jumper settings are shown in the Table:

	COM3			COM4		
RS232	<p>JP4</p> 	<p>JP3</p> 	<p>JP2</p> 	<p>JP13</p> 	<p>JP14</p> 	<p>JP12</p> 
RS422	<p>JP4</p> 	<p>JP3</p> 	<p>JP2</p> 	<p>JP13</p> 	<p>JP14</p> 	<p>JP12</p> 
RS485	<p>JP4</p> 	<p>JP3</p> 	<p>JP2</p> 	<p>JP13</p> 	<p>JP14</p> 	<p>JP12</p> 

This page intentionally left blank.

3 Getting Started

This chapter discusses replacement of a hard disk drive and installation of RAM (Random Access Memory) in the system. In addition, COM port jumper settings and MXE-5104M wall-mount installation are also discussed.

3.1 Replacing a Hard Disk Drive

Before replacing the hard disk drive, the front panel, rear panel, and bottom chassis must first be removed, as follows.

1. Use a #6 (7/64 inch) hex wrench to remove all 6 screws from the front panel. Remove the panel.




2. Remove the 6 screws from the rear panel and remove the panel.




3. Turn the system upside down and lift the chassis..



4. Unplug the SATA cable from the SATA connector (receptacle) on the PCB..

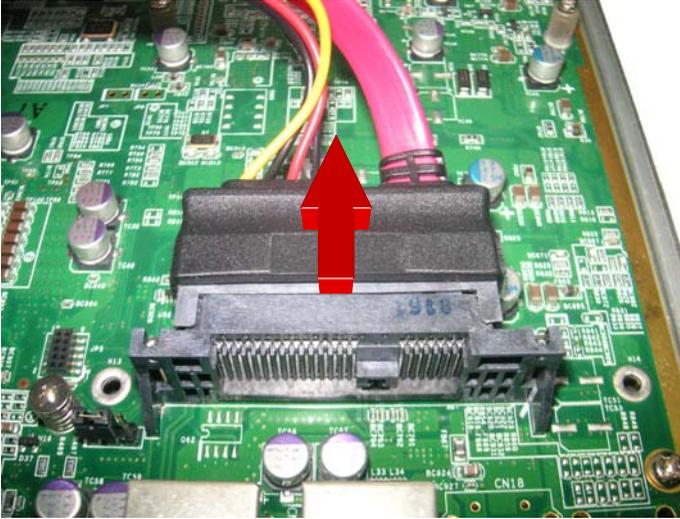

5. After the bottom chassis is removed, the HDD bracket can be found fixed thereto. Remove the 4 screws from the HDD bracket..

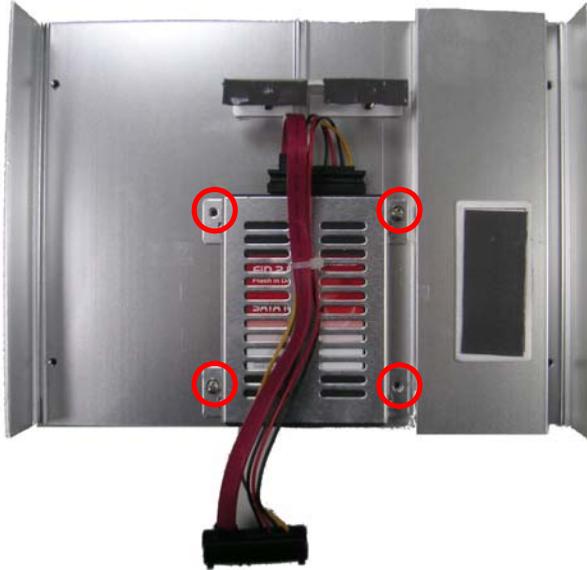

6. The SATA cable must be unplugged prior to replacement of a hard disk. 4 M3 screws fasten a 2.5" HDD or SSD to the system bracket.




7. Reverse all steps to reassemble the system.

3.2 Installing Memory

Before installing RAM, the front panel, rear panel, and bottom chassis must first be removed, as instructed in steps 1 to 4 in Chapter 3.1.


1. After the bottom chassis is removed, the RAM slot can be seen, as follows.

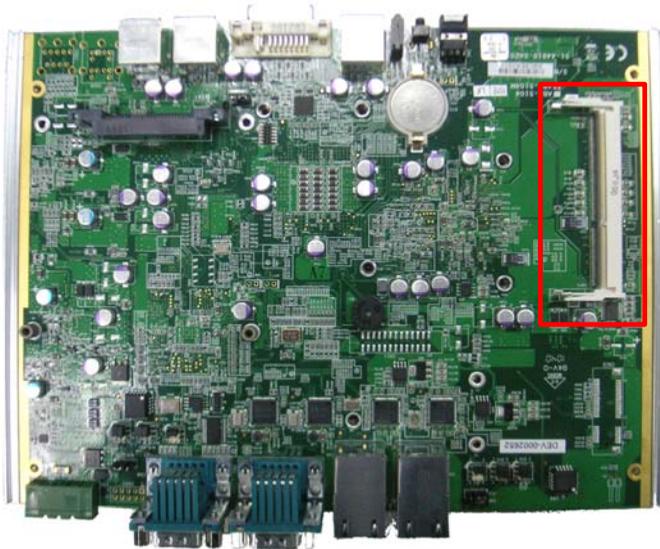

2. Insert a DDRII SODIMM RAM into the slot at an angle.



3. Depress RAM until the latch catches and the RAM is securely fixed..

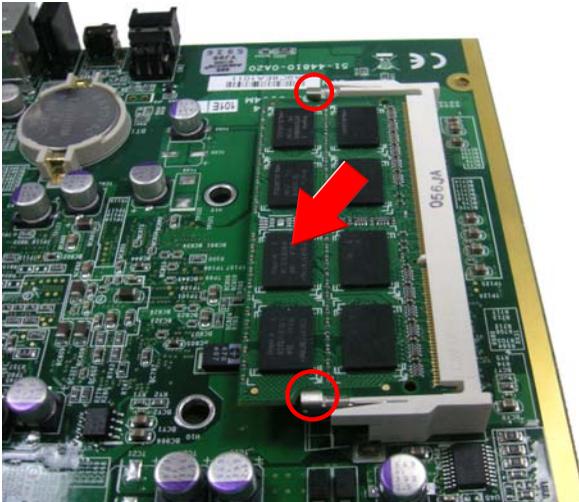

3.3 Connecting DC power

Note: Before connecting DC power to the MXE-5104M controller, ensure voltage and polarity are compatible with the DC input. Incompatibility will cause system damage.

The DC power input connector of the MXE-5104M controller is located on the rear panel. It has three pins, V+, chassis ground, and V- from right to left respectively. The DC power input accepts input voltage as shown previously.

1. Connect the DC power as shown in the Figure
2. Fix the DC connector using the 2 screws




3.4 Mounting MXE-5104M using wall-mount kit

The MXE-5104M controller is shipped with a wall-mount kit allowing the controller to be mounted on a vertical surface.

A pair of wall-mount brackets and 4 M4 screws are included in the package.




1. Turn the system upside down and locate the 4 screw holes.

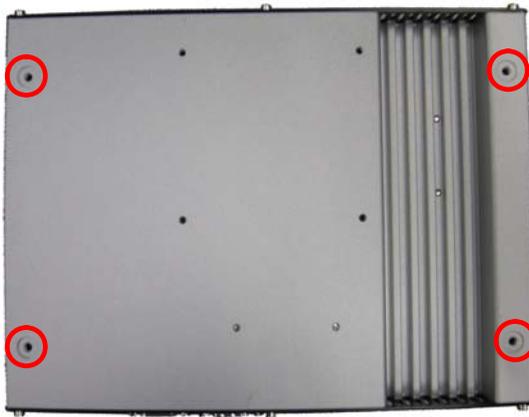

2. Fix the bracket with the M4 screws.



3. Prepare the surface for mounting according to the schematic:

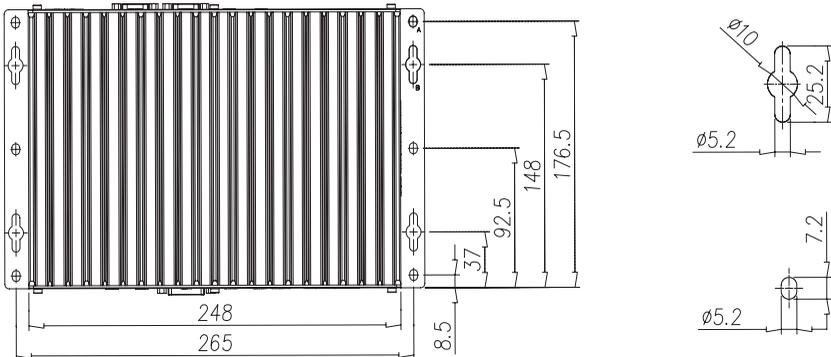

4. Mount the controller by seating the keyholes on the installed screws.

3.5 Cooling configuration

Heat generating components of the MXE-5104M controller, such as the CPU, northbridge and southbridge, are located on the top of the PCB. These components directly contact the top cover via thermal pads. Heat generated by the components is largely dissipated therethrough. To maximize efficiency of heat dissipation, maintain a minimum of 2 inches (5 cm) clearance on the top of the MXE-5104M controller.

4 BIOS Settings

The Basic Input/Output System (BIOS) is a program that provides a basic level of communication between the processor and peripherals. In addition, the BIOS also contains codes for various advanced features applied to the MXE-5000 serial controller. The BIOS setup program includes menus for configuring settings and enabling features of MXE-5000 series. Most users do not need to use the BIOS setup program, as the MXE-5000 series controller ships with default settings that work well for most configurations.

Warning: Changing BIOS settings may lead to incorrect controller behavior and possible inability to boot. In such a case, Section 2.4.4 provides instruction on clearing the CMOS and restoring default settings.

4.1 Main

4.1.1 System Time/System Date

Use this option to specify the system time and date. Highlight System Time or System Date using the up or down <Arrow> keys. Enter new values using the keyboard then press <Enter> key. Press the < Tab > key to move between fields. The date must be entered in MM/DD/YY format. The time is entered in HH:MM:SS format.

Note: The time is in 24-hour format. For example, 5:30 A.M. appears as 05:30:00, and 5:30 P.M. as 17:30:00.

4.2 Advanced

4.2.1 CPU Configuration

Hyper Threading Technology

This option allows you to Enable/Disable Hyper-Threading Technology.

Intel® SpeedStep™ Tech

This option enables or disables Intel SpeedStep™ technology.

4.2.2 SATA Configuration

This item specifies whether the SATA channels should be initialized in Compatible Mode or Enhanced Mode. The settings are Disabled, Compatible and Enhanced. The default option is Compatible.

4.2.3 SuperIO Configuration

Serial Port1/ Port2/ Port3/ Port4 Address

These four options specify the base I/O port address of serial port1 to serial port4.

Note: Do not set the same value for different serial ports to avoid resource conflict.

4.2.4 Hardware Health Configuration

The hardware health option allows users to monitor hardware status including CPU temperature, system temperature, and system voltages (Vcore, +5V, +3.3V, +12V, +1.8V, 5VSB, VBAT).

4.2.5 ACPI Configuration

High Performance Event Timer

Enables or disables HPET feature.

4.2.6 USB Configuration

Legacy USB Support

Legacy USB Support refers to USB mouse and keyboard support. Normally if this option is not enabled, an installed USB mouse or keyboard will not become available until a USB compatible operating system is fully booted with all USB drivers loaded. When this option is enabled, attached USB mouse or keyboard are activated even when no USB drivers are loaded

on the system. Set this value to enable or disable the Legacy USB Support.

Option	Description
Disabled	When set, prevents the use of any USB device in DOS or during system boot.
Enabled	When set allows the use of USB devices during boot and while using DOS.
Auto	Auto detects USB keyboards or mice and if found, allows them to be utilized during boot or while using DOS.

Table 4-1: Legacy USB support

USB 2.0 Controller Mode

Configures the data rate of the USB port. The options are Full-Speed (12 Mbps) and HiSpeed (480 Mbps)..

USB Mass Storage Device Configuration

This is a submenu for configuring the USB Mass Storage Class Devices which are in use on the USB ports found by BIOS. Emulation Type can be set according to the type of attached USB mass storage device(s). If set to Auto, USB devices smaller than 530MB will be emulated as Floppy and those greater than 530MB will remain as hard drives. The Forced FDD option can be used to force a hard disk type drive to boot as FDD (Ext. ZIP Drive).

4.3 Chipset

4.3.1 Northbridge Configuration

Internal Graphics Mode Select

Specify the size of system memory used by internal graphics device. 8MB is recommended.

DVMT Mode Select

Dynamic Video Management Technology (DVMT) allows additional system memory to be dynamically allocated for graphics usage based on application needs. Once the application is closed, memory that was allocated is released and made available for system use. This ensures a solid balance between system performance and graphics performance.

Option	Description
DVMT Mode	The graphics chip will dynamically allocate system memory as graphics memory, according to system and graphics requirements.

Table 4-2: DVMT Mode Select

Boot Display Device

Select system boot display device from CRT, EFT or CRT+EFP. The default option is VBIOS-Default.

4.3.2 Southbridge Configuration

Restore On Power Loss

Defines what state the computer enters when power is restored after a power loss. The options for this value are Last State, Power On and Power Off.

Option	Description
Power Off	Set this value to always power the system down when power is restored.
Power On	Set this value to always power the system up when power is restored.
Last State	Set this value to power the system up or down based on the previous system power state when power is restored.

Table 4-3: Restore On Power Loss

4.4 Security

The Security setup menu provides both a Supervisor and a User password. If you use both passwords, the Supervisor password must be set first.

To uninstall the passwords, simply set a NULL password.

Change Supervisor Password

Select **Change Supervisor Password** and press < Enter >. And enter your password in the appearing message box as prompted. The password is stored in NVRAM after setup completes.

User Access Level

This option appears after specifying Supervisor password, and allows you to specify the access level for users.

Option	Description
No Access	Users are not allowed to access the BIOS setting.
View Only	Users are allowed to view BIOS setting but not allowed to change it.
Limited	Users are allowed only to change limited items in BIOS.
Full Access	Users are allowed to access and change all setting items in BIOS.

Table 4-4: User Access Level

Change User Password

Select **Change User Password** and press < Enter >. And enter your password in the appearing message box as prompted. The password is stored in NVRAM after setup completes.

Password Check

This option appears after specifying Supervisor password.

Option	Description
Setup	Check password when entering BIOS setup.
Always	Check password when system booting.

Table 4-5: Password Check

4.5 Boot

4.5.1 Boot Settings Configuration

Quick Boot

Option	Description
Disabled	Specify BIOS to perform all POST tests.
Enabled	Specify BIOS to skip certain POST test to boot faster.

Quiet Boot

Option	Description
Disabled	Specify BIOS to display POST messages.
Enabled	Specify BIOS to display the OEM logo.

Bootup Num-Lock

Specify whether the Number Lock is on or off after power-on.

Wait for 'F1' If Error

If this option is specified as Disabled, BIOS does not wait for users to press the <F1> key if any error occurs.

Hit 'DEL' Message Display

If this option is specified as Enabled, the system displays the message "Press DEL to run Setup during POST"

Intel 82574L PXE ROM

Disabled/Enabled the Intel 82574L PXE ROM closes/opens Intel lan PXE function.

Realtek 8111C PXE ROM

Disabled/Enabled the Realtek 8111C PXE ROM closes/opens Intel lan PXE function.

4.5.2 Boot Device Priority

Specifies the priority of boot devices. All installed boot devices are detected during POST and displayed on the screen, with selsection as follows.

Boot from a SATA hard drive

1. Select **Hard Disk Drives** and press Enter.
2. SATA hard drive is displayed with its identification string. Specify it as **1st Drive**.
3. Go back to upper level and select SATA hard drive as **1st Boot Device**.

Boot from CF card

1. Select **Hard Disk Drives** and press Enter.
2. CF card is displayed with its identification string. Specify it as **1st Drive**.
3. Go back to upper level and select CF card as **1st Boot Device**.

Boot from USB CD/DVD drive

1. Select **USB Drives** and press Enter.
2. CD/DVD drive is displayed with its identification string. Specify it as **1st Drive**.
3. Go back to upper level and select CD/DVD drive as **1st Boot Device**.

Boot from USB Flash disk

1. Select **USB Drives** and press Enter.
2. USB flash disk is displayed with its identification string. Specify it as **1st Drive**.
3. Go back to upper level and select USB flash disk as **1st Boot Device**.

4.6 Exit

Save Changes and Exit

When changes to the BIOS settings are complete, select this option to save all changes and reboot the system, after which the new settings take effect.

Discard Changes and Exit

Select this option to discard all changes and exit BIOS setup..

Discard Changes

Select this option to discard all changes without exiting BIOS setup.

Load Optimal Defaults

Select this option to set all BIOS options to default settings. The Optimal setting is designed for maximum system performance, but may not work best for all computer applications. In particular, do not use the Optimal Setup options if the computer encounters system configuration problems.

Load Failsafe Defaults

Select this option to set all BIOS options to default settings. The Failsafe setting is designed for maximum system stability, but not maximum performance. Select the Fail-Safe Setup options if the computer encounters system configuration problems.

5 Driver Installation

After installing the operating system, you need to install all related drivers to make the system work accordingly. This section describes the drivers needed for Windows operating systems and the procedures to install them. For other OS support, please contact ADLINK for further information.

To install Windows drivers, please follow the steps below:

1. Properly install Windows before installing any drivers. Most of the standard I/O device drivers have been included in Windows.
2. Install the chipset driver.
3. Install the graphics driver.
4. Install the Ethernet driver.
5. Install the WDT (watchdog timer) driver.

5.1 Install the Chipset Driver

This section describes installation of the chipset driver for the MXE-5104M controller. The chipset driver outlines to the operating system how to configure the Intel® GM45 chipset components in order to ensure that the following features function properly:

- ▶ Core PCI and ISAPNP Services
- ▶ PCIe Support
- ▶ IDE/ATA33/ATA66/ATA100 Storage Support
- ▶ SATA Storage Support
- ▶ USB Support
- ▶ Identification of Intel® Chipset Components in the Device Manager

One of the following operating systems must be fully installed and running on the system before installing this software:

- ▶ Microsoft Windows 2000*
- ▶ Microsoft Windows 7, 32-bit*
- ▶ Microsoft Windows 7, 64-bit*
- ▶ Microsoft Windows Server 2003 Enterprise x64 Edition*
- ▶ Microsoft Windows Server 2003*, Windows Server 2008 Standard x64*
- ▶ Microsoft Windows Server 2008 Standard*
- ▶ Microsoft Windows Server 2008*
- ▶ Microsoft Windows Vista 32*
- ▶ Microsoft Windows Vista 64*
- ▶ Microsoft Windows XP 64-Bit Edition*
- ▶ Microsoft Windows XP*

to install the chipset driver for the MXE-5104M controller:

1. Close any running application.
2. Insert the ADLINK All-in-One DVD. The chipset driver is located in the directory:
x:\Driver Installation\Matrix\MXE-5104M\Chipset\
where x: denotes the DVD-ROM drive.
3. Execute Setup.exe and follow on-screen instructions to complete the setup.
4. After installation completes, reboot the system.

5.2 Install the Graphics Driver

This section describes the procedure to install the graphics driver of the MXE-5104M controller. The MXE-5104M controller is equipped with Intel® 4500MHD graphics media accelerator integrated in Intel Mobile Intel® GM45 chipset. The Intel® Graphics

Media Accelerator Driver package supports the following operating systems:

- ▶ Microsoft Windows 7 Enterprise, 32-bit version*
- ▶ Microsoft Windows 7 Home Basic, 32-bit version*
- ▶ Microsoft Windows 7 Home Premium, 32-bit version*
- ▶ Microsoft Windows 7 Professional, 32-bit version*
- ▶ Microsoft Windows 7 Ultimate, 32-bit version*
- ▶ Microsoft Windows 7*, Windows 7, 32-bit*
- ▶ Microsoft Windows Vista 32*
- ▶ Microsoft Windows Vista Business, 32-bit version*
- ▶ Microsoft Windows Vista Enterprise, 32-bit version*
- ▶ Microsoft Windows Vista Home Basic, 32-bit version*
- ▶ Microsoft Windows Vista Home Premium, 32-bit version*
- ▶ Microsoft Windows Vista Ultimate, 32-bit version*

To install the graphics driver.

1. Close any running application.
2. Insert the ADLINK All-in-One DVD. The graphics driver is located in the directory
x:\Driver Installation\Matrix\MXE-5104M\Graphics\
where x: denotes the DVD-ROM drive.
3. Execute Setup.exe and follow on-screen instructions to complete the setup.
4. After installation completes, reboot the system.

5.3 Install the Ethernet Driver

To install the Ethernet driver with Intel WG82574L and Realtek 8111C Gigabit Ethernet controller for Windows 2000 and XP:

1. Close any running application.
2. Insert the ADLINK All-in-One DVD. The chipset driver is located in the directory:
x:\Driver Installation\Matrix\MXE-5104M\LAN-Intel\
x:\Driver Installation\Matrix\MXE-5104M\LAN-Realtek\
where x: denotes the DVD-ROM drive.
3. Execute setup.exe and follow on-screen instructions to complete the setup.
4. After installation completes, reboot the system.

5.4 Install the WDT Driver

A WDT (watchdog timer) resets the system when the operating system or application is halted. A typical use of a WDT starts and periodically resets the timer, and when timer is expired, the system resets. The WDT driver must be installed prior to programming the WDT.

To install WDT driver for the MXE-5140M controller:

1. Close any running applications.
2. Insert the ADLINK All-in-One DVD. The WDT driver is located in the directory
x:\Driver Installation\Matrix\MXE-5104M\WDT
where x: denotes the DVD-ROM drive.
3. Execute setup.exe and follow on-screen instructions to complete the setup.

Reboot the system.

A Appendix

A.1 Watchdog Timer (WDT) Function Reference

This appendix describes the usage of the watchdog timer (WDT) function library for the MXE-5000 controller. Watchdog timer is a hardware mechanism to reset the system in case the operating system or an application halts. After starting watchdog timer, you need to periodically reset the watchdog timer in the application before the timer expires. Once watchdog timer expires, a hardware-generated signal is sent to reset the system.

To use the WDT function library for MXE-5000 series, you need to include the header file `WDT.h` and linkage library `WDT.lib` in your C++ project.

InitWDT

@ Description

Initialize the watchdog timer function of MXE-5000 controller. InitWDT must be called before the invocation of any other WDT function.

@ Supported controllers

MXE-5000

@ Syntax

C/C++

```
BOOL InitWDT()
```

@ Parameters

None

@ Return code

TRUE if watchdog timer is successfully initialized.

FALSE if watchdog timer is failed to initialize.

SetWDT

@ Description

Set the timeout value of watchdog timer. There are two parameters for this function to indicate the timeout ticks and unit. Users should call ResetWDT or StopWDT before the expiration of watchdog timer, or the system will be reset.

@ Supported controllers

MXE-5000

@ Syntax

C/C++

```
BOOL SetWDT(BYTE tick, BYTE unit)
```

@ Parameters

tick

Specify the number of tick for watchdog timer. A valid value is 1 - 255.

unit

Specify the timeout ticks of the watchdog timer.

Value	Description
0	The unit of tick is second. For example, when you specify tick as 100 and unit as 0, the timeout value is 100 seconds.
1	The unit of tick is minute. For example, when you specify tick as 100 and unit as 1, the timeout value is 100 minutes.

@ Return codes

TRUE if timeout value of watchdog timer is successfully set.

FALSE if timeout value of watchdog timer is failed to set.

StartWDT

@ Description

Start the watchdog timer function. Once the StartWDT is invoked, the countdown of watchdog timer starts. Users should call ResetWDT or StopWDT before the expiration of watchdog timer, or the system will be reset.

@ Supported controllers

MXE-5000

@ Syntax

C/C++

```
BOOL StartWDT()
```

@ Parameters

None

@ Return codes

TRUE if watchdog timer is successfully started.

FALSE if watchdog timer is failed to start.

ResetWDT

@ Description

Reset the watchdog timer. The invocation of ResetWDT allows users to restore the watchdog timer to the initial timeout value specified in SetWDT function. Users should call ResetWDT or StopWDT before the expiration of watchdog timer, or the system will be reset.

@ Supported controllers

MXE-5000

@ Syntax

C/C++

```
BOOL ResetWDT()
```

@ Parameters

None

@ Return codes

TRUE if watchdog timer is successfully reset.

FALSE if watchdog timer is failed to reset.

StopWDT

@ Description

Stop the watchdog timer.

@ Supported controllers

MXE-5000

@ Syntax

C/C++

```
BOOL StopWDT( )
```

@ Parameters

None

@ Return codes

TRUE if watchdog timer is successfully stopped.

FALSE if watchdog timer is failed to stop.