

# **Neousys Technology Inc.**

**PB-9250J-SA/ PB-4600J-SA**

## **User Manual**

Revision 1.2

# Table of Contents

Table of Contents .....	2
Legal Information .....	4
Contact Information .....	5
Declaration of Conformity .....	5
Copyright Notice .....	6
Safety Precautions .....	7
Service and Maintenance .....	8
ESD Precautions .....	8
About This Manual .....	9
<b>1 PB-9250J-SA/ PB-4600J-SA Overview</b>	
1.1 Introduction .....	10
1.2 Specification .....	11
1.3 Dimension .....	12
1.3.1 Main Panel View (Front View) .....	12
1.3.2 COM/ 10-Pin IO Panel View (Top View) .....	13
1.3.3 DIN Rail View (Back View) .....	14
1.3.4 Wall Mount View (Back View) .....	15
<b>2 Unpacking the System</b>	
2.1 Packing List .....	16
2.2 Main Panel I/O .....	17
2.2.1 5A/ 10A Charging Current Switch .....	18
2.2.2 3-pin terminal block for DC/ ignition input .....	19
2.2.3 Supercapacitor Energy Level .....	20
2.2.4 Charging/ Discharging Status LED .....	21
2.2.5 3-pin terminal block for DC/ ignition output .....	22
2.3 Side Panel I/O .....	23
2.3.1 COM Port .....	24
2.3.2 10-pin I/O Terminal Block .....	25
2.3.3 Reset Button .....	26
<b>3 Mode Configuration</b>	
3.1 Mode Connection .....	27
3.1.1 Normal Backup Mode .....	28
3.1.2 Ignition Control Mode .....	29
3.1.3 Ignition Relay Mode .....	30
3.2 Daisy Chain Connection (PB-9250J-SA Only) .....	31
3.3 Configuring Windows System .....	32
<b>4 CAP Energy Management Technology ~ Power Backup Parameter Configurer</b>	
4.1 CAP Energy Management Technology .....	33
4.2 Power Backup Parameter Configurer .....	34
4.2.1 Executing Power Backup Parameter Configurer .....	34
4.2.2 Connecting to COM 1 Port on Host Computer .....	34
4.2.3 Connecting to a Different COM Port on Host Computer .....	35
4.2.4 Power Backup Parameter Configurer Overview .....	37
4.2.5 Behavior when Power Applied .....	39
4.2.6 Behavior when Power Loss .....	40
4.2.7 Shutdown at Low Voltage .....	41
4.2.8 Shutdown at High Voltage .....	42

Table of Content

---

4.2.9	SuperCAP Lifetime Extension.....	43
4.2.10	Operation Mode .....	44
4.2.11	IGN Setting .....	45
4.2.12	System Status Determined by.....	46
4.2.13	Update Parameters.....	47
4.2.14	Get Parameters.....	48
4.2.15	Load Default .....	48
4.2.16	Re-train .....	49
4.2.17	Reset .....	49
<b>4.3</b>	<b>PB-9250J-SA Estimated Extended Operation Time.....</b>	<b>50</b>

# Legal Information

All Neosys Technology Inc. products shall be subject to the latest Standard Warranty Policy

Neosys Technology Inc. may modify, update or upgrade the software, firmware or any accompanying user documentation without any prior notice. Neosys Technology Inc. will provide access to these new software, firmware or documentation releases from download sections of our website or through our service partners.

Before installing any software, applications or components provided by a third party, customer should ensure that they are compatible and interoperable with Neosys Technology Inc. product by checking in advance with Neosys Technology Inc.. Customer is solely responsible for ensuring the compatibility and interoperability of the third party's products. Customer is further solely responsible for ensuring its systems, software, and data are adequately backed up as a precaution against possible failures, alternation, or loss.

For questions in regards to hardware/ software compatibility, customers should contact Neosys Technology Inc. sales representative or technical support.

To the extent permitted by applicable laws, Neosys Technology Inc. shall NOT be responsible for any interoperability or compatibility issues that may arise when (1) products, software, or options not certified and supported; (2) configurations not certified and supported are used; (3) parts intended for one system is installed in another system of different make or model.

# Contact Information

---

**Headquarters**  
**(Taipei, Taiwan)**      **Neosys Technology Inc.**  
15F, No.868-3, Zhongzheng Rd., Zhonghe Dist., New Taipei City, 23586, Taiwan  
Tel: +886-2-2223-6182 Fax: +886-2-2223-6183 [Email](#), [Website](#)

---

**Americas**  
**(Illinois, USA)**      **Neosys Technology America Inc.**  
3384 Commercial Avenue, Northbrook, IL 60062, USA  
Tel: +1-847-656-3298 [Email](#), [Website](#)

---

**China**      **Neosys Technology (China) Ltd.**  
Room 612, Building 32, Guiping Road 680, Shanghai  
Tel: +86-2161155366 [Email](#), [Website](#)

---

# Declaration of Conformity

**FCC**      This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at own expense.

---

**CE**      The product(s) described in this manual complies with all applicable European Union (CE) directives if it has a CE marking. For computer systems to remain CE compliant, only CE-compliant parts may be used. Maintaining CE compliance also requires proper cable and cabling techniques.

# Copyright Notice

All rights reserved. This publication may not be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written consent of Neosys Technology, Inc.

---

## **Disclaimer**

This manual is intended to be used as an informative guide only and is subject to change without prior notice. It does not represent commitment from Neosys Technology Inc. Neosys Technology Inc. shall not be liable for any direct, indirect, special, incidental, or consequential damages arising from the use of the product or documentation, nor for any infringement on third party rights.

---

## **Patents and Trademarks**

Neosys, the Neosys logo, Expansion Cassette, MezIO™ are registered patents and trademarks of Neosys Technology, Inc.

Windows is a registered trademark of Microsoft Corporation.

Intel®, Core™ are registered trademarks of Intel Corporation

NVIDIA®, GeForce® are registered trademarks of NVIDIA Corporation

All other names, brands, products or services are trademarks or registered trademarks of their respective owners.

# Safety Precautions

- Read these instructions carefully before you install, operate, or transport the system.
- Install the system or DIN rail associated with, at a sturdy location
- Install the power socket outlet near the system where it is easily accessible
- Secure each system module(s) using its retaining screws
- Place power cords and other connection cables away from foot traffic. Do not place items over power cords and make sure they do not rest against data cables
- Shutdown, disconnect all cables from the system and ground yourself before touching internal modules
- Ensure that the correct power range is being used before powering the device
- Should a module fail, arrange for a replacement as soon as possible to minimize down-time
- If the system is not going to be used for a long time, disconnect it from mains (power socket) to avoid transient over-voltage

# Service and Maintenance

- ONLY qualified personnel should service the system
- Shutdown the system, disconnect the power cord and all other connections before servicing the system
- When replacing/ installing additional components (expansion card, memory module, etc.), insert them as gently as possible while assuring proper connector engagement

# ESD Precautions

- Handle add-on module, motherboard by their retention screws or the module's frame/ heat sink. Avoid touching the PCB circuit board or add-on module connector pins
- Use a grounded wrist strap and an anti-static work pad to discharge static electricity when installing or maintaining the system
- Avoid dust, debris, carpets, plastic, vinyl and styrofoam in your work area.
- Do not remove any module or component from its anti-static bag before installation



# About This Manual

This manual introduces and demonstrates installation procedures of Neosys intelligent ultracapacitor-based power backup stand alone module, PB-9250J-SA and PB-4600J-SA.

## Revision History

Version	Date	Description
1.0	May. 2019	Initial release
1.1	Jul. 2019	Updated SuperCap operation lifespan data in SuperCap Lifetime Extension setting
1.2	Aug. 2019	Added PB-4600J-SA

# 1 PB-9250J-SA/ PB-4600J-SA Overview

## 1.1 Introduction

PB-9250J-SA and PB-4600J-SA is a standalone power backup module that can protect your box-PC against power outages. Utilizing state-of-the-art supercapacitor technology, it can operate in harsh environments from -25 to 65°C, and have extremely high durability lasting over 10 years. PB-9250J/ 4600J are composed of eight/ four 370F/ 3.0V supercapacitors respectively, which offer much longer lifespan than its 2.7V counterpart, and stores 9250/ 4600 watt-second energy to offer extra extended operation time to backup your system.

Thanks to Neosys' patented CAP energy management technology, it can reliably supply up to 180W power to the back-end system and automatically manage boot and shutdown without installing additional drivers/ software. In addition to UPS-like power backup mode, it also offers two advanced ignition control modes for working with either standard box-PC or in-vehicle controller to provide stable power supply and execute user-configurable power-on/ power-off delay according to IGN signal input.

Featuring various modes, automatic shutdown control and up to 180W output power, Neosys standalone power backup modules can work with most off-the-shelf box-PCs. And with properties such as maintenance-free energy storage and uninterruptible power supply, they can prevent data loss for the connected back-end system during power outages in harsh industrial environments!



## 1.2 Specification

Supercapacitor Configuration		
	PB-9250J-SA	PB-4600J-SA
Composition	8x 370F, 3.0V supercapacitors	4x 370F, 3.0V supercapacitors
Capacity	9250 watt-second	4600 watt-second
Expected lifespan	>10 years*	
Cycle life	500,000 charging/discharging cycles*	
Power Specification		
Input Voltage	12~35 VDC	
Input Connector	1x 3-pin pluggable terminal block (V+, GND, IGN_IN)	
Output Voltage	Charge mode: DC_IN bypass (DC_OUT = DC_IN) Discharge mode: 12 or 24V	
Output Power	Maximum 180W output**	Maximum 100W output**
Output Connector	1x 3-pin pluggable terminal block (V+, GND, IGN_OUT)	
I/O Interface		
COM Port	1x DB9 for 3-wire RS-232	
Isolated DIO	1x 10-pin pluggable terminal block for - PWR_BTN# output/ SYS_STAT input	
Mechanical and Environmental		
Dimension	82.5mm(W) x 175.2mm(H) x 128.2mm(D)	
Weight	1.70 Kg	1.68 Kg
Mounting	DIN-rail mounting and wall-mounting	
Operating Temperature	-25°C ~ 65°C -40°C ~ 85°C with reduced energy capacity	
Storage Temperature	-40°C ~ 85°C	
Vibration	IEC61373:2010, Category 1, Class B Body mounted (part of EN50155)	
Shock	IEC61373:2010, Category 1, Class B Body mounted (part of EN50155)	
Certification	EN50155:2007, CE/FCC Class A, according to EN 55032 & EN 55035	

\* To achieve > 10 years lifespan under 24/7 at 65°C operation, please charge PB-9250J-SA to 6525J/ PB-4600J-SA to 3245J energy level using the [4.8x SuperCAP Lifetime Extension setting](#). Once the rated lifetime or cycle life has been reached, the capacity of supercapacitor may decrease up to 30% and ESR may increase up to 100% from initial values.

\*\* Backup time for uninterruptible operation may be reduced when sustaining a back-end system with high power consumption.


### 1.3 Dimension




NOTE

*All measurements are in millimeters (mm).*


#### 1.3.1 Main Panel View (Front View)

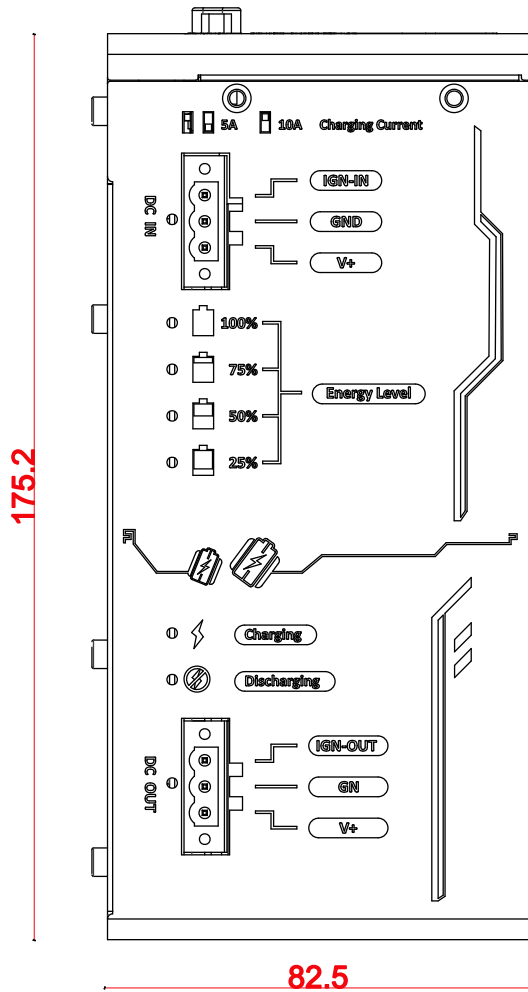


### 1.3.2 COM/ 10-Pin IO Panel View (Top View)

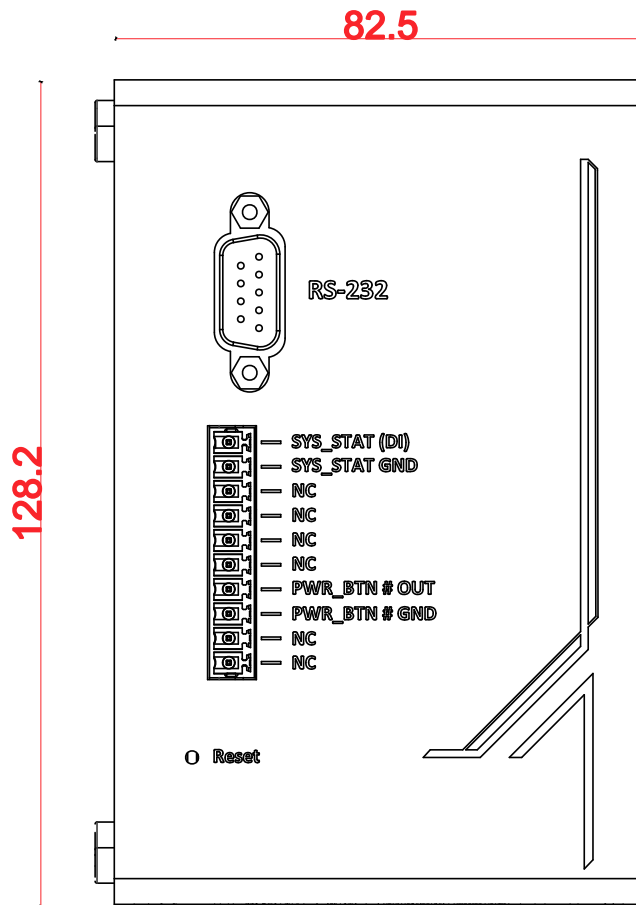

### 1.3.3 DIN Rail View (Back View)

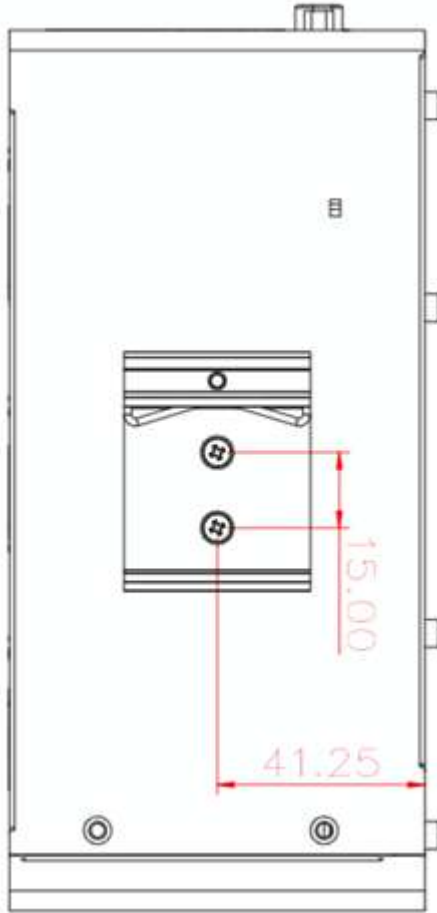

### 1.3.4 Wall Mount View (Back View)

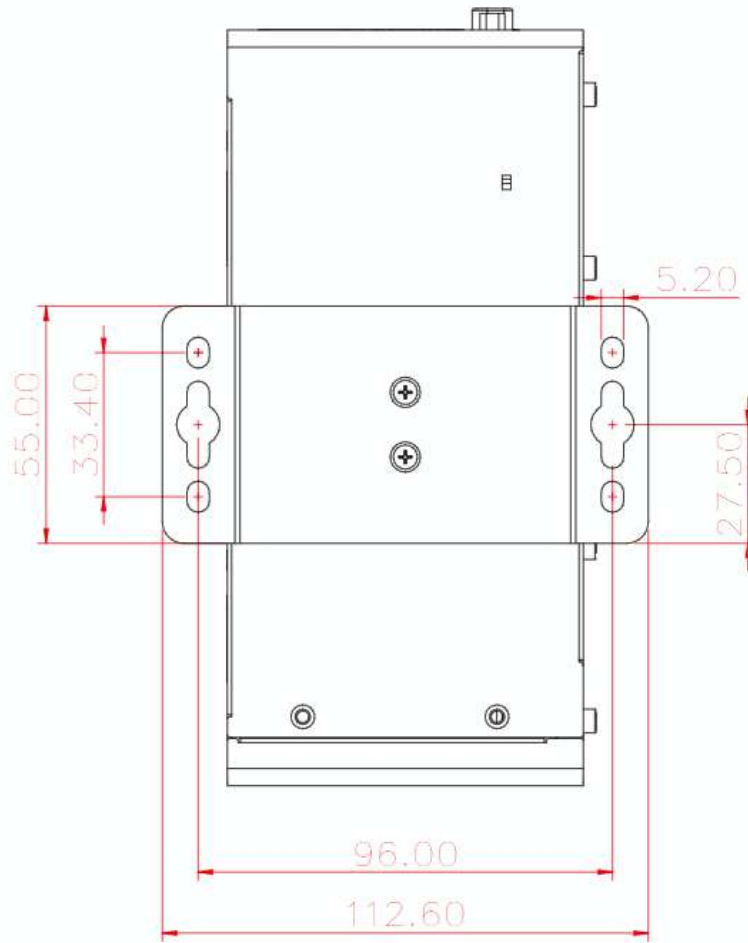

## 2 Unpacking the System


Upon receiving and unpacking your PB-9250J-SA/ PB-4600J-SA, please check immediately if the package contains all the items listed in the following table. If any item(s) are missing or damaged, please contact your local dealer or Neosys Technology.

### 2.1 Packing List

Item	Description	Qty
1	PB-9250J-SA/ PB-4600J-SA	1
2	3-pin power terminal block	2
3	10-pin I/O terminal block	1
4	DIN-rail clip set (standard)/ wall-mount bracket (optional)	1
5	DB9 (Female) to DB9 (Female) cable	1




## 2.2 Main Panel I/O

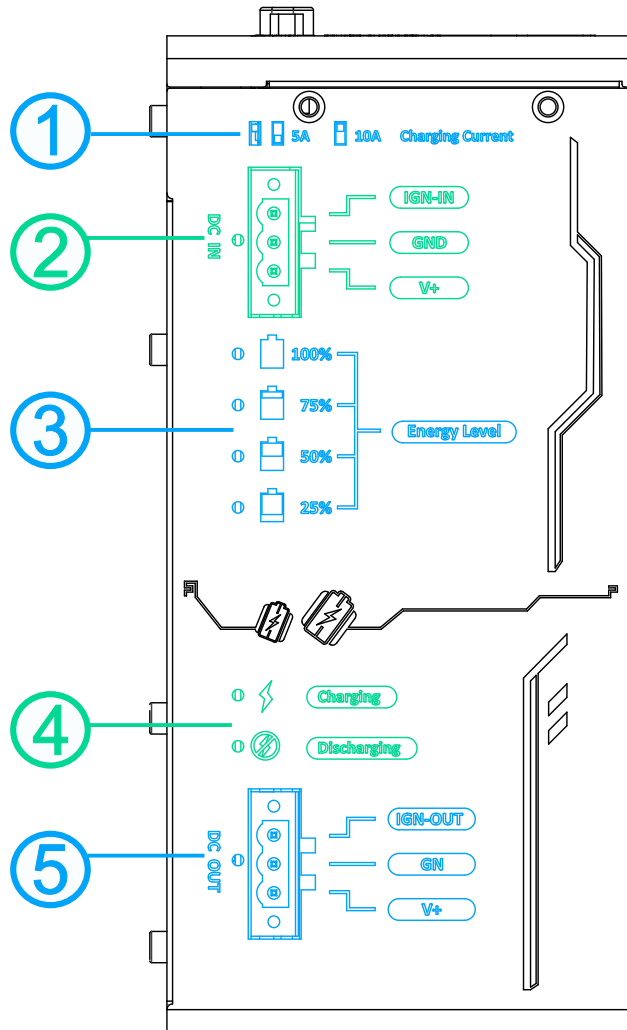

No.	Item	Description
1	Charging current switch	Charging current selector switch for <b>5A</b> or <b>10A</b> .
2	3-pin terminal block for DC/ ignition input	Compatible with DC power input from 12~35V, the terminal block is also used for ignition signal input.
3	Battery capacity level LED	Indicates capacity level at or less than 100 / 75 / 50 / 25 percent.
4	Charging / discharging status LED	LED status indicating if the module is being charged or in a discharge status.
5	3-pin terminal block for DC/ ignition output	Compatible with DC power output from 12~35V, the terminal block is also used for ignition signal output.

### 2.2.1 5A/ 10A Charging Current Switch

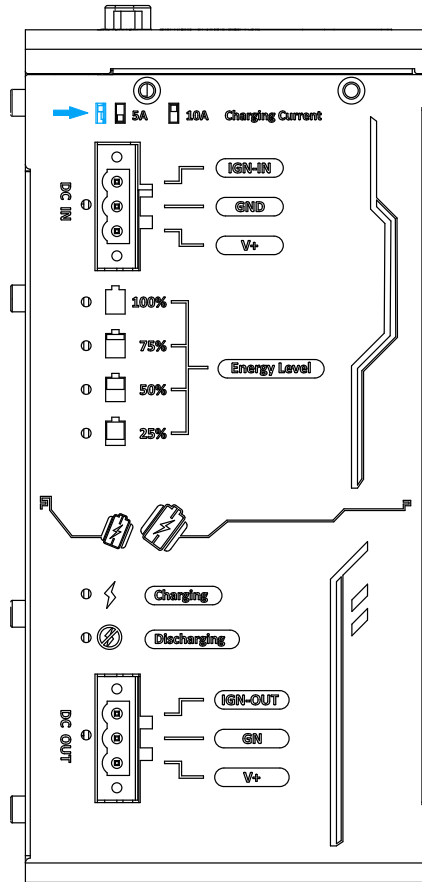

PB-9250J/ 4600J can be set to charge at 5A or 10A input. The different current input will result in different charging times from 0% to full. Please refer to the following table:

	Current	Voltage	Approx. charging time (from 0%)
PB-9250J	5A	24V	90~110 seconds
		12V	170~200 seconds
	10A	24V	40~60 seconds
		12V	60~90 seconds
	Current	Voltage	Approx. charging time (from 0%)
PB-4600J	5A	24V	35~55 seconds
		12V	60~110 seconds
	10A	24V	15~30 seconds
		12V	25~45 seconds




#### NOTE

*The power adapter must supply 8A or more for 5A charging.*


*The power adapter must supply 13A or more for 10A charging.*

### 2.2.2 3-pin terminal block for DC/ ignition input

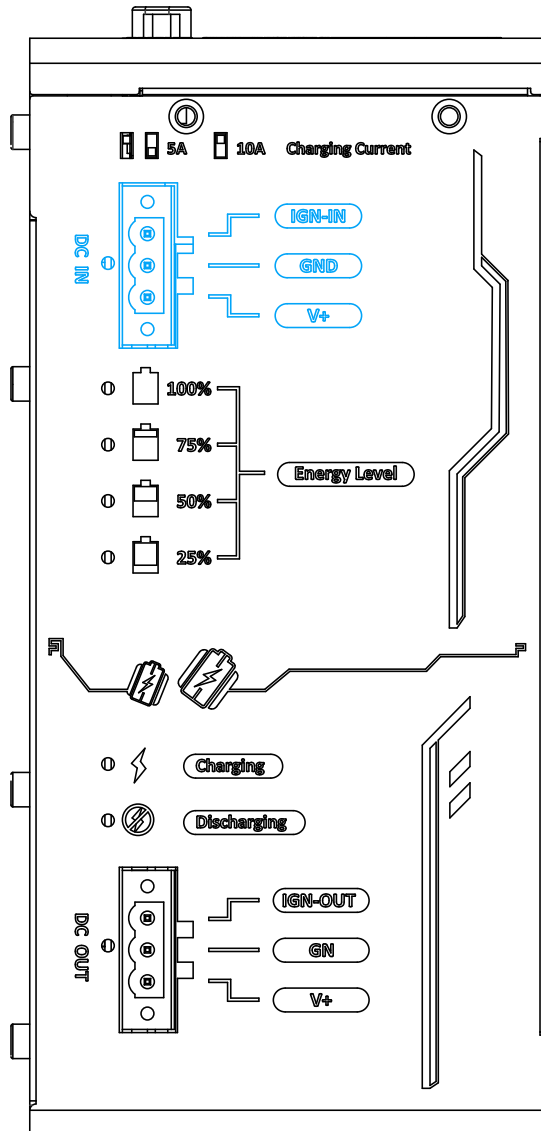


The system accepts a wide range of DC power input from 12 to 35V via a 3-pin pluggable terminal block, which is fit for field usage where DC power is usually provided. The screw clamping mechanism on the terminal block offers connection reliability when wiring DC power. In addition to DC power input, this terminal block can also accept ignition signal input (IGN) when PB-9250J/ 4600J is configured in Ignition Control Mode/ Ignition Relay Mode for in-vehicle applications.

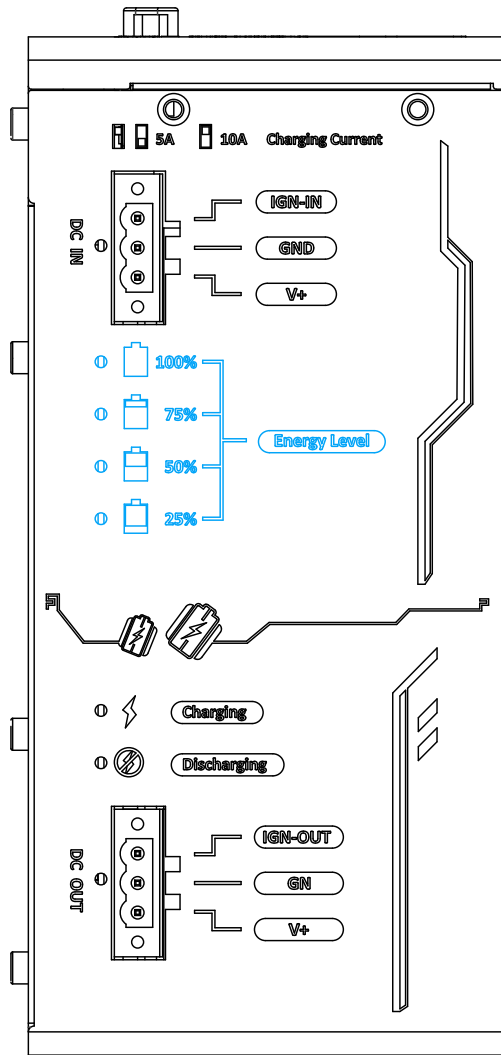

### 2.2.3 Supercapacitor Energy Level




LED	Color	Status	Description
100%	Green	Steady-lid	Energy of the SuperCAP reached 100%
		Off	Energy of the SuperCAP is below 100%
75%	Green	Steady-lid	Energy of the SuperCAP reached 75%
		Off	Energy of the SuperCAP is below 75%
50%	Green	Steady-lid	Energy of the SuperCAP reached 50%
		Off	Energy of the SuperCAP is below 50%
25%	Green	Steady-lid	Energy of the SuperCAP reached 25%
		Off	Energy of the SuperCAP is below 25%
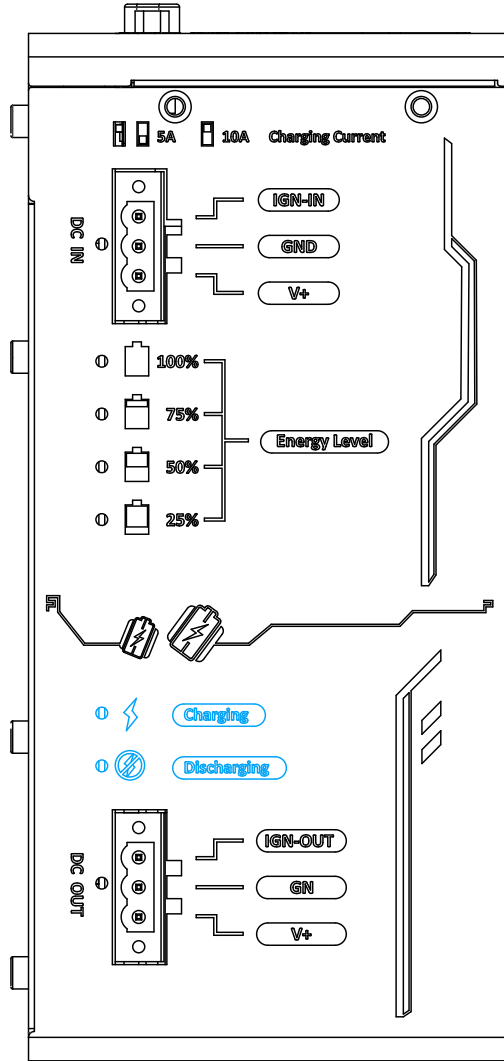
## 2.2.4 Charging/ Discharging Status LED




LED	Color	Status Description
	<b>Orange</b>	When lit, it indicates PB-9250J/ 4600J is being charged.
	<b>Red</b>	When flashing, it indicates a discharge status.

### 2.2.5 3-pin terminal block for DC/ ignition output

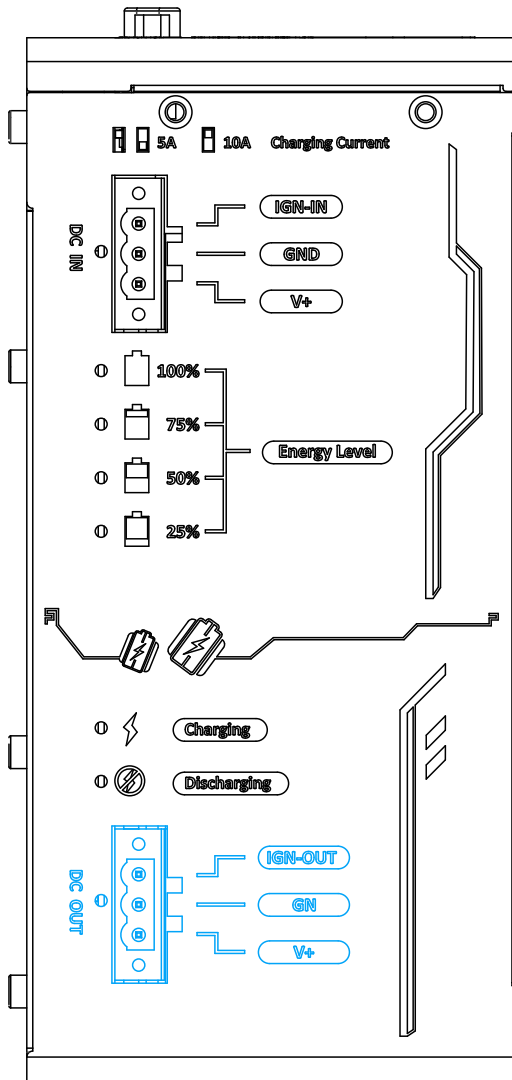


When charging, the system bypasses DC power output from 12 to 35V via a 3-pin pluggable terminal block. When discharging, the system provides 12/24 DC power output via a 3-pin pluggable terminal block. The screw clamping mechanism on the terminal block offers connection reliability when wiring DC power. In addition to DC power output, this terminal block can also send ignition signal output (IGN) to back-end system when PB-9250J/ 4600J is configured in Ignition Control Mode/ Ignition Relay Mode for in-vehicle applications.

 **NOTE**

*If the input voltage is equal or higher than 17V, the output voltage during the discharge status will be 24V.*


*If the input voltage is lower than 17V, the output voltage during the discharge status will be 12V.*

## 2.3 Side Panel I/O

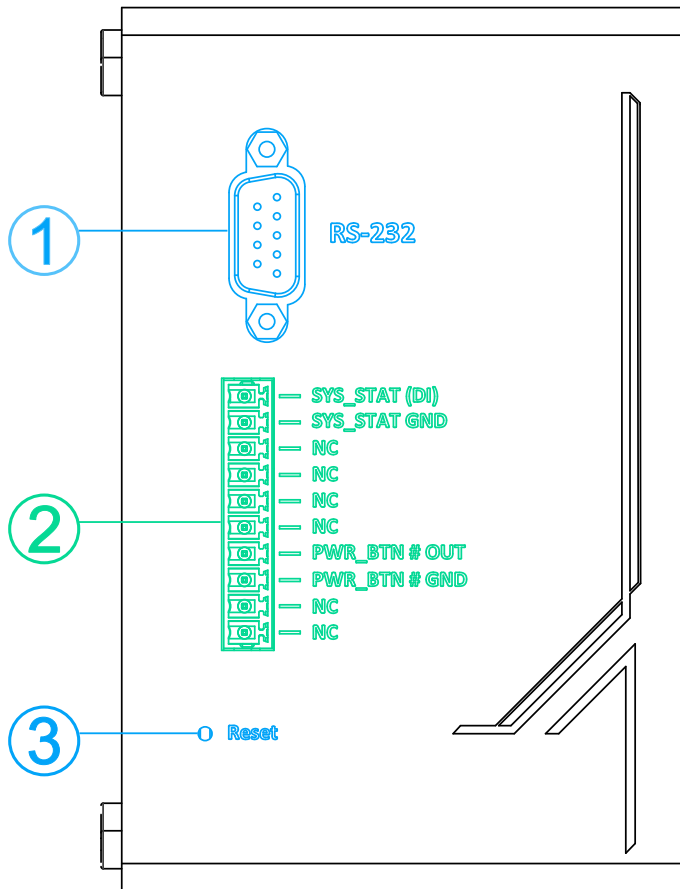

No.	Item	Description
1	RS-232 COM port	9-pin D-sub COM port to connect to the host computer.
2	10-pin I/O terminal block	10-pin input/ output terminal block consists of two signal pairs: power button signal output and system status input.
3	Reset button	The button is for users to manually reset and load system default configuration in case of a system halt or malfunction.

### 2.3.1 COM Port

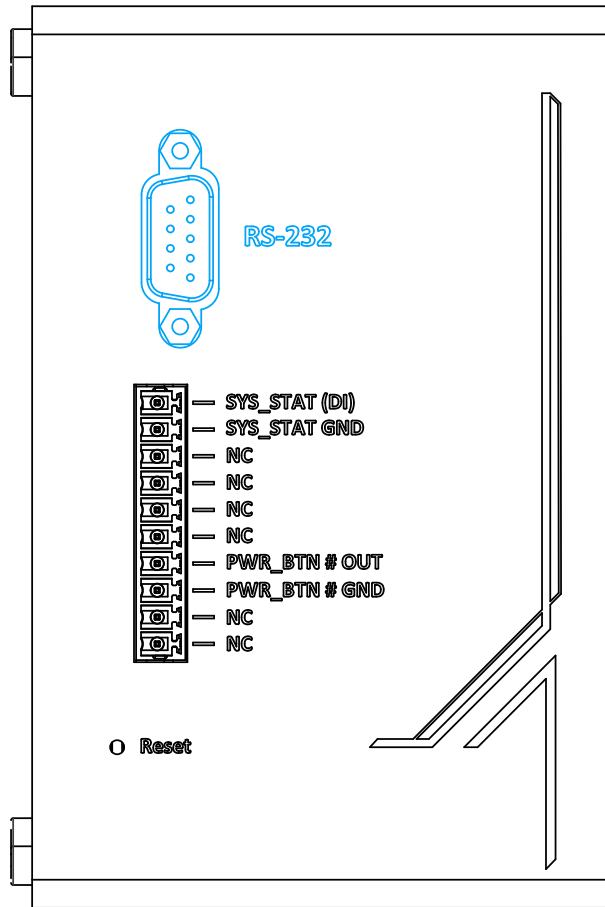

The 9-pin D-sub COM port can connect and communicate with the host computer to acquire PB-9250J/ 4600J information.




**NOTE**

*The host computer's COM port must be configured in RS-232 mode to properly communicate with PB-9250J/ 4600J module.*




### 2.3.2 10-pin I/O Terminal Block

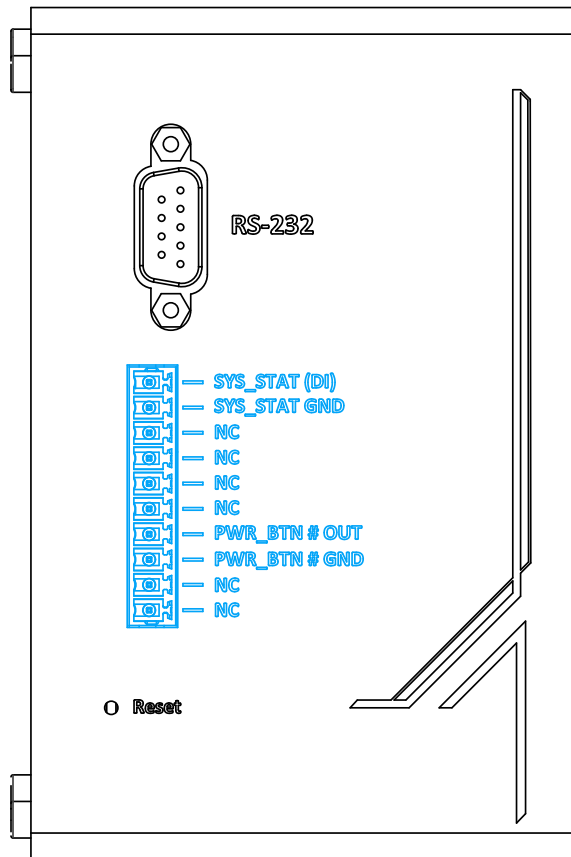

There are two signal pairs on the 10-pin I/O terminal block. One is power button signal output (PWRBTN#), the other is system status input (SYS\_STAT). Power button signal pair is sent by PB-9250J/ 4600J to turn on/off the back-end system. It should be linked to the remote control signal pair on the back-end system. The PWRBTN# signal pair is an open/ short signal. It is necessary to link the PWRBTN# signal pair in order for boot/ shutdown control.


System status signal pair is used to detect the status of the back-end system (whether it is running or turned off). This signal pair is optional due to PB-9250J/ 4600J's built-in status detection function which can automatically detect the back-end system status via the power consumption of the system. Note that the signal input pair of PB-9250J/ 4600J can accept 5~24V voltage output from back-end system to indicate the status (on/ off) of the system, for example the USB 5V of general box-PC. Also, digital input signal should be high when the back-end system is on, and low when system is off



 **NOTE**

PB-9250J/ 4600J should be configured to SYS\_STAT Input via utility when user decides to connect system status signal pair.

### 2.3.3 Reset Button

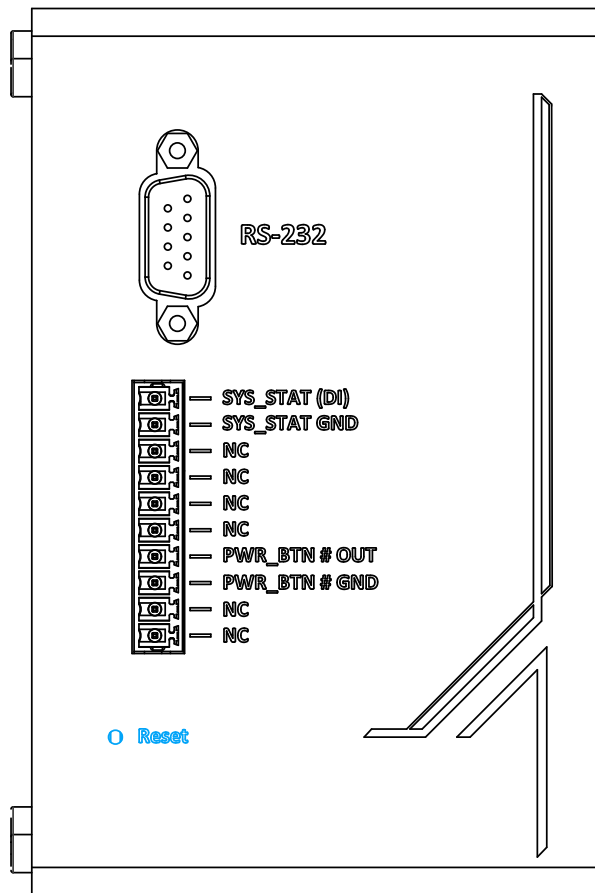


The reset button is used to manually reset and load system default configuration in case of a system halt or malfunction. To avoid unexpected operation, the button is purposely placed behind the panel. To reset the system, please use a pin to poke the button behind the panel for 5 seconds till one long beep heard.

# 3 Mode Configuration


## 3.1 Mode Connection

PB-9250J-SA/ PB-4600J-SA can be configured to three different operating modes: Normal Backup Mode/ Ignition Control Mode/ Ignition Relay Mode. The following sections show detail information about how to connect and use the three different modes.


### Normal Backup Mode

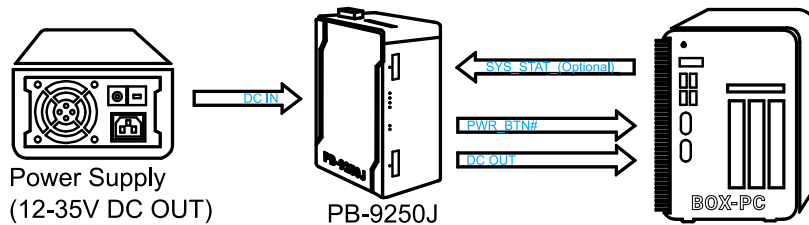


### Ignition Control Mode

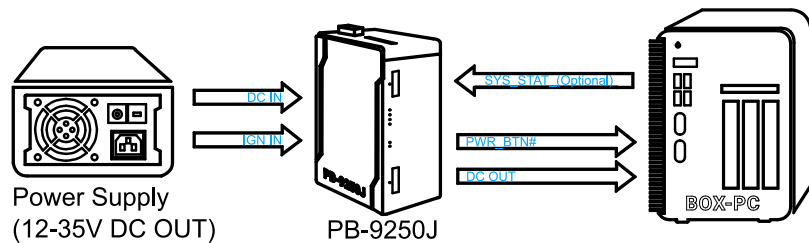

### Ignition Relay Mode

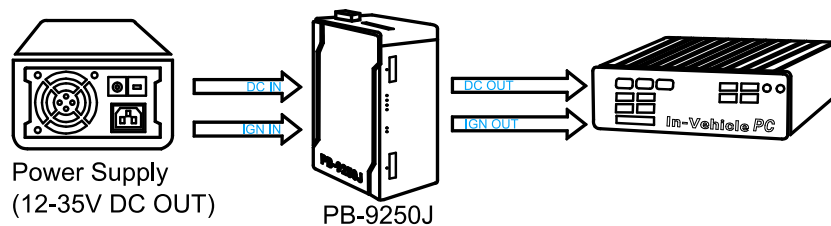

### 3.1.1 Normal Backup Mode

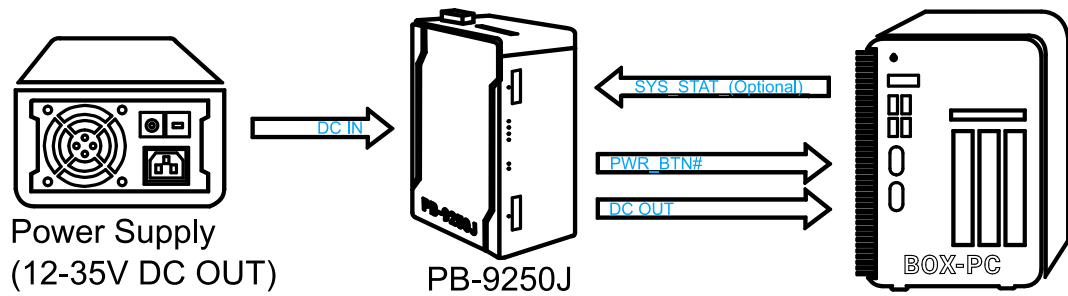

**Normal Backup Mode** is for general purpose use of PB-9250J/ 4600J. In Normal Backup Mode, DC output 12~35V from power supply should be connected to the DC IN of PB-9250J/ 4600J. DC OUT of PB-9250J/ 4600J should be connected to the power input of the back-end system. In addition, user should connect PWRBTN# signal pairs to the remote control or whichever connector that is connected to the power button signal of the back-end system.

In Normal Backup Mode, PB-9250J/ 4600J begin to charge as soon as the power is supplied. Charging time should take approximately 15~200 seconds to fully charge PB-9250J/ 4600J (depending on charging current and input voltage). Afterwards, PB-9250J/ 4600J will automatically initiate the power button signal to turn on the back-end system. Under power blackout condition, PB-9250J/ 4600J can sustain back-end system alive by supplying 12V/24V power output. PB-9250J/ 4600J calculate the energy it needs for back-end system to properly turn off. In other words, PB-9250J/ 4600J can sustain connected system as long as possible before initiating a power button signal to shut down the system.




**NOTE**

*If the input voltage is equal or higher than 17V, the output voltage during the discharge status will be 24V.*

*If the input voltage is lower than 17V, the output voltage during the discharge status will be 12V.*

### 3.1.2 Ignition Control Mode

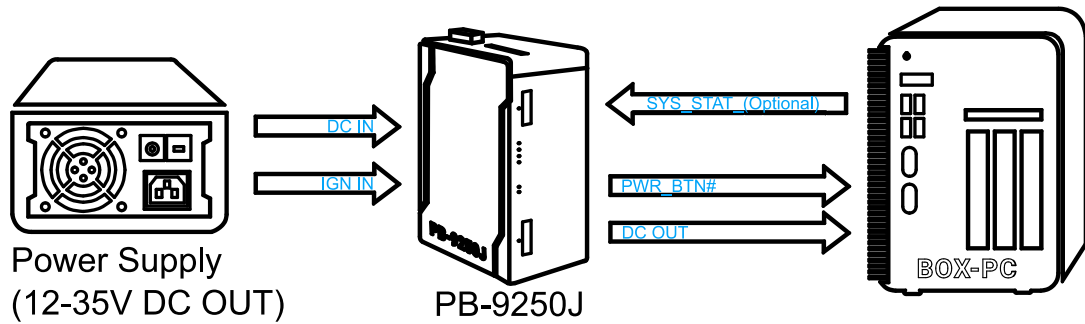

**Ignition Control Mode** is ideal for box-PCs that lack the ignition control function, but still need and want to operate as an in-vehicle controller. With PB-9250J/ 4600J built-in IGN control function, PB-9250J/ 4600J receive the IGN signal and sends a power button signal to the connected system. In Ignition Control Mode, DC output 12~35V from power supply should be connected to the DC IN of PB-9250J/ 4600J. IGN input should also be connected to IGN IN of PB-9250J/ 4600J (same connector of power input). DC OUT of PB-9250J/ 4600J should be connected to the power input of the back-end system. In addition, user should connect PWRBTN# signal pairs to the remote control or whichever connector is connected to the power button signal of the back-end system.


Once the system has been connected to power input and IGN signal, PB-9250J/ 4600J will begin to charge once the user-defined on-delay period has been set. It takes approximately 15~200 seconds to fully charge PB-9250J/ 4600J (depending on charging current and input voltage). Afterwards, PB-9250J/ 4600J will automatically initiate the power button signal to turn on the back-end system. When the system is in operation, PB-9250J/ 4600J will turn off the connected system according to the user-defined delay time if IGN input is turned off. Under power blackout condition, PB-9250J/ 4600J can sustain back-end system alive by supplying 12V/24V power output as the same as Normal Backup Mode. PB-9250J/ 4600J can sustain the connected system as long as possible and then initiate the power button signal before shutting down the system. If power input and IGN is turned off simultaneously, PB-9250J/ 4600J will shutdown the system according to the user-defined IGN off delay time if the IGN off delay is shorter than the estimated learnt time for shutting down the system, and vice versa.

 **NOTE**

*If the input voltage is equal or higher than 17V, the output voltage during the discharge status will be 24V.*

*If the input voltage is lower than 17V, the output voltage during the discharge status will be 12V.*

### 3.1.3 Ignition Relay Mode

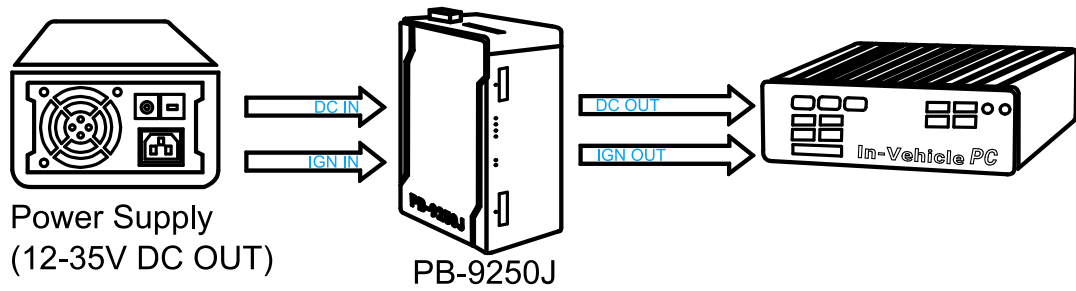

**Ignition Relay Mode** is for in-vehicle box-PCs in transportation application. In Ignition Relay Mode, PB-9250J/ 4600J can receive IGN input signal and pass it to the back-end system. DC output 12~35V from power supply should be connected to the DC IN of PB-9250J/ 4600J. IGN input should also be connected to IGN IN of PB-9250J/ 4600J. DC OUT of PB-9250J/ 4600J should be connected to the power input of the back-end system. In addition, IGN OUT of PB-9250J/ 4600J should be connected to the IGN input of the back-end system.

Once the system has been setup, PB-9250J/ 4600J will begin to charge when power input and IGN are both supplied. It should take approximately 15~200 seconds to fully charge PB-9250J/ 4600J (depending on charging current and input voltage). Afterwards, PB-9250J/ 4600J will automatically initiate IGN signal in order to turn on the back-end system. During system operation, PB-9250J/ 4600J will cut off IGN signal if the IGN input is turned off. Under power blackout condition, PB-9250J/ 4600J can sustain back-end system alive by supplying 12V/24V power output, but note that PB-9250J/ 4600J can only cut off the IGN out signal if IGN input of PB-9250J/ 4600J is turned off. In other words, PB-9250J/ 4600J's role is to only relay IGN signal in real-time and the IGN on/off delay depends on the back-end system.




#### NOTE

*If the input voltage is equal or higher than 17V, the output voltage during the discharge status will be 24V.*

*If the input voltage is lower than 17V, the output voltage during the discharge status will be 12V.*

### 3.2 Daisy Chain Connection (PB-9250J-SA Only)

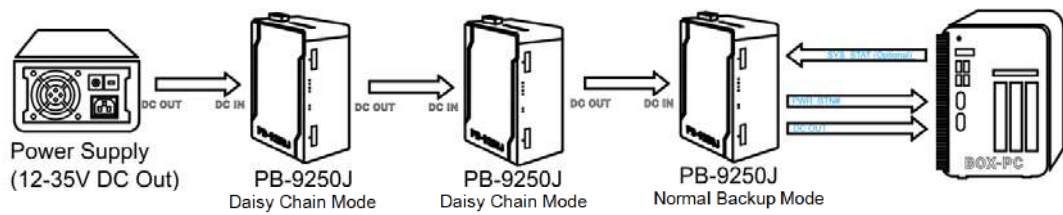

Daisy chain connection is only applicable to PB-9250J. PB-9250J can be wired together in sequence to extend energy capacity. To daisy chain PB-9250Js, user should connect DC power input into the first PB-9250J. Then connect the power output to next power input of PB-9250J, and so on. The power output of the last PB-9250J which is nearest to the system should connect to the power input of the backend system. Remember to connect power button and remaining signal to the system. Please refer to the example shown above with three PB-9250Js daisy chained.


In a daisy chain scenario, the last PB-9250J in the daisy chain that is connected to the backend PC should be configured according to the Normal Backup Mode. Daisy chaining PB-9250J results in larger capacitor and longer backup time. User can decide how many PB-9250J to daisy chain depend on their needs.

For Daisy Chain mode, you should use the power supply with 24V or higher voltage output. You can refer to the following table to determine the power requirements and numbers of daisy-chaining PB-9250J-SA.


Power Consumption of Back-end System	Output Voltage of Power Supply	Rated Current of Power Supply	PB-9250J-SA Charging Mode	Max. # of Daisy-chain
< 80 W	24 VDC or higher	8 A or higher	5 A	8
80 W ~ 180 W	24 VDC or higher	13 A or higher	10 A	4

### 3.3 Configuring Windows System

Please make sure you've configured your Windows system to initiate a shutdown process when pressing the power button. By default, Windows 7/ 8/ 10 goes to sleep (S3) mode when the power button is pressed. As sleep (S3) is not a complete shutdown behavior, be PB-9250J/ 4600J will not recognize this command. To configure the setting in your Windows system, go to "Control Panel>System and Security>Power Options".

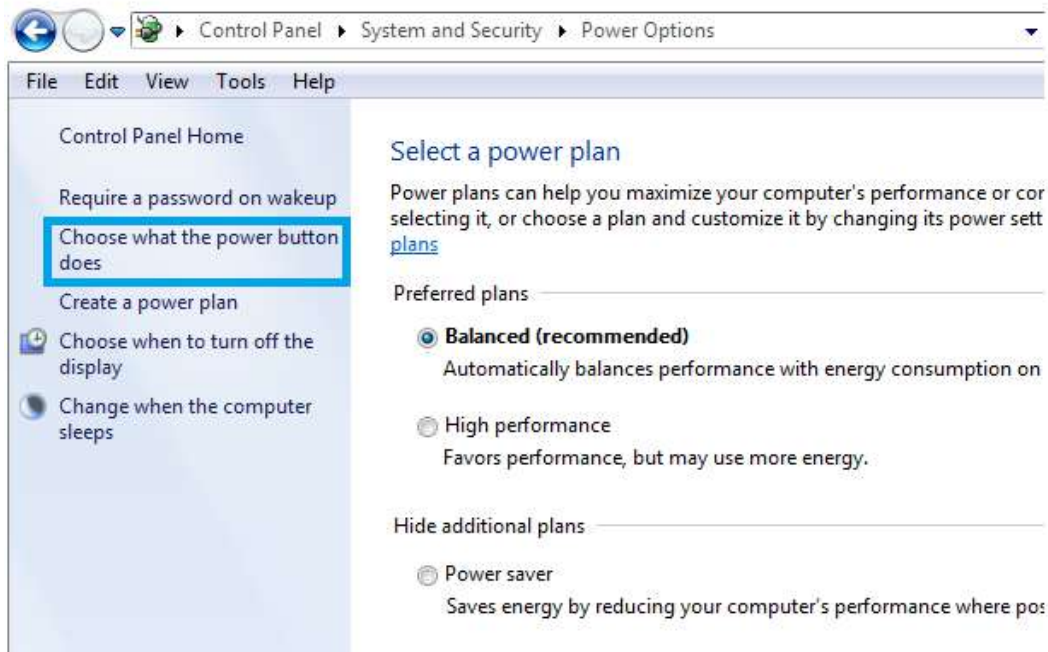

Set the "When I press the power button" configuration to "Shut down"

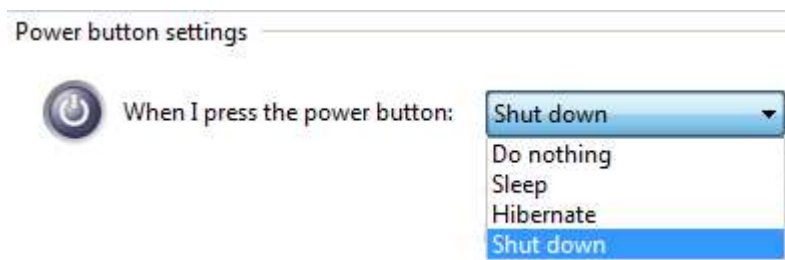




## 4 CAP Energy Management Technology ~ Power Backup Parameter Configurer

By controlling fundamental techniques such as charge/ discharge control, active load balance and DC/ DC regulation, Neousys is able to design and create a reliable ultracapacitor-based power backup system. However, the real challenge is how to get the most out of the capacitor energy while ensuring the system shuts down safely during a power blackout.

### 4.1 CAP Energy Management Technology

The patented architecture (R.O.C. patent I598820) incorporates a microprocessor along with ultracapacitors and charge/ discharge controller. The proprietary firmware embedded in the MCU not only monitors energy level continuously, it also automatically initiates soft-shutdown to prevent data loss/ corruption.

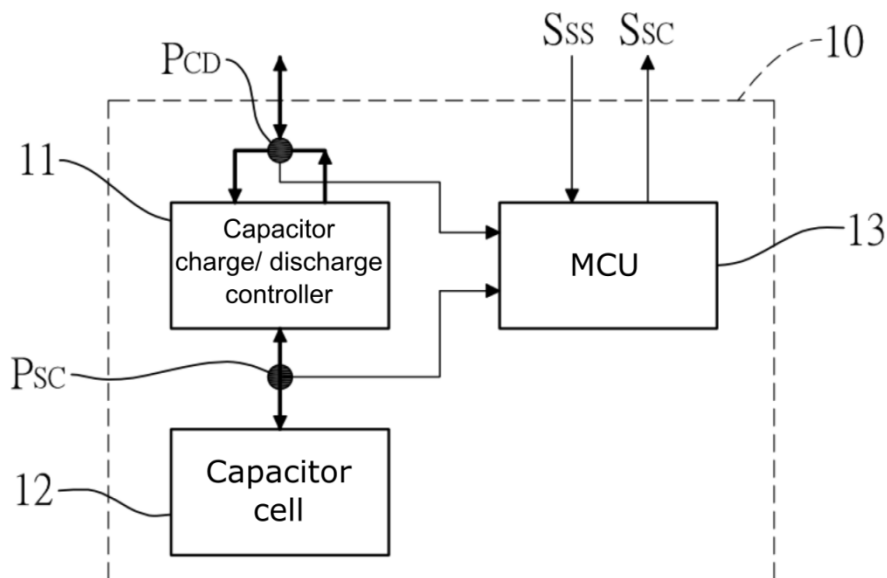

By providing sophisticated real-time energy monitoring, high/ low voltage protection and auto/ manual shutdown control, the dedicated interface help users better manage and efficiently utilize their PB-9250J/ 4600J. The software can also extend the lifespan of ultracapacitors up to 4.8x by controlling charge/ discharge cycles.


## 4.2 Power Backup Parameter Configurer

### 4.2.1 Executing Power Backup Parameter Configurer

The Power Backup Parameter Configurer is an application that allows the user to monitor and manage the connected PB-9250J/ 4600J.

Once you have setup PB-9250J/ 4600J and have connected it to the host controller COM port (configured in RS-232 mode). You may run it by double clicking the exe file.


### 4.2.2 Connecting to COM 1 Port on Host Computer



**NOTE**


Please make sure the host system's COM port is configured to operate in RS-232 mode.

By default, Neousys\_PB\_Configurer.exe is designed to communicate with PB-9250J/ 4600J via COM 1 port of the connected host computer. When successfully connected, the configurer should look similar to the following illustration.

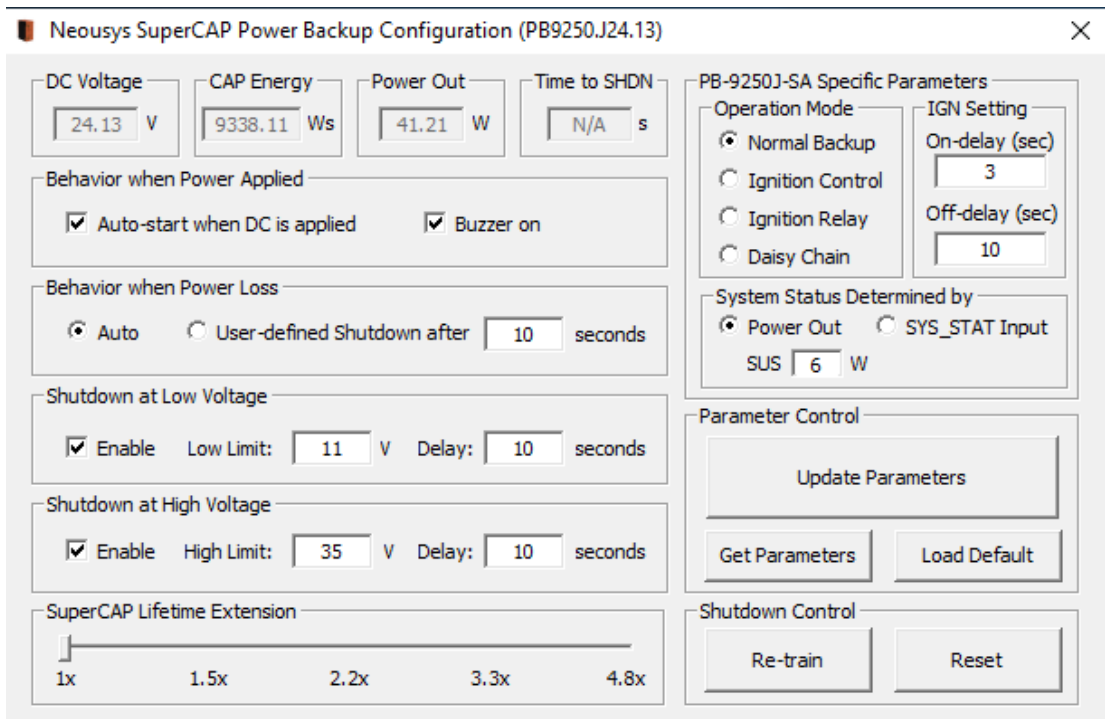

### 4.2.3 Connecting to a Different COM Port on Host Computer

If you wish to connect to another COM port (COM2, 3 or 4), you will need to reconfigure the connection setting or the configurer will read false readings (F/W Version, DC Voltage, CAP Energy) upon initial connection.

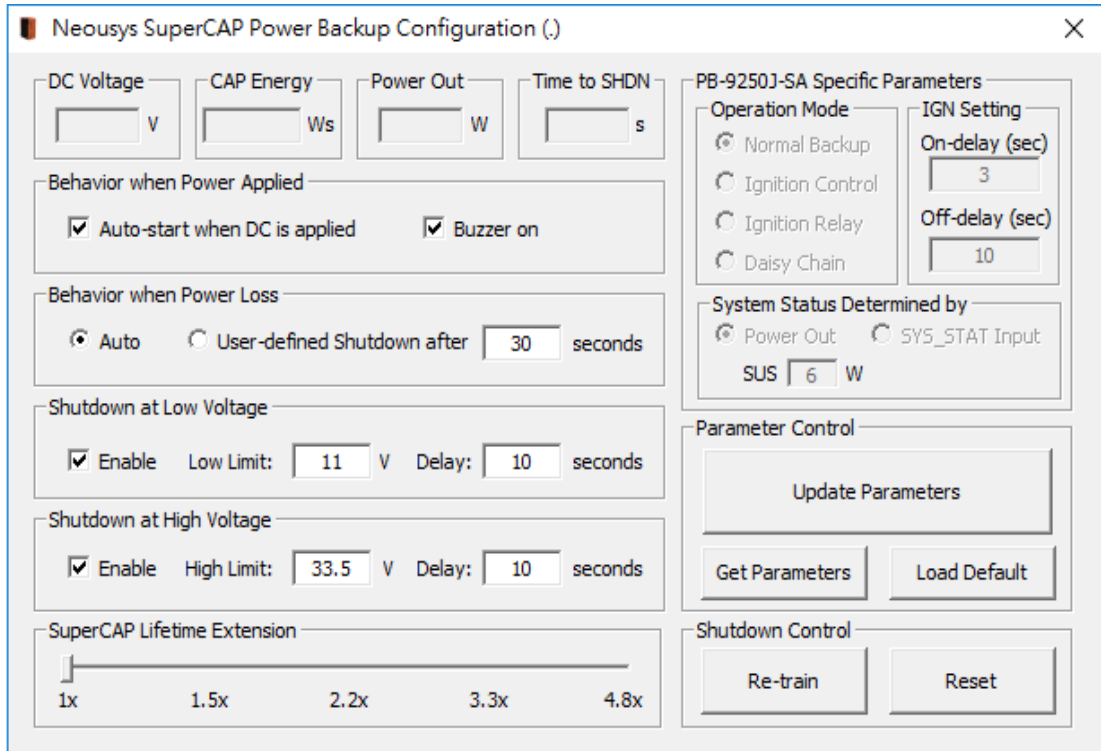

To complete the connection switch to the new COM port, the following steps must be performed in order for the system to read PB-9250J/ 4600J parameters.

1. Press Windows key
2. In the “Search programs and files” column, type in “cmd” and press Ctrl+Shift+Enter to run the “command line dialogue” with administrative rights
3. Change directory to where PB\_Configurer.J25.19.exe can be located. For example, with the file PB\_Configurer.J25.19.exe placed in the desktop and the newly connected port on the host computer is COM3.

```

C:\Windows\system32\cmd.exe
Microsoft Windows [Version 10.0.17763.107]
(c) 2018 Microsoft Corporation. All rights reserved.

C:\Users\NV7K>cd Desktop
C:\Users\NV7K\Desktop>
  
```

- Type in "PB\_Configurer.J25.19.exe com3" (.exe file name + COM port number connected) and press Enter.


```

C:\Windows\system32\cmd.exe
Microsoft Windows [Version 10.0.17763.503]
(c) 2018 Microsoft Corporation. All rights reserved.


C:\Users\NV7K>cd Desktop

C:\Users\NV7K\Desktop>PB_Configurer.J25.19.exe com3
  
```

- Once the command has been issued, all parameters should be updated accordingly. If not, press "Get Parameters" on the configurator to acquire statuses.

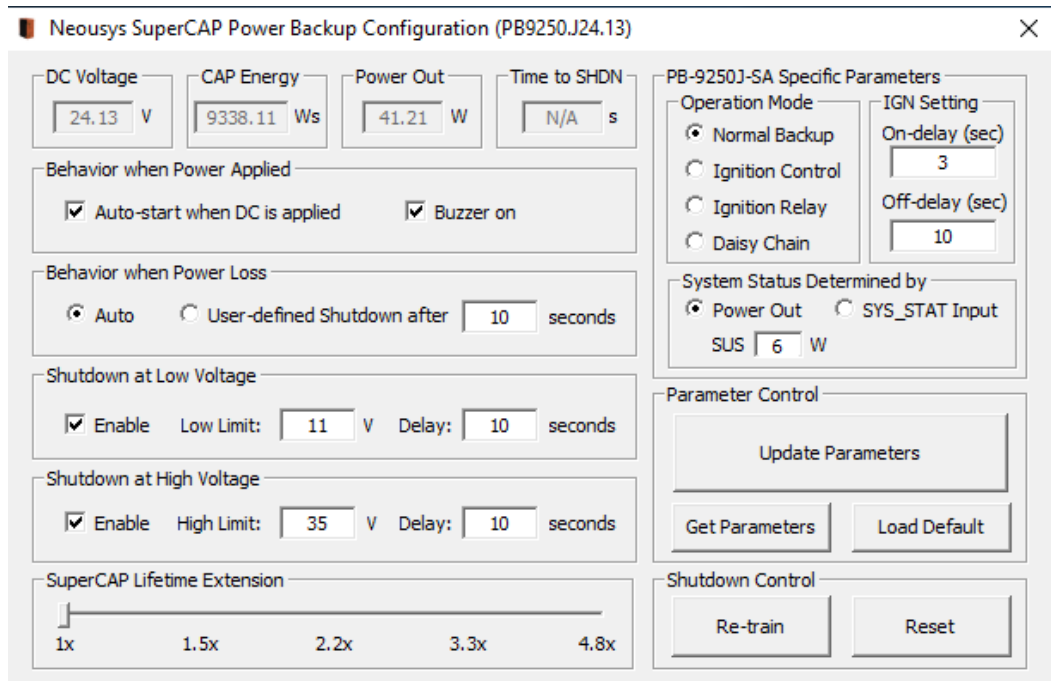


### 4.2.4 Power Backup Parameter Configurer Overview

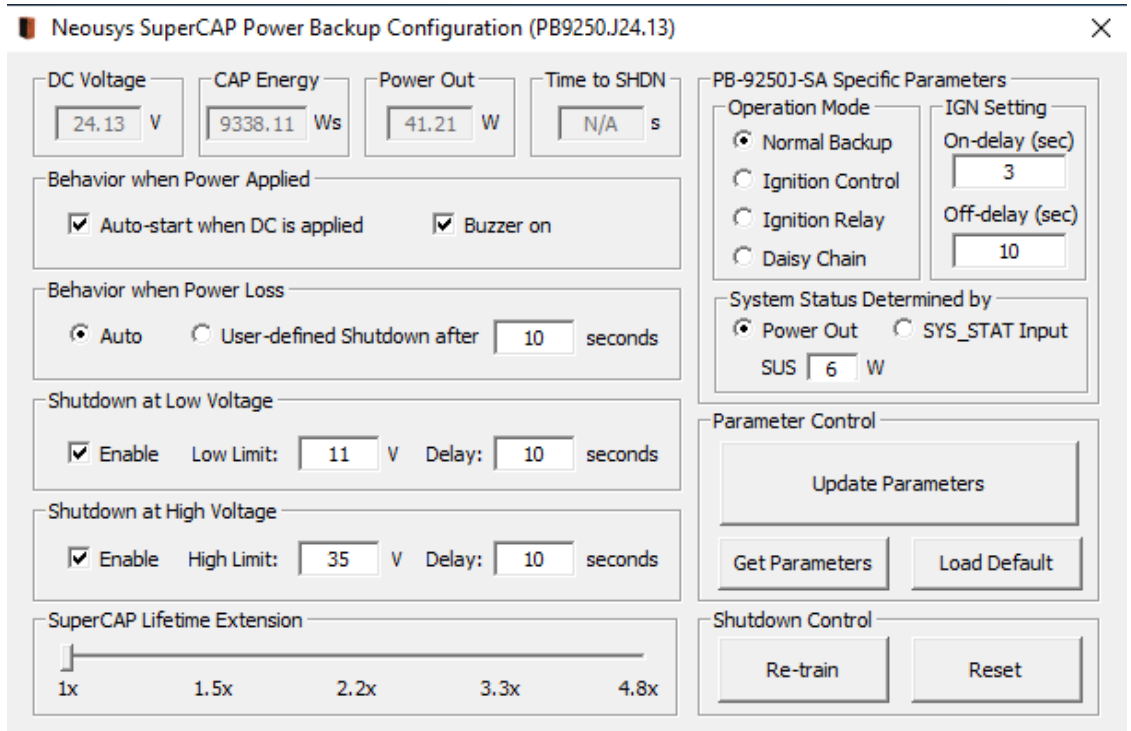

Item	Description		
DC Voltage	Shows the current input voltage of your PB-9250J.		
CAP Energy	Shows the current charged energy status (rated 9250Ws Max.).		
Power Output	Shows the power draw of the back-end system.		
Time to SHDN	Shows the time in seconds, before shutdown is initiated.		
Parameter Configurer	Behavior when Power Applied	Auto start the back-end system once PB-9250J has been fully charged in Normal Backup Mode.	
	Behavior for Power Loss	This allows you to set the delay time (in seconds) to shutdown when DC voltage drops below 11V.	
	Shutdown at Low Voltage	This allows you set the low voltage limit and delay time (in seconds) to shutdown (Note: <b>DO NOT</b> set voltage lower than 11V).	
	Shutdown at High Voltage	This allows you set the high voltage limit and delay time (in seconds) to shutdown (Note: <b>DO NOT</b> set voltage higher than 35V).	
	Operation Mode	<a href="#">Normal Backup Mode</a>	PB-9250J/ 4600J to operate in Normal Backup Mode when connected accordingly
		<a href="#">Ignition Control Mode</a>	PB-9250J/ 4600J to operate in Ignition Control Mode when connected accordingly
		<a href="#">Ignition Relay Mode</a>	PB-9250J/ 4600J to operate in Ignition Relay Mode when connected accordingly
		<a href="#">Daisy Chain Mode</a>	PB-9250J to operate in Daisy Chain Mode when connected accordingly
	IGN Setting	On-delay (sec)	This allows you to set the IGN delay time (in seconds) to turn on the system when PB-9250J/ 4600J is configured in Ignition Control Mode.
		Off-delay (sec)	This allows you to set the IGN delay time (in seconds) to

		shutdown the system when PB-9250J/ 4600J is configured in Ignition Control Mode.
System Status Determined by	Power Out	Determines back-end system status via power draw/ consumption of back-end system. User can define the maximum standby power draw/ consumption SUS__W of the connected PC (ex. If SUS defined at 6W, PB-9250J/ 4600J will assume the PC is running when it detects the power output is greater than 6W).
	SYS_STAT Input	Determines back-end system status via digital input signal pair into PB-9250J/ 4600J (1: on/ 0: off).
Parameter Control	<p><b>Update Parameters:</b> Click on this button for new parameters to take effect.</p> <p><b>Get Parameters:</b> Click on this button to acquire current parameters.</p> <p><b>Load Default:</b> Clicking on this button to load default parameters.</p>	
Shutdown Control	<p><b>Re-train:</b> This button will re-train PB-9250J/ 4600J to be customized to the system's required shutdown time.</p> <p><b>Reset:</b> This button will reset (erase) previous Re-train shutdown settings.</p>	

## 4.2.5 Behavior when Power Applied

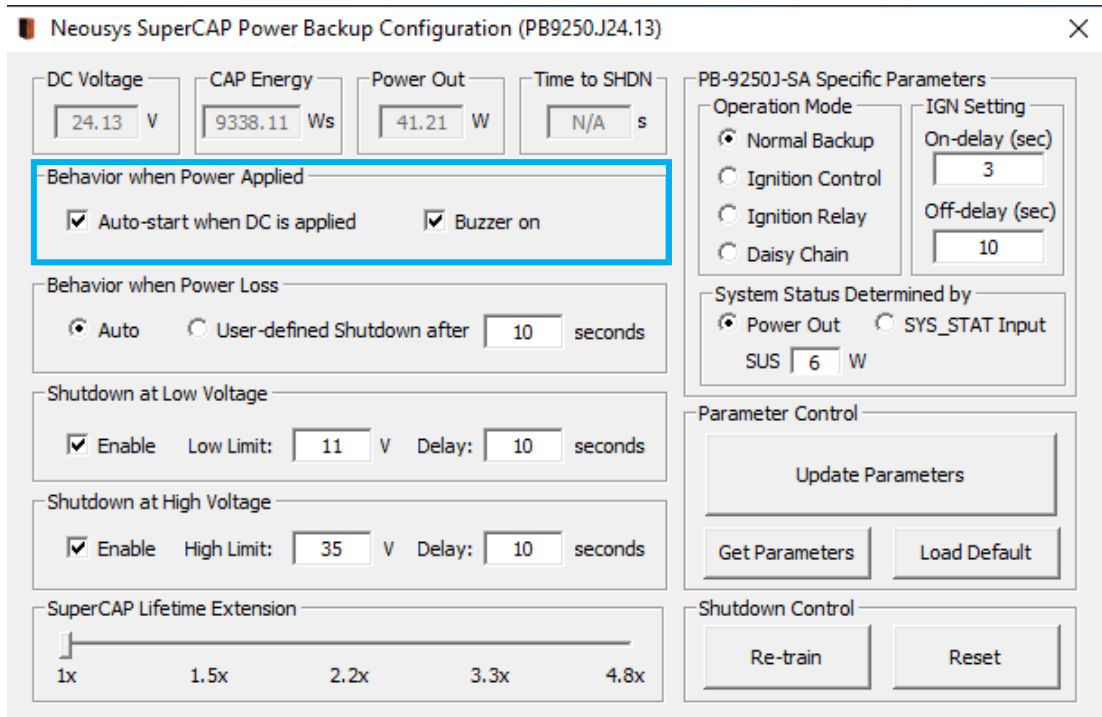

Neosys SuperCAP Power Backup Configuration (PB9250.J24.13)

DC Voltage: 24.13 V | CAP Energy: 9338.11 Ws | Power Out: 41.21 W | Time to SHDN: N/A s

**Behavior when Power Applied**

Auto-start when DC is applied |  Buzzer on

Behavior when Power Loss:  Auto |  User-defined Shutdown after 10 seconds

Shutdown at Low Voltage:  Enable | Low Limit: 11 V | Delay: 10 seconds

Shutdown at High Voltage:  Enable | High Limit: 35 V | Delay: 10 seconds

SuperCAP Lifetime Extension: 1x | 1.5x | 2.2x | 3.3x | 4.8x

PB-9250J-SA Specific Parameters

Operation Mode:  Normal Backup |  Ignition Control |  Ignition Relay |  Daisy Chain

IGN Setting: On-delay (sec): 3 | Off-delay (sec): 10

System Status Determined by:  Power Out |  SYS\_STAT Input

SUS: 6 W

Parameter Control: Update Parameters | Get Parameters | Load Default

Shutdown Control: Re-train | Reset

### Behavior when Power Applied

<b>Auto-start when Power applied</b>	If the “ <b>Auto-start</b> ” box is checked, the system will start after PB-9250J/ 4600J has been fully charged when DC applied.
	If the “ <b>Auto-start</b> ” box is not checked, once you have plugged in the 3-pin pluggable terminal block (applied DC power input) and PB-9250J/ 4600J is fully charged, you will need to press the power button to turn the system on.
<b>Buzzer on</b>	If the “ <b>Buzzer on</b> ” box is checked, a buzzer sound will sound as soon as the supercapacitors start to discharge (supplying power to the system).
	If the “ <b>Buzzer on</b> ” box is not checked, no buzzer sound will be made when the supercapacitors start to discharge.



#### NOTE

For new parameters to take effect, you must click on “[Update Parameters](#)” and follow procedure instructions. Please refer to the relevant section for details.

## 4.2.6 Behavior when Power Loss

Neosys SuperCAP Power Backup Configuration (PB9250J24.13) ✕

DC Voltage:  V

CAP Energy:  Ws

Power Out:  W

Time to SHDN:  s

Behavior when Power Applied

Auto-start when DC is applied     Buzzer on

Behavior when Power Loss

Auto     User-defined Shutdown after  seconds

Shutdown at Low Voltage

Enable    Low Limit:  V    Delay:  seconds

Shutdown at High Voltage

Enable    High Limit:  V    Delay:  seconds

SuperCAP Lifetime Extension

1x    1.5x    2.2x    3.3x    4.8x

PB-9250J-SA Specific Parameters

Operation Mode

Normal Backup     Ignition Control

Ignition Relay     Daisy Chain

IGN Setting

On-delay (sec):

Off-delay (sec):

System Status Determined by

Power Out     SYS\_STAT Input

SUS:  W

Parameter Control

Shutdown Control

### Behavior when Power Loss Settings

<b>Auto</b>	If the “Auto” box is selected, the delay shutdown time will be pre-determined by the MCU when you “Re-train” PB-9250J/ 4600J.
<b>User-defined Shutdown after _ seconds</b>	If the “User-defined Shutdown after _ seconds” is selected, when power loss, the shutdown process will be initiated by the user defined time in seconds.




#### NOTE

For new parameters to take effect, you must click on “[Update Parameters](#)” and follow procedure instructions. Please refer to the relevant section for details.



## 4.2.7 Shutdown at Low Voltage

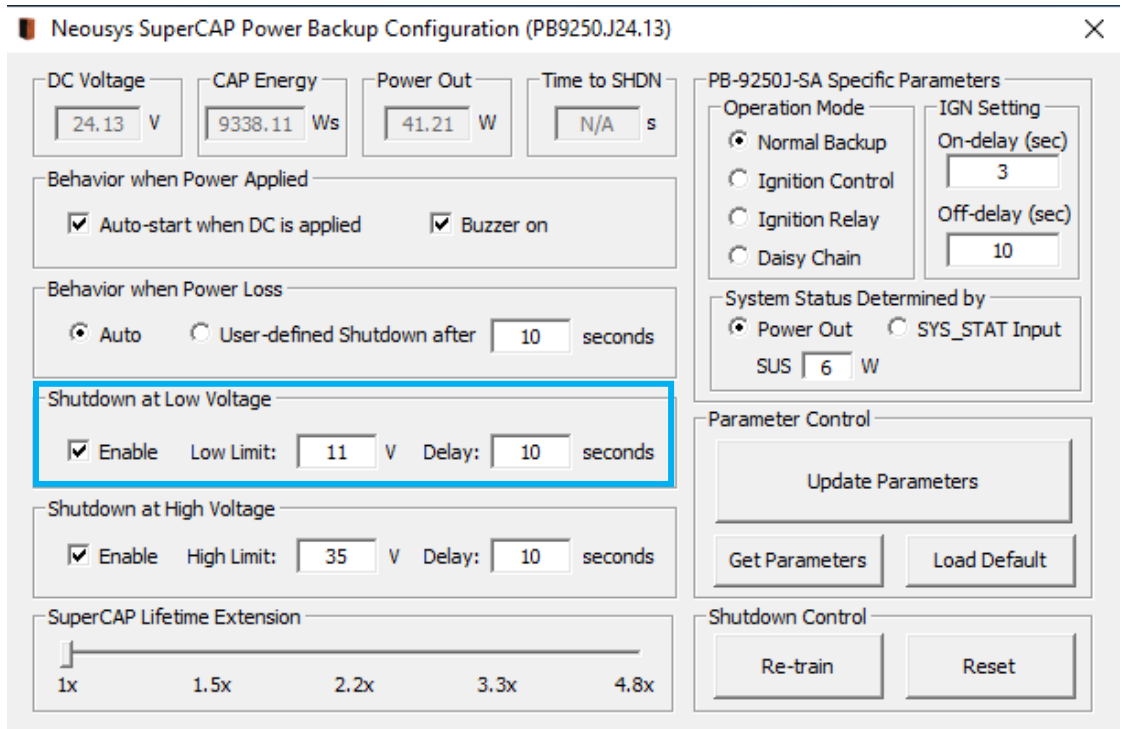

### Shutdown at low Voltage


<b>Enable</b>	If the “ <b>Enable</b> ” box is checked, the shutdown process will be determined by the Low Limit: _ V and Delay: _ seconds.
<b>Low Limit: _ V</b>	If the “ <b>Enable</b> ” box is checked, the shutdown process will be initiated by low voltage limit setting (Low Limit: _ V) and the Delay: _ seconds.
<b>Delay: _ seconds</b>	If the “ <b>Enable</b> ” box is checked, the shutdown process will be initiated after _ seconds (Delay: _ seconds) when the low voltage limit setting (Low Limit: _ V) is reached.



#### NOTE

For new parameters to take effect, you must click on “[Update Parameters](#)” and follow procedure instructions. Please refer to the relevant section for details.

## 4.2.8 Shutdown at High Voltage

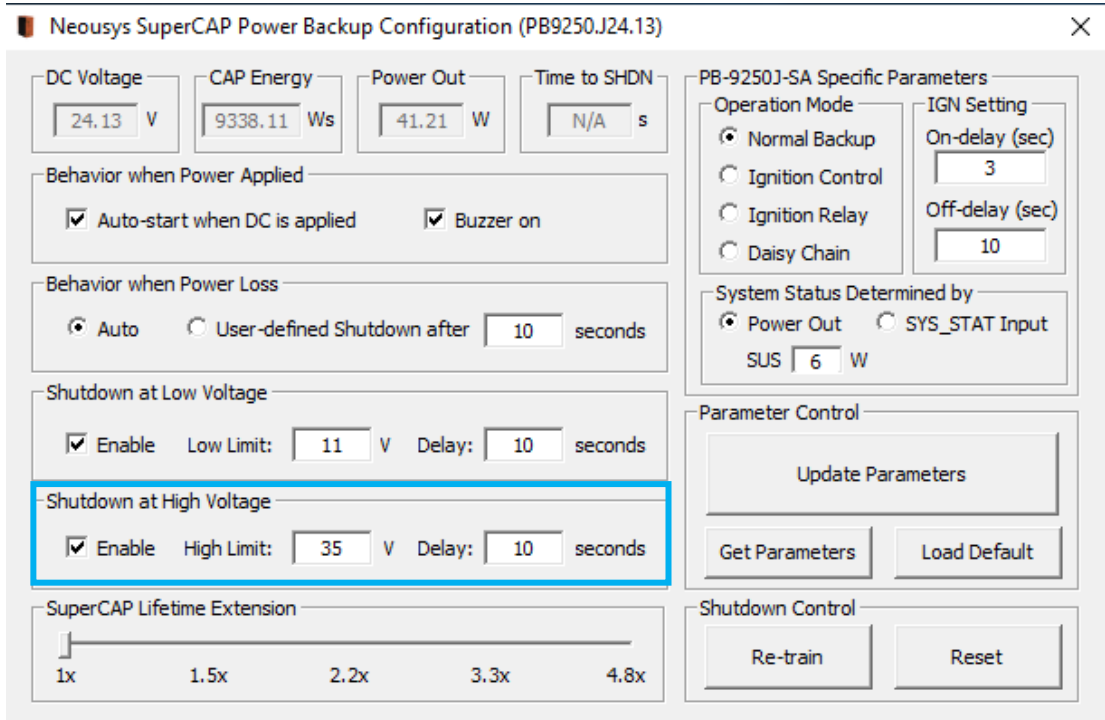

### Shutdown at High Voltage


<b>Enable</b>	If the “ <b>Enable</b> ” box is checked, the shutdown process will be determined by the High Limit: _ V and Delay: _ seconds settings.
<b>High Limit: _ V</b>	If the “ <b>Enable</b> ” box is checked, the shutdown process will be initiated by high voltage limit setting (High Limit: _ V) and the Delay: _ seconds.
<b>Delay: _ seconds</b>	If the “ <b>Enable</b> ” box is checked, the shutdown process will be initiated after _ seconds (Delay: _ seconds) when the high voltage limit setting (High Limit: _ V) is reached.



#### NOTE

For new parameters to take effect, you must click on “[Update Parameters](#)” and follow procedure instructions. Please refer to the relevant section for details.

### 4.2.9 SuperCAP Lifetime Extension

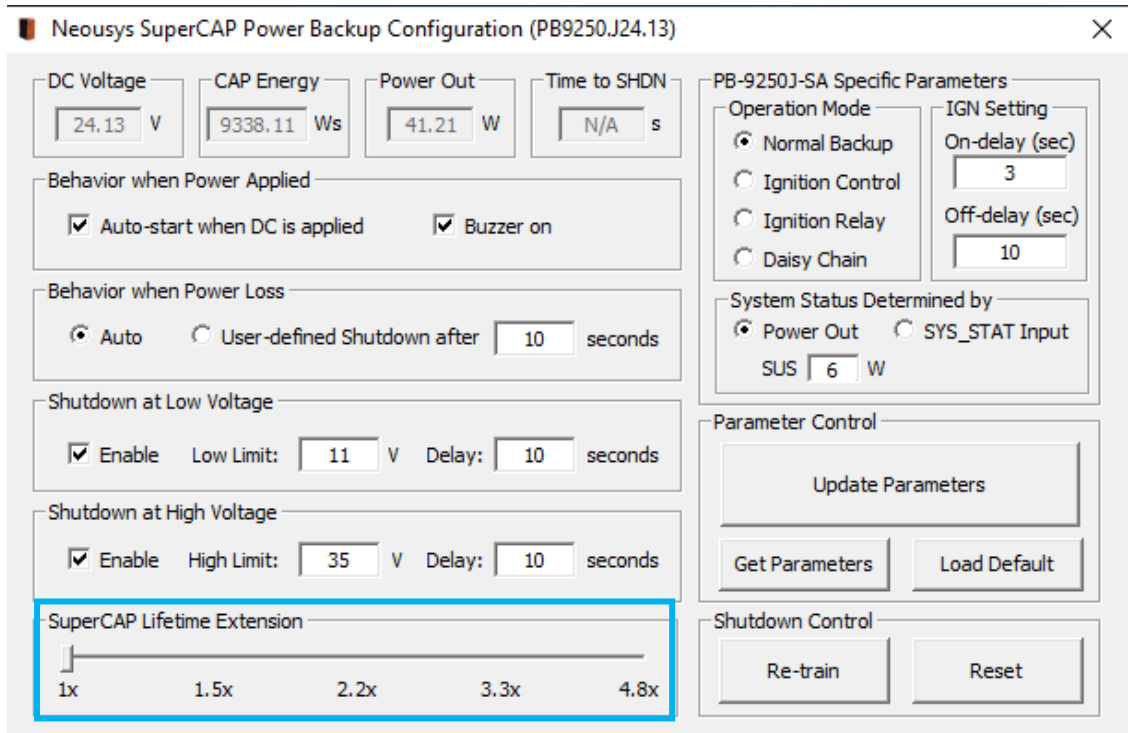


The SuperCAP lifetime extension setting is an automated setting when users only need to click on the bar, drag it to the desired lifetime extension setting, click on the “Update Parameters” and follow procedure instructions for settings to take effect.

#### SuperCAP Lifetime Extension

It is recommended to only use the SuperCAP Lifetime Extension to extend the lifetime if PB-9250J/ 4600J will be operating in high temperatures (>65°C) for long duration. The SuperCap lifetime can be extended by reducing SuperCap energy utilization. The following table shows the lifetime extension vs energy utilization vs hrs of operation (at 65°C)


SuperCAP Lifetime Extension	SuperCAP Energy Utilization (PB9250J-SA/ PB4600J-SA)	SuperCAP Operation Lifespan
1x	9250 w·s/ 4600 w·s	34,000 hrs
1.5x	8524 w·s/ 4240 w·s	51,000 hrs
2.2x	7820 w·s/ 3890 w·s	76,000 hrs
3.3x	7163 w·s/ 3560 w·s	> 10 years
4.8x	6525 w·s/ 3245 w·s	> 10 years



**NOTE**

For new parameters to take effect, you must click on “[Update Parameters](#)” and follow procedure instructions. Please refer to the relevant section for details.

### 4.2.10 Operation Mode

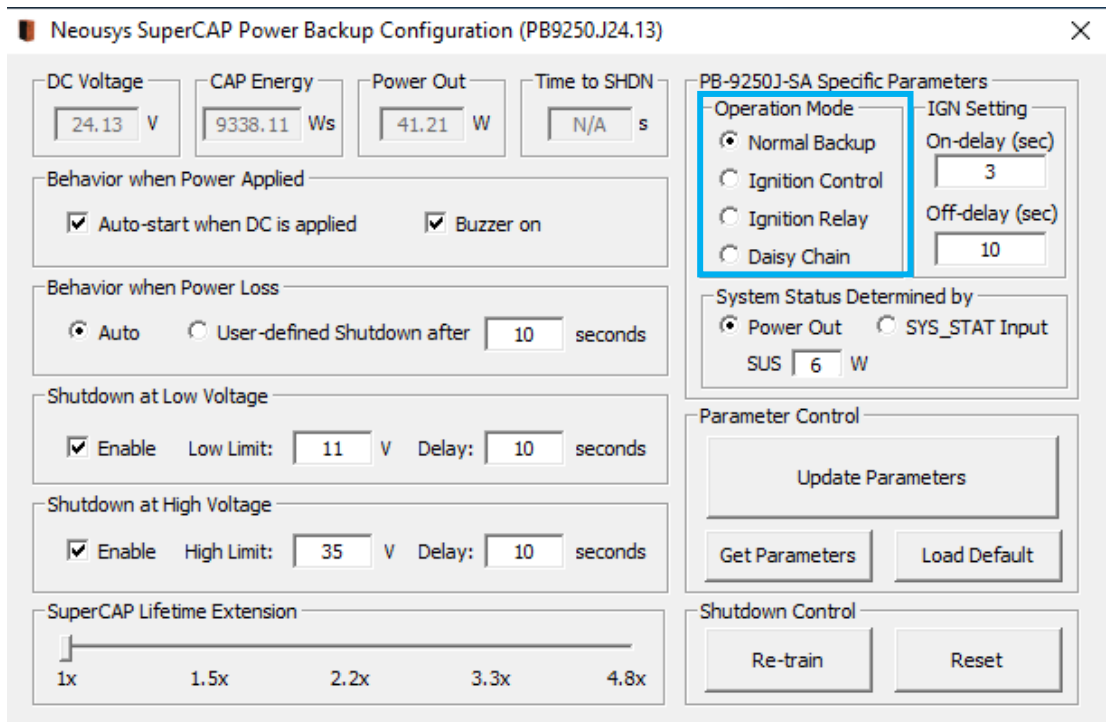

#### Operation Mode


<b>Normal Backup Mode</b>	If “ <b>Normal Backup Mode</b> ” box is selected, PB-9250J/ 4600J will operate in <a href="#">Normal Backup Mode</a> .
<b>Ignition Control Mode</b>	If “ <b>Ignition Control Mode</b> ” box is selected, PB-9250J/ 4600J will operate in <a href="#">Ignition Control Mode</a> .
<b>Ignition Relay Mode</b>	If “ <b>Ignition Relay Mode</b> ” box is selected, PB-9250J/ 4600J will operate in <a href="#">Ignition Relay Mode</a> .
<b>Daisy Chain Mode (applicable to PB-9250J-SA only)</b>	If “ <b>Daisy Chain Mode</b> ” box is selected, PB-9250J will operate in <a href="#">Daisy Chain Mode</a> .



#### NOTE

For new parameters to take effect, you must click on “[Update Parameters](#)” and follow procedure instructions. Please refer to the relevant section for details.

### 4.2.11 IGN Setting

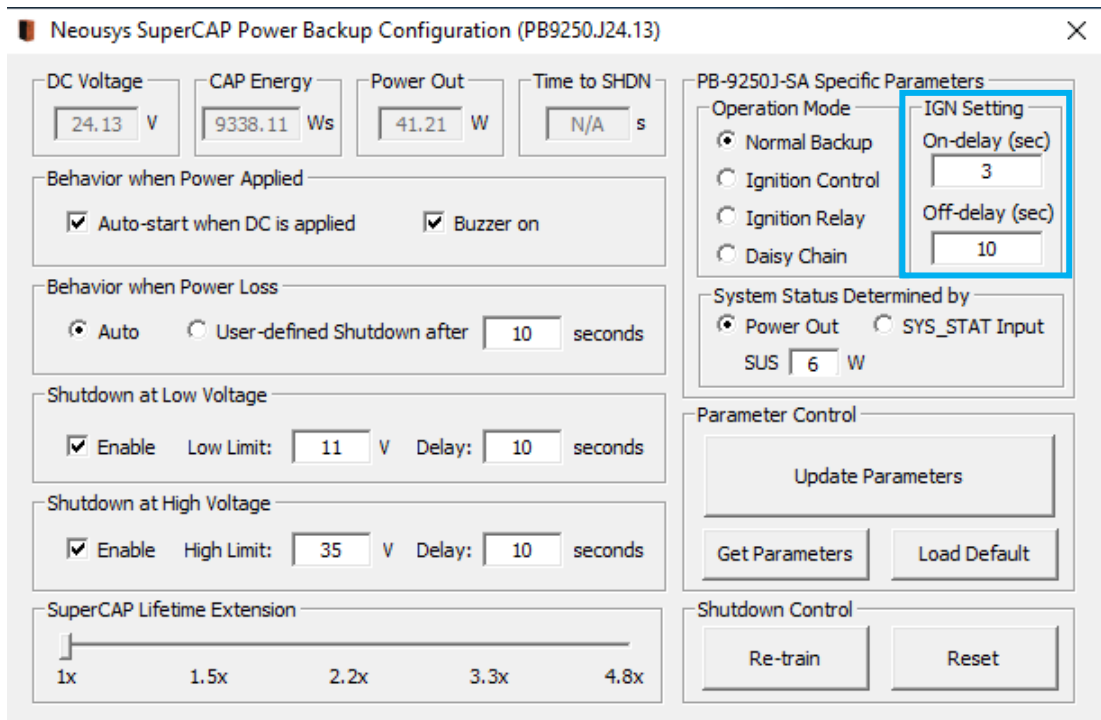

If PB-9250J/ 4600J is in Ignition Control Mode, user can set IGN on/off delay via IGN setting.


<b>On-delay (sec)</b>	The PWRBTN# signal will be sent after _ seconds (Delay: _ seconds) after PB-9250J/ 4600J is fully charged to turn on the back-end system.
<b>Off-delay (sec)</b>	The PWRBTN# signal will be sent after _ seconds (Delay: _ seconds) to turn off the back-end system after IGN in signal has been cut off.



#### NOTE

For new parameters to take effect, you must click on "[Update Parameters](#)" and follow procedure instructions. Please refer to the relevant section for details.

### 4.2.12 System Status Determined by

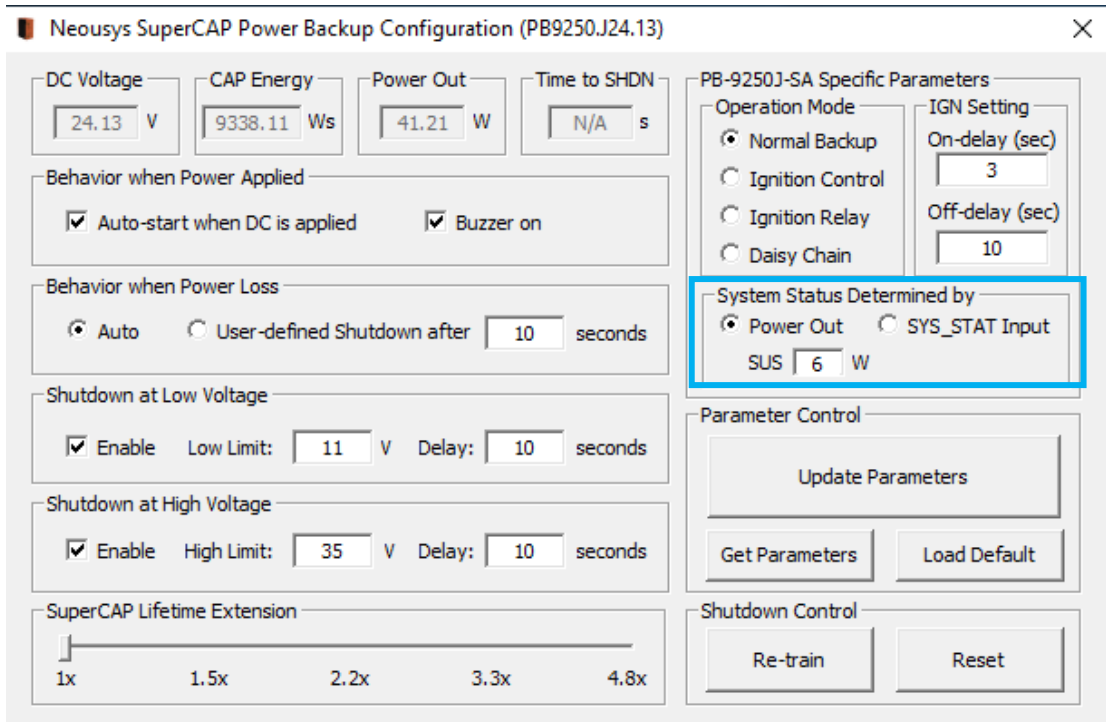

Neosys SuperCAP Power Backup Configuration (PB9250J24.13)

DC Voltage: 24.13 V | CAP Energy: 9338.11 Ws | Power Out: 41.21 W | Time to SHDN: N/A s

Behavior when Power Applied:  Auto-start when DC is applied |  Buzzer on

Behavior when Power Loss:  Auto |  User-defined Shutdown after 10 seconds

Shutdown at Low Voltage:  Enable | Low Limit: 11 V | Delay: 10 seconds

Shutdown at High Voltage:  Enable | High Limit: 35 V | Delay: 10 seconds

SuperCAP Lifetime Extension: 1x | 1.5x | 2.2x | 3.3x | 4.8x

PB-9250J-SA Specific Parameters

Operation Mode:  Normal Backup |  Ignition Control |  Ignition Relay |  Daisy Chain

IGN Setting: On-delay (sec): 3 | Off-delay (sec): 10

System Status Determined by:  Power Out |  SYS\_STAT Input  
SUS: 6 W

Parameter Control: Update Parameters | Get Parameters | Load Default

Shutdown Control: Re-train | Reset

PB-9250J/ 4600J has to monitor back-end system status (whether it's on or off) in order to make the right operation in different situation.


<b>Power Out</b>	System status is determined by the power draw/ consumption of back-end system. User can define the maximum standby power draw/ consumption SUS__W of the connected PC (ex. If SUS defined at 6W, PB-9250J/ 4600J consider the PC running when it detects the power output is greater than 6W).
<b>SYS_STAT Input</b>	System status is determined by the input digital signal pair given by back-end system (1: on/ 0: off).



**NOTE**


For new parameters to take effect, you must click on "[Update Parameters](#)" and follow procedure instructions. Please refer to the relevant section for details.

### 4.2.13 Update Parameters

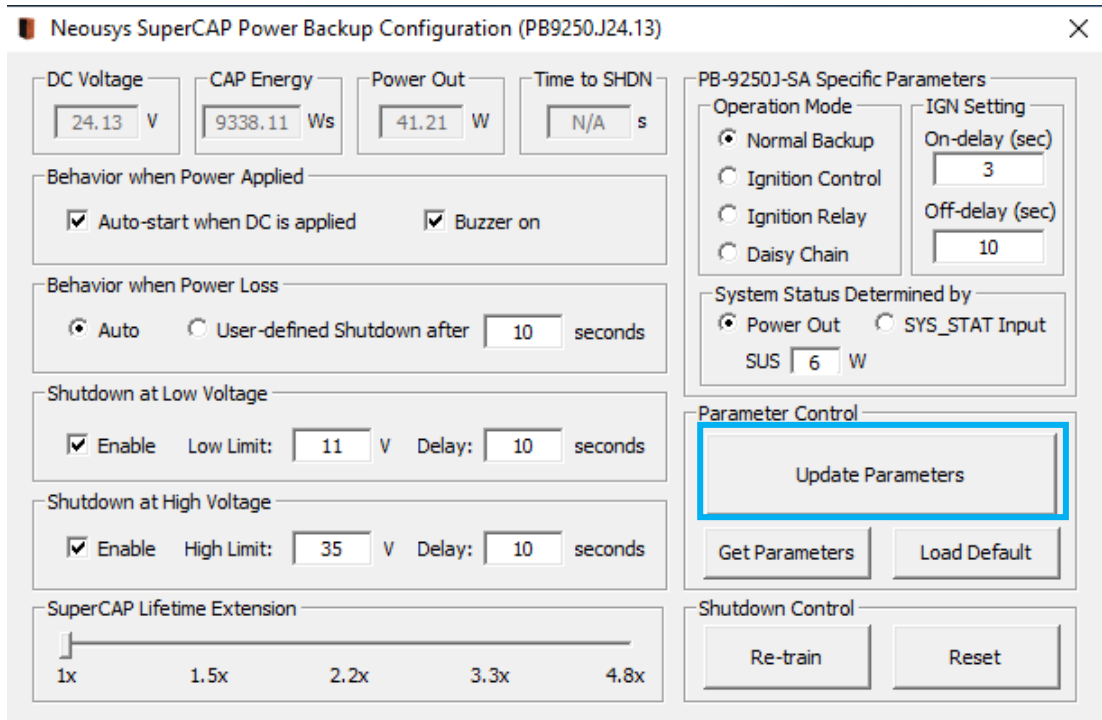


Whenever you enter/ adjust a new parameter or parameters, for the new settings to take effect, you must perform the following steps:

1. Click on the “Update Parameters” button and the following dialogue will appear.

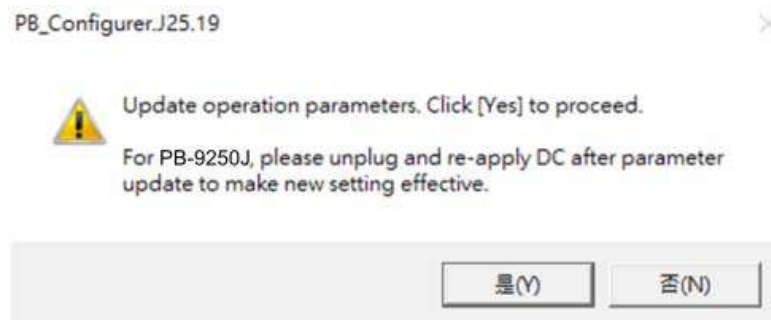

2. Click on yes, PB-9250J/ 4600J will automatically shutdown the system.
3. Once the system has shut down, it should wait for 1~3 sec for PB-9250J/ 4600J to reset.
4. After PB-9250J/ 4600J reset, system will auto start again.

#### 4.2.14 Get Parameters

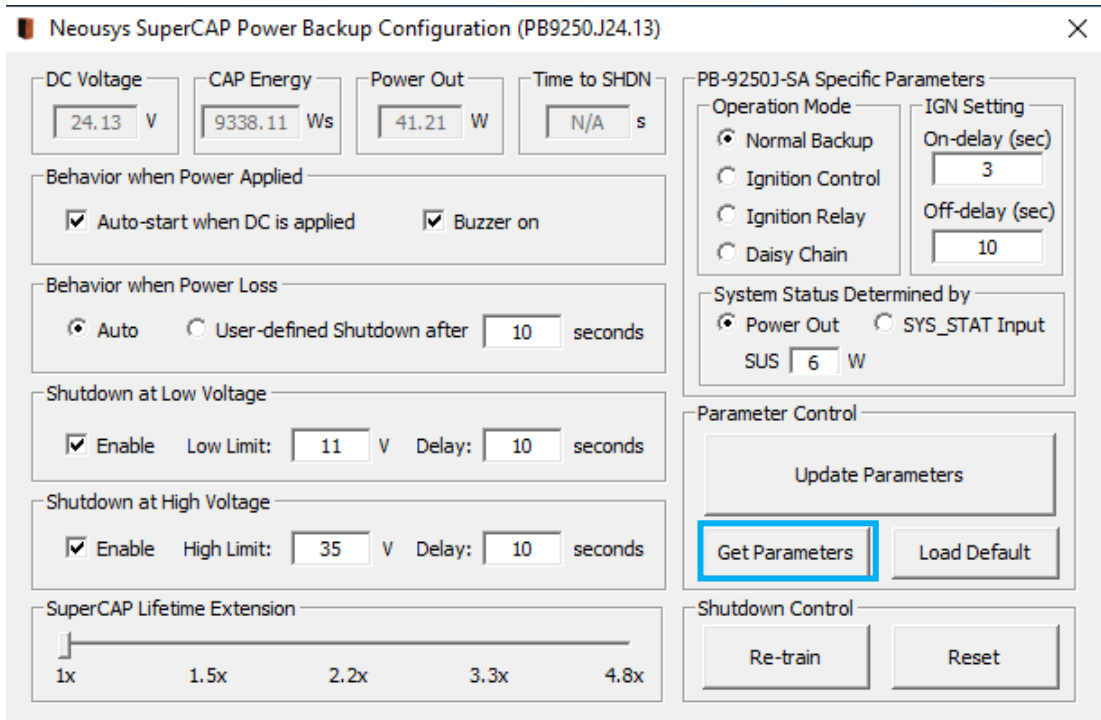

Neosys SuperCAP Power Backup Configuration (PB9250.J24.13)

DC Voltage: 24.13 V | CAP Energy: 9338.11 Ws | Power Out: 41.21 W | Time to SHDN: N/A s

Behavior when Power Applied:  Auto-start when DC is applied |  Buzzer on

Behavior when Power Loss:  Auto |  User-defined Shutdown after 10 seconds

Shutdown at Low Voltage:  Enable | Low Limit: 11 V | Delay: 10 seconds

Shutdown at High Voltage:  Enable | High Limit: 35 V | Delay: 10 seconds

SuperCAP Lifetime Extension: 1x | 1.5x | 2.2x | 3.3x | 4.8x

PB-9250J-SA Specific Parameters

Operation Mode:  Normal Backup |  Ignition Control |  Ignition Relay |  Daisy Chain

IGN Setting: On-delay (sec): 3 | Off-delay (sec): 10


System Status Determined by:  Power Out |  SYS\_STAT Input | SUS: 6 W

Parameter Control: Update Parameters | **Get Parameters** | Load Default

Shutdown Control: Re-train | Reset

Click on “Get Parameters” to manually acquire the current PB-9250J/ 4600J status for DC voltage, current stored CAP energy and power output.

#### 4.2.15 Load Default

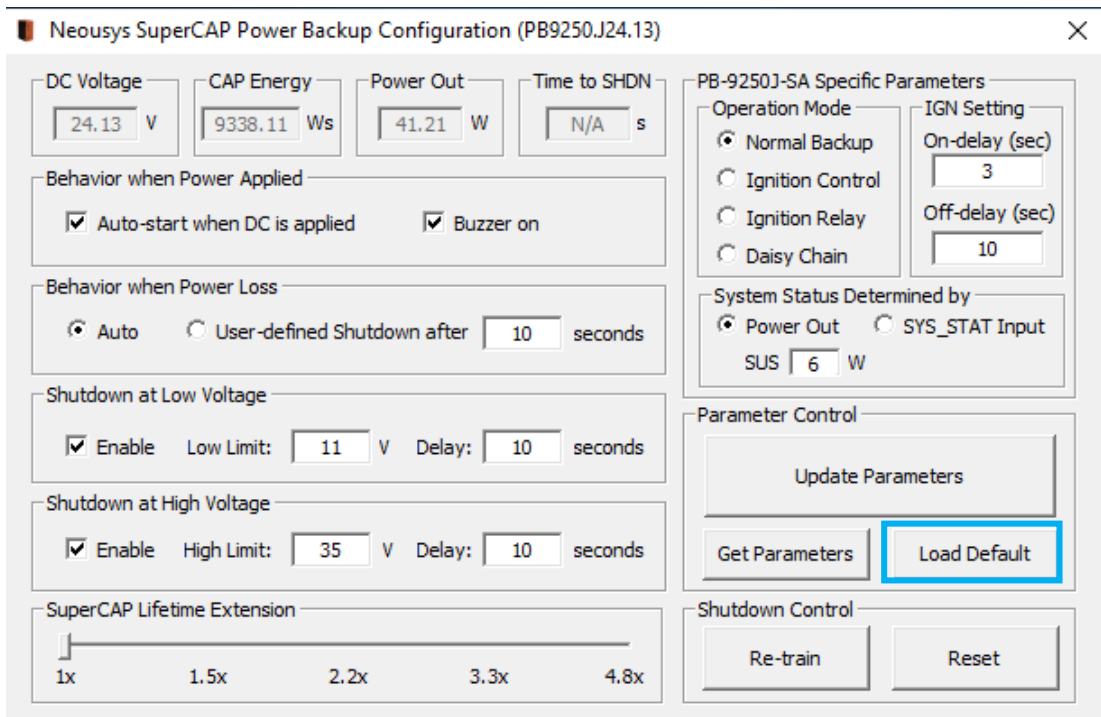

Neosys SuperCAP Power Backup Configuration (PB9250.J24.13)

DC Voltage: 24.13 V | CAP Energy: 9338.11 Ws | Power Out: 41.21 W | Time to SHDN: N/A s

Behavior when Power Applied:  Auto-start when DC is applied |  Buzzer on

Behavior when Power Loss:  Auto |  User-defined Shutdown after 10 seconds

Shutdown at Low Voltage:  Enable | Low Limit: 11 V | Delay: 10 seconds

Shutdown at High Voltage:  Enable | High Limit: 35 V | Delay: 10 seconds

SuperCAP Lifetime Extension: 1x | 1.5x | 2.2x | 3.3x | 4.8x

PB-9250J-SA Specific Parameters

Operation Mode:  Normal Backup |  Ignition Control |  Ignition Relay |  Daisy Chain

IGN Setting: On-delay (sec): 3 | Off-delay (sec): 10

System Status Determined by:  Power Out |  SYS\_STAT Input | SUS: 6 W


Parameter Control: Update Parameters | Get Parameters | **Load Default**

Shutdown Control: Re-train | Reset

You may set PB-9250J/ 4600J back to the original settings by clicking on “Load Default” to reset all changes you have made previously.



### 4.2.16 Re-train

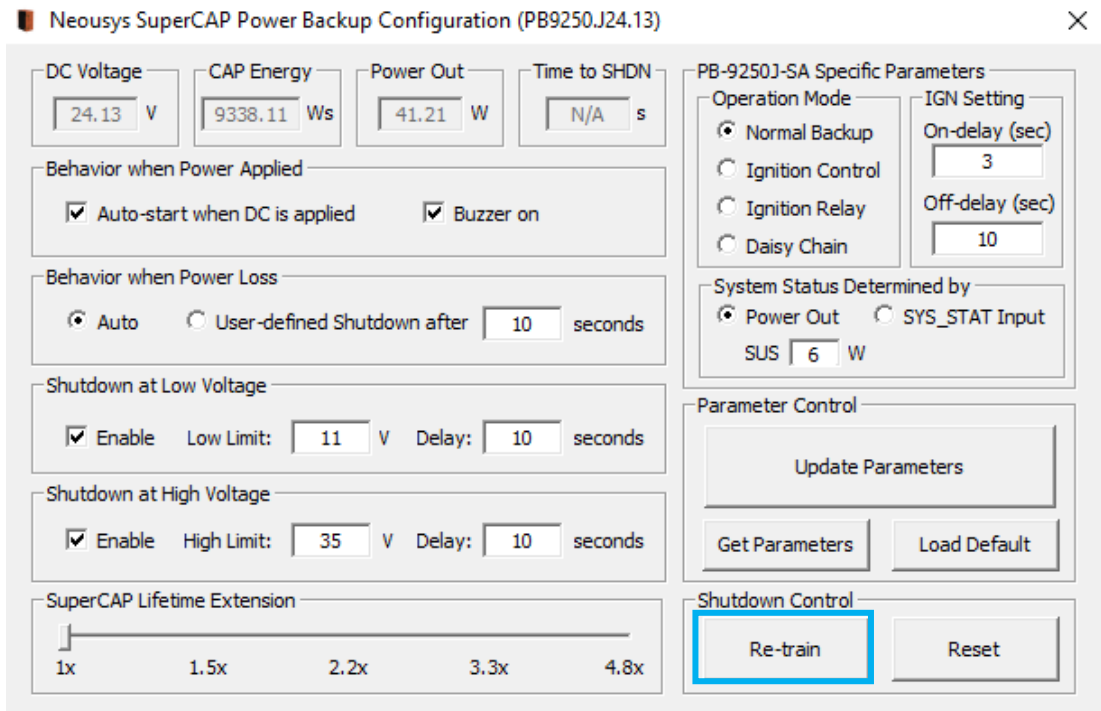


The screenshot shows the configuration interface for the Neosys SuperCAP Power Backup. The title bar reads "Neosys SuperCAP Power Backup Configuration (PB9250.J24.13)". The interface is divided into several sections:

- DC Voltage:** 24.13 V
- CAP Energy:** 9338.11 Ws
- Power Out:** 41.21 W
- Time to SHDN:** N/A s
- Behavior when Power Applied:**  Auto-start when DC is applied,  Buzzer on
- Behavior when Power Loss:**  Auto,  User-defined Shutdown after 10 seconds
- Shutdown at Low Voltage:**  Enable, Low Limit: 11 V, Delay: 10 seconds
- Shutdown at High Voltage:**  Enable, High Limit: 35 V, Delay: 10 seconds
- SuperCAP Lifetime Extension:** A slider set to 1x, with markers at 1x, 1.5x, 2.2x, 3.3x, and 4.8x.
- PB-9250J-SA Specific Parameters:**
  - Operation Mode:**  Normal Backup,  Ignition Control,  Ignition Relay,  Daisy Chain
  - IGN Setting:** On-delay (sec) 3, Off-delay (sec) 10
  - System Status Determined by:**  Power Out,  SYS\_STAT Input, SUS 6 W
- Parameter Control:** Update Parameters, Get Parameters, Load Default
- Shutdown Control:** Re-train (highlighted with a blue box), Reset

The Re-train function is to customize the PB-9250J/ 4600J to your system’s required shutdown time! By clicking on “Re-train”, a shutdown action will be initiated so the time required to shutdown can be memorized.

### 4.2.17 Reset

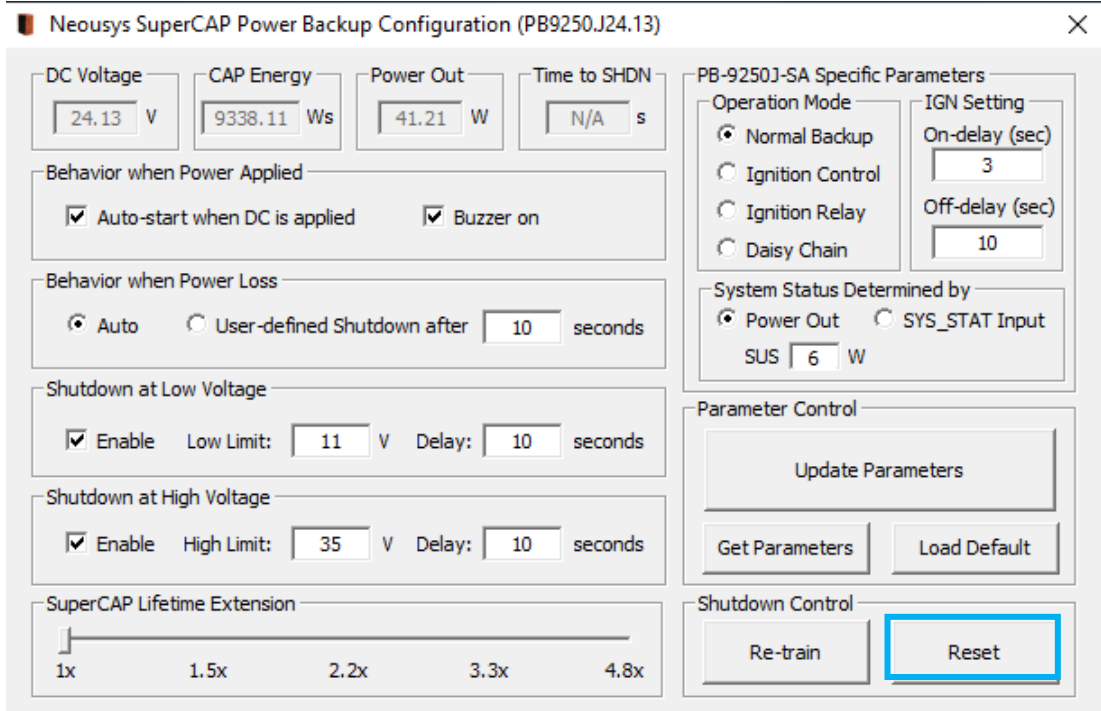

This screenshot is identical to the one above, showing the same configuration interface. In this view, the "Reset" button in the "Shutdown Control" section is highlighted with a blue box, indicating the action to be taken.

By clicking on Reset, it will erase all previous Re-train settings and hence result in faster shutdown when a command is issued.

### 4.3 PB-9250J-SA Estimated Extended Operation Time

Utilizing state-of-the-art supercapacitor technology, the Neosys PB-9250J-SA is a standalone power backup module that can protect your box-PC against power outages. It can reliably operate in harsh environments from -25 to 65°C, and have extremely high durability lasting up to 10 years. It serves as a maintenance-free energy storage and uninterruptible power supply to your connected back-end system and can prevent data loss during power outage in harsh industrial environments!

Below is an estimated extended operation time one can expect for the connected back-end system during unforeseen power outage events. The actual extended operation time may vary depending on your connected back-end system hardware configuration.

Power consumption of back-end system	Backup Time
0~50 watts	130~680 seconds
50~100 watts	60~130 seconds
100~150 watts	30~60 seconds
150~200 watts	15~30 seconds