

USER'S MANUAL

Industrial Device Server IDS-3042W Wireless Series

Ver. 1.0, Jan. 2008



CE FC

Table of Content

1. Getting to Know Your Device Server	3
1.1 About the IDS-3042W Serial Device Server.....	3
1.2 Software Features.....	3
1.3 Hardware Features.....	3
2. Hardware Installation	4
2.1 Install IDS-3042W on DIN-Rail.....	4
2.1.1 MOUNT IDS-3042W ON DIN-RAIL	4
2.2 Wall Mounting Installation	5
2.2.1 MOUNT IDS-3042W ON WALL	5
3. Hardware Overview	7
3.1 Front Panel	7
3.2 Front Panel LEDs.....	8
3.3 Serial Ports	8
3.4 Bottom Panel.....	9
3.5 Rear Panel	9
4. Cables	11
4.1 Ethernet Cables	11
5. Management Interface	12
5.1 IDS-Tools	12
5.1.1 INSTALL IDS-TOOLS	12
5.1.2 USING IDS-TOOLS	12
5.1.2.1 Explore IDS device servers.....	12
5.1.2.2 Configure IDS device servers.....	13
5.1.2.3 Configure serial port	19
5.2 Configuration by Web Browser.....	25
5.2.1 CONNECT TO THE WEB PAGE.....	25
5.2.1.1 System.....	25
5.2.1.2 Port serial setting.....	28
5.2.1.3 Management	31
5.2.1.4 Save/Reboot	35
5.3 Configuration by SSH Console.....	35
5.3.1 CONNECT TO IDS	35
6. Technical Specifications	36

1

Getting to Know Your Device Server

1.1 About the IDS-3042W Serial Device Server



4-port wireless series is an innovative 4 ports RS232/422/485 to 802.11b/g WLAN and 2 ports LAN device server. Users are able to configure the Switch by IDS-Tools via LAN port or WLAN interface, but not simultaneously. Once LAN port is activated, WLAN interface will enter standby mode to minimize power consumption. 4-port wireless series offers many powerful features for HW & SW redundant functions. When the connection between master-link and LAN fails, 4-port wireless series can automatically switch to another LAN port within 10mS, and still guarantees a non-stop connection. 4-port wireless series also supports switch mode, users can use Daisy Chain to reduce the usage of Ethernet switch ports. Secondly, 4-port wireless series can simultaneously transfer data into 5 host PCs. This feature can assure all critical data that saved in different host PCs to avoid Ethernet break or host PCs failure. Thirdly, 4-port wireless series provides dual redundant power inputs on terminal block. 4-port wireless series also provides NAT pass through function so that users are able to manage 4-port wireless series inside or outside the NAT router. It is easy for different IP domain users to use 4-port wireless series. Therefore, 4-port wireless series is the best communication solution for wireless application of quad-port serial devices.

1.2 Software Features

- Redundant Dual Ethernet Ports: Recovery time < 10ms
- Switch Mode Supported: Daisy Chain support to reduce usage of switch ports
- High Speed Air Connectivity: WLAN interface support up to 54Mbps link speed
- Highly Security Capability: WEP/WPA/WPA2/802.1X/Radius/TKIP supported
- NAT-pass through: User can manage 4-port wireless series through NAT router
- Redundant Power Inputs: 12~48VDC on terminal block
- Redundant multiple host devices: 5 simultaneous in Virtual COM, TCP Server, TCP Client mode, UDP
- Secured Management by HTTPS and SSH
- Versatile Modes: Virtual Com, Serial Tunnel, TCP Server, TCP Client, UDP
- Event Warning by Syslog, Email, SNMP trap, Relay and Beeper
- Various Windows O.S. supported: Windows NT/2000/ XP/ 2003/VISTA

1.3 Hardware Features

- Redundant Power Inputs: 12~48 VDC on terminal block and power jack
- Operating Temperature: -10 to 55°C
- Storage Temperature: -20 to 85°C
- Operating Humidity: 5% to 95%, non-condensing
- Casing: IP-30
- 2 10/100Base-T(X) Ethernet port
- Dimensions(W x D x H) : 52 mm(W)x 106 mm(D)x 144 mm(H)

2

Hardware Installation

2.1 Install IDS-3042W on DIN-Rail


Each IDS-3042W has a Din-Rail kit on rear panel. The Din-Rail kit helps IDS-3042W to fix on the Din-Rail. It is easy to install the IDS-3042W on the Din-Rail:

2.1.1 MOUNT IDS-3042W ON DIN-RAIL

Step 1: Slant the IDS-3042W and mount the metal spring to Din-Rail.



Step 2: Push the IDS-3042W toward the Din-Rail until you heard a “click” sound.

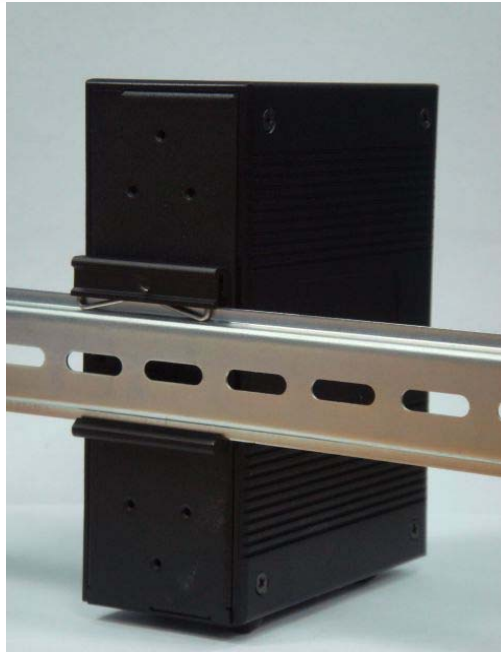


2.2 Wall Mounting Installation

Each IDS-3042W has another installation method for you. A wall mount panel can be found in the package. The following steps show how to mount the IDS-3042W on the wall:

2.2.1 MOUNT IDS-3042W ON WALL


Step 1: Remove Din-Rail kit.

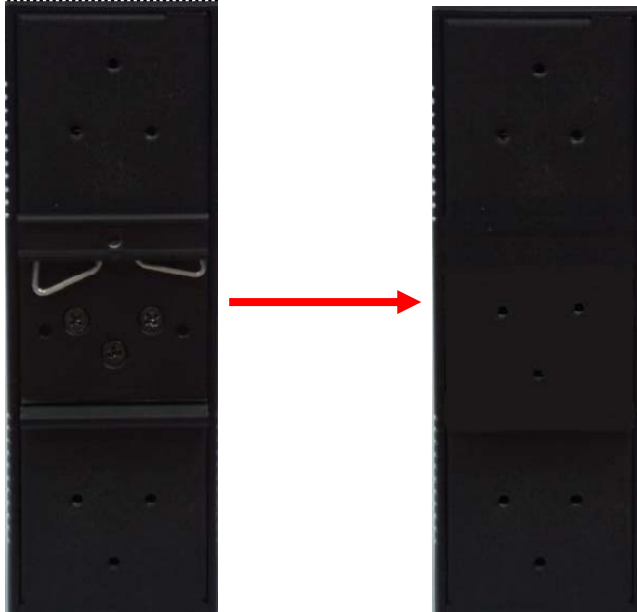

Step 2: Use 6 screws that can be found in the package to combine the wall mount panel. Just like the picture shows below:



The screws specification shows in the following two pictures. In order to prevent IDS-3042W from any damage, the size of screws should not be larger than the size that used in IDS-3042W.

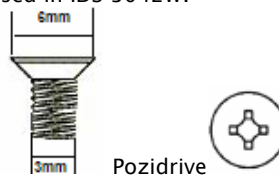

Step 3: Mount the combined IDS-3042W on the wall.




3

Hardware Overview

3.1 Front Panel

4-Port Wireless Device Server Series

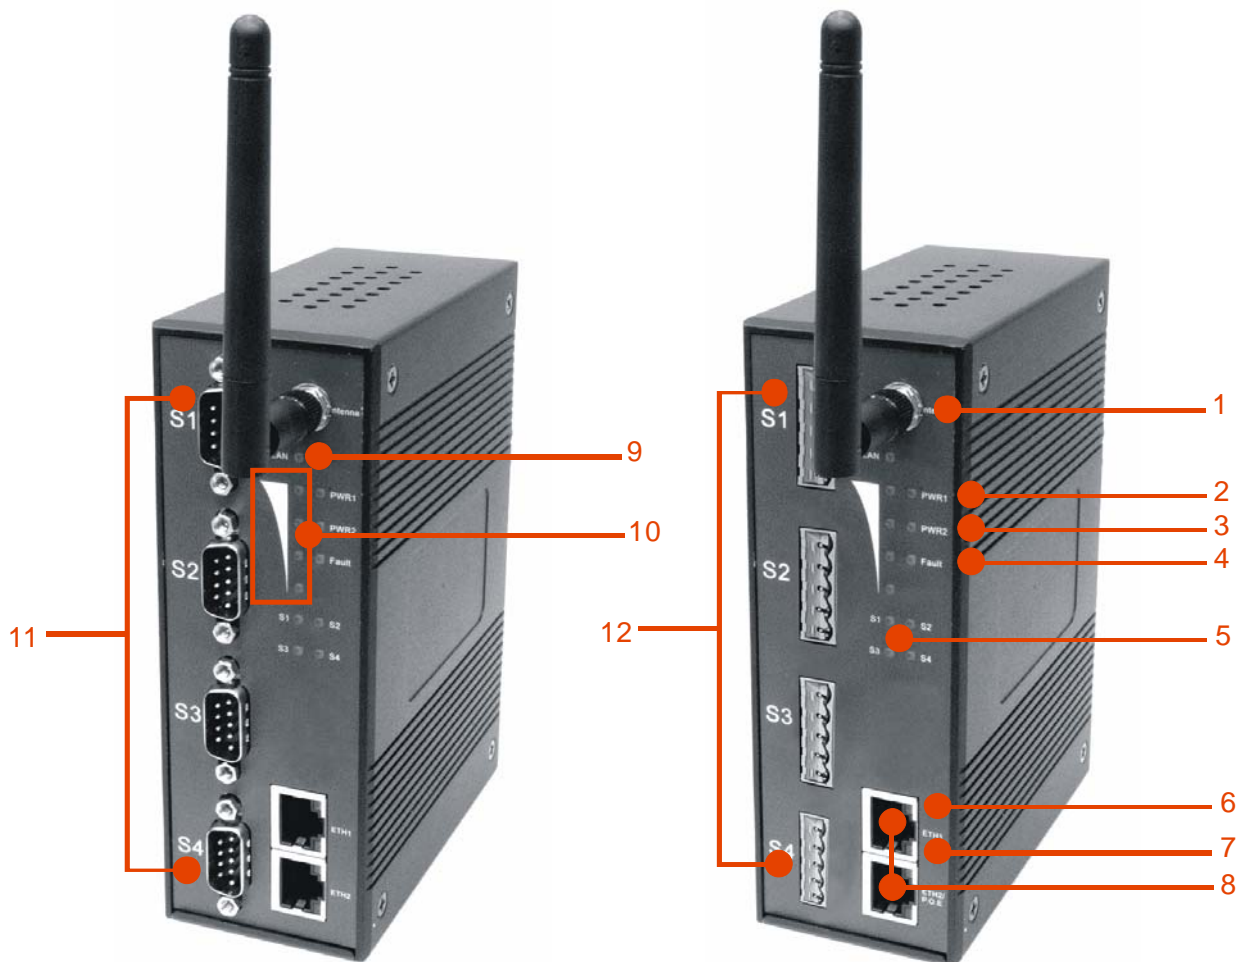

1. Reverse SMA antenna connector.
2. LED for PWR1 and system status. When the PWR1 links, the green LED will be light on.
3. LED for PWR2 and system status. When the PWR2 links, the green LED will be light on.
4. LED for fault indicator. When fault occurred, this red LED will be light on.
5. LED for Serial ports status. When data transmitted, the green LED will be light on. When data received, the red LED will be light on.
6. LED of 10Base-T connection on Ethernet port.
7. LED of 100Base-TX connection on Ethernet port.
8. 10/100Base-T(X) Ethernet port.
9. LED for WLAN link status. When the WLAN links, the green LED will be light on.
10. LED for WLAN signal strength. 4 / 3 / 2 / 1 / 0 LED(s) will be light on correspond to WLAN signal strength 100% / 75% / 50% / 25% / BAD.
11. RS-232/422/485 serial port. Mode configured by IDS-Tools.
12. RS-422/485 serial port with 2KV isolation. Mode configured by IDS-Tools.

3.2 Front Panel LEDs

The following table describes the labels that stick on the IDS-3042W.


LED	Color	Status	Description
PWR1	Green/Red	On	DC power 1 activated.
		Red blinking	Indicates an IP conflict, or DHCP BOOTP server did not respond properly
PWR2	Green/Red	On	DC power 2 activated.
		Red blinking	Indicates an IP conflict, or DHCP BOOTP server did not respond properly
Fault	Red	On	Fault event occurred.
1 ~ 4	Green	Blinking	Serial port is transmitting data
	Red	Blinking	Serial port is receiving data
ETH1	Green/Amber	Green On/Blinking	100Mbps LNK/ACT
		Amber On/Blinking	10Mbps LNK/ACT
ETH2	Green/Amber	Green On/Blinking	100Mbps LNK/ACT
		Amber On/Blinking	10Mbps LNK/ACT
		Amber On/Blinking	10Mbps LNK/ACT
WLAN	Green	On/Blinking	WLAN LNK/ACT
WLAN Signal	Green	On	4 / 3 / 2 / 1 / 0 LED(s) will be light correspond to WLAN signal strength 100% / 75% / 50% / 25% / BAD

3.3 Serial Ports

There 4 serial ports on the front panel of IDS-3042W showed as below:

DB9 connector:

Pin Assignment

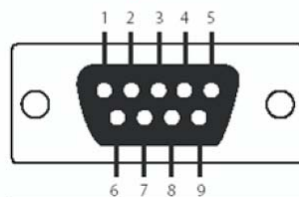

Pin#	RS232	RS422	RS485(4 wire)	RS485(2 wire)
1	DCD	RXD-	RXD-	
2	RXD	RXD+	RXD+	
3	TXD	TXD+	TXD+	DATA+
4	DTR	TXD-	TXD-	DATA-
5	GND	GND	GND	GND
6	DSR			
7	RTS			
8	CTS			
9	RI			
RS232 mode act as DTE				

5 pin Terminal block connector:

Pin Assignment




Pin#	RS422	RS485(4 wire)	RS485(2 wire)
1	GND	GND	GND
2	RXD-	RXD-	
3	RXD+	RXD+	
4	TXD-	TXD-	DATA-
5	TXD+	TXD+	DATA+

3.4 Bottom Panel

The bottom panel components of 4-port wireless series are showed as below:


1. Terminal block includes: PWR1, PWR2 (12 ~ 48V DC) and Relay output (1A@24VDC).
2. Reset bottom. 5 seconds for factory default.

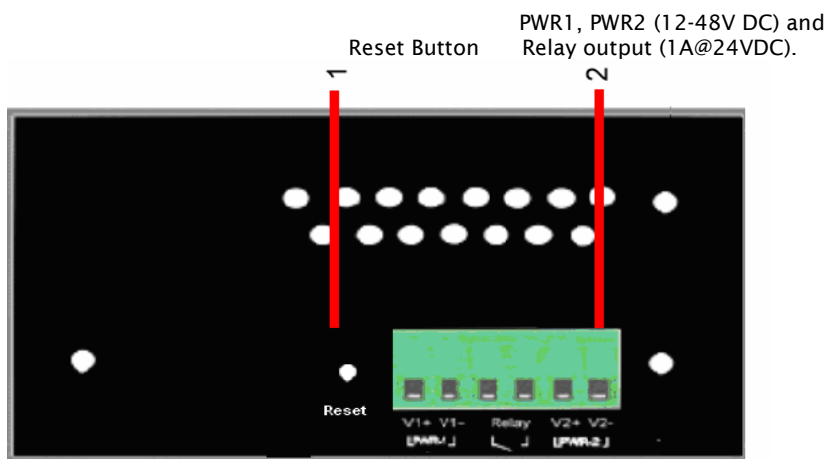

3.5 Rear Panel

The rear panel components of IDS-3042W are showed as below:

1. Screw holes for wall mount kit.
2. Din-Rail kit

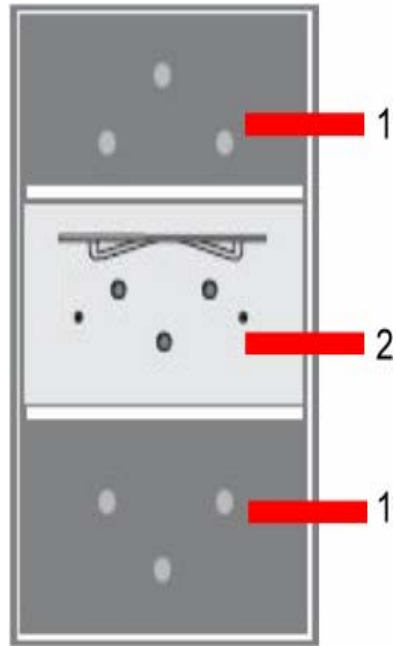

4

Cables

4.1 Ethernet Cables

The IDS-3042W has standard Ethernet ports. According to the link type, the switches use CAT 3, 4, 5, 5e UTP cables to connect to any other network device (PCs, servers, switches, routers, or hubs). Please refer to the following table for cable specifications.

Cable Types and Specifications

Cable	Type	Max. Length	Connector
10BASE-T	Cat. 3, 4, 5 100-ohm	UTP 100 m (328 ft)	RJ-45
100BASE-TX	Cat. 5 100-ohm UTP	UTP 100 m (328 ft)	RJ-45

100BASE-TX/10BASE-T Pin Assignments

With 100BASE-TX/10BASE-T cable, pins 1 and 2 are used for transmitting data, and pins 3 and 6 are used for receiving data.

RJ-45 Pin Assignments

Pin Number	Assignment
1	TD+
2	TD-
3	RD+
4	Not used
5	Not used
6	RD-
7	Not used
8	Not used

The IDS-3042W supports auto MDI/MDI-X operation. You can use a straight-through cable to connect PC to switch. The following table below shows the 10BASE-T/ 100BASE-TX MDI and MDI-X port pin outs.

MDI/MDI-X pins assignment

Pin Number	MDI port	MDI-X port
1	TD+(transmit)	RD+(receive)
2	TD-(transmit)	RD-(receive)
3	RD+(receive)	TD+(transmit)
4	Not used	Not used
5	Not used	Not used
6	RD-(receive)	TD-(transmit)
7	Not used	Not used
8	Not used	Not used

Note: "+" and "-" signs represent the polarity of the wires that make up each wire pair.

5


Management Interface

5.1 IDS-Tools


IDS-Tools is a powerful Windows utility for IDS series. It supports device discovery, device configuration, group setup, group firmware update, monitoring functions...etc. It is easy for you to install and configure devices over the network.

5.1.1 INSTALL IDS-TOOLS


Step 1: Execute the Setup program, click “start” after selecting the folder for IDS-Tools.

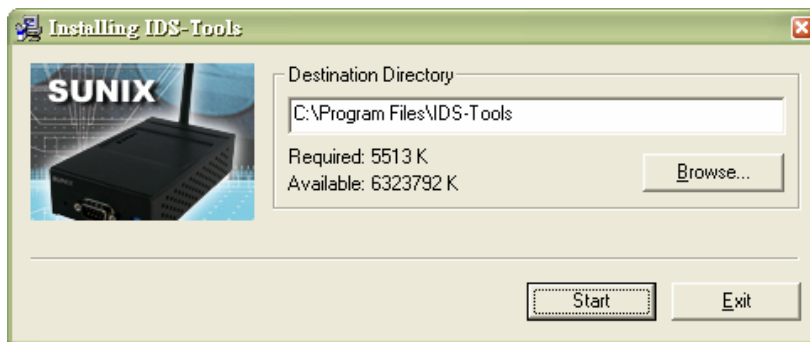

Step 2: When installation complete successfully, then click “OK”.

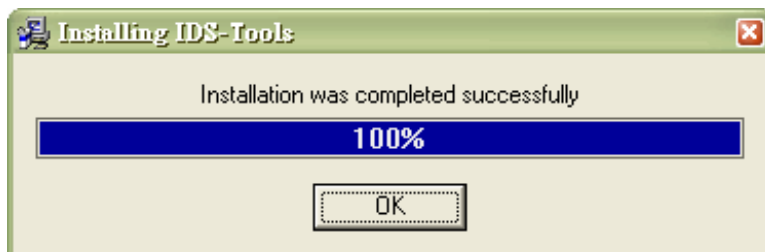


Step 3: Check for your selection.

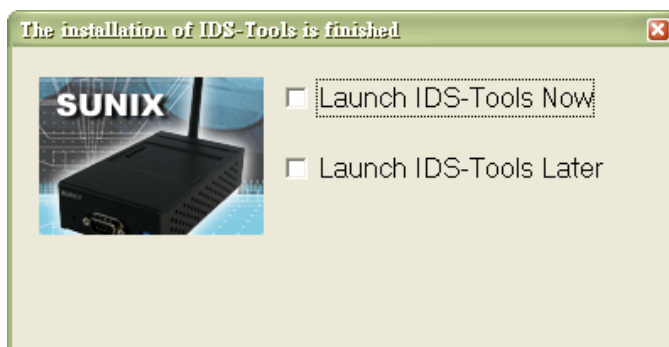

5.1.2 USING IDS-TOOLS

5.1.2.1 Explore IDS device servers


IDS-Tools will broadcast to the network and search all available IDS devices in the network. The default IP address of the device is “192.168.1.1”, and selects the searching device you wish to use and press “Add” button. You can set static IP address or in DHCP client mode to get IP address automatically. Finally, click “OK” button to add the device.

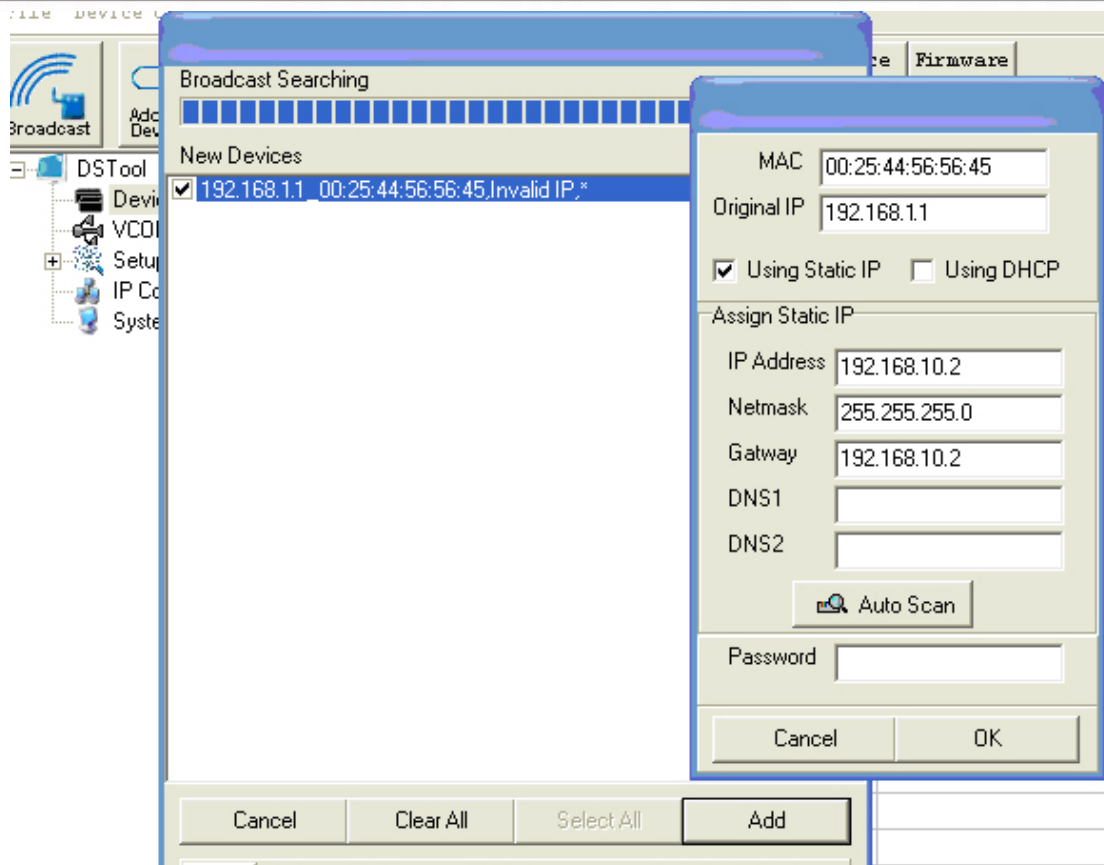

5.1.2.2 Configure IDS device servers

General settings

This page includes the setting of device name, SNTP server and Auto IP Report.

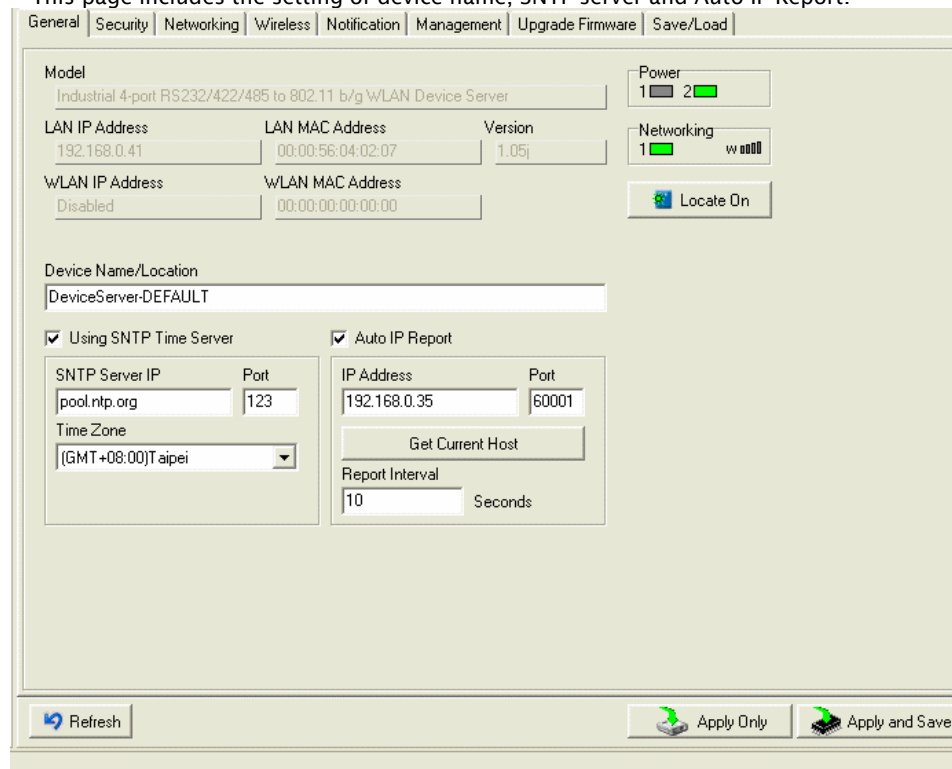

The following table describes the labels in this screen.

Label	Description
Device Name/location	You can set the device name or related information. By clicking “Locate On” button you can locate the serial server’s position.
Set SNTP	Input the SNTP server domain name or IP address, port and select the Time zone.
Set Auto IP Report	By Clicking the “Get current Host” button you will get your local IP, and then set the Report interval time. The device server will report its status periodically.

At "IP collection" option show the device report information. The report interval is 0 indicate disable this setting (default), but you can set the other IP or Port.

Security

General		Security	Networking	Wireless	Notification	Management	Upgrade Firmware	Save/Load
Access IP Table						Password		
IP1	<input type="text" value="192.168.0.1"/>	Mask	<input type="text" value="255.255.255.255"/>	<input checked="" type="checkbox"/>	Enabled	New Password		
IP2	<input type="text" value="192.168.0.2"/>	Mask	<input type="text" value="255.255.255.0"/>	<input checked="" type="checkbox"/>	Enabled	<input type="text" value="xxxx"/>		
IP3	<input type="text"/>	Mask	<input type="text"/>	<input type="checkbox"/>	Enabled	Confirm New Password		
IP4	<input type="text"/>	Mask	<input type="text"/>	<input type="checkbox"/>	Enabled	<input type="text" value="xxxxxx"/>		
IP5	<input type="text"/>	Mask	<input type="text"/>	<input type="checkbox"/>	Enabled	Old Password		
IP6	<input type="text"/>	Mask	<input type="text"/>	<input type="checkbox"/>	Enabled	<input type="text" value="xxxxxx"/>		
IP7	<input type="text"/>	Mask	<input type="text"/>	<input type="checkbox"/>	Enabled	<input type="button" value="Change Password"/>		
IP8	<input type="text"/>	Mask	<input type="text"/>	<input type="checkbox"/>	Enabled			
IP9	<input type="text"/>	Mask	<input type="text"/>	<input type="checkbox"/>	Enabled			
IP10	<input type="text"/>	Mask	<input type="text"/>	<input type="checkbox"/>	Enabled			
IP11	<input type="text"/>	Mask	<input type="text"/>	<input type="checkbox"/>	Enabled			
IP12	<input type="text"/>	Mask	<input type="text"/>	<input type="checkbox"/>	Enabled			
IP13	<input type="text"/>	Mask	<input type="text"/>	<input type="checkbox"/>	Enabled			
IP14	<input type="text"/>	Mask	<input type="text"/>	<input type="checkbox"/>	Enabled			
IP15	<input type="text"/>	Mask	<input type="text"/>	<input type="checkbox"/>	Enabled			
IP16	<input type="text"/>	Mask	<input type="text"/>	<input type="checkbox"/>	Enabled			
<input type="button" value="Refresh"/>		<input type="button" value="Apply Only"/>		<input type="button" value="Apply and Save"/>				

The following table describes the labels in this screen.

Label	Description
Accessible IP Setting	To prevent unauthorized access by setting host IP addresses and network masks. <ol style="list-style-type: none"> 1. Only one host with a special IP address can access the device server , "IP address /255.255.255.255" (e.g., "192.168.0.1/255.255.255.255"). 2. Hosts on a specific subnet can access the device server. "IP address/255.255.255.0" (e.g., "192.168.0.2/255.255.255.0") 3. Any host can access the device server. Disable this function by un-checking the "Enable IP Filter" checkbox
Password setting	You can set the password to prevent unauthorized access from your server. Factory default is "admin".

Network Setting

Device IDS can connect the Network by wire and wireless. You must assign a valid IP address for IDS before attached in your network environment. Your network administrator should provide you the IP address and related settings. The IP address must be unique within the network (otherwise, IDS will not have a valid connection to the network). You can choose from three possible "IP configuration" modes: Static, DHCP/BOOTP. The Factory Default IP address is "192.168.1.1"

General | Security | Networking | **Wireless** | Notification | Management | Upgrade Firmware | Save/Load

Wire | **Wireless**

Using Static IP Using DHCP/BOOTP

Static IP Settings:

IP Address:

Netmask:

Gateway:

DNS1:

DNS2:


The following table describes the labels in this screen.


Label	Description
Using Static IP	Manually assigning an IP address.
Using DHCP/BOOTP	IP Address automatically assigned by a DHCP server in your network.
Subnet Mask	All devices on the network must have the same subnet mask to communicate on the network.
Gateway	Enter the IP address of the router in you network.
DNS Server	Enter the IP address of the DNS server, The DNS server translates domain names into IP address.

Wireless setting

Wireless Network type includes two modes: Infra and Adhoc. The Infra type connects the network by wireless access point, but the Adhoc is formed by the association of wireless and mobile devices capable of communicating among themselves even when there is no networking infrastructure available.

Infra Network

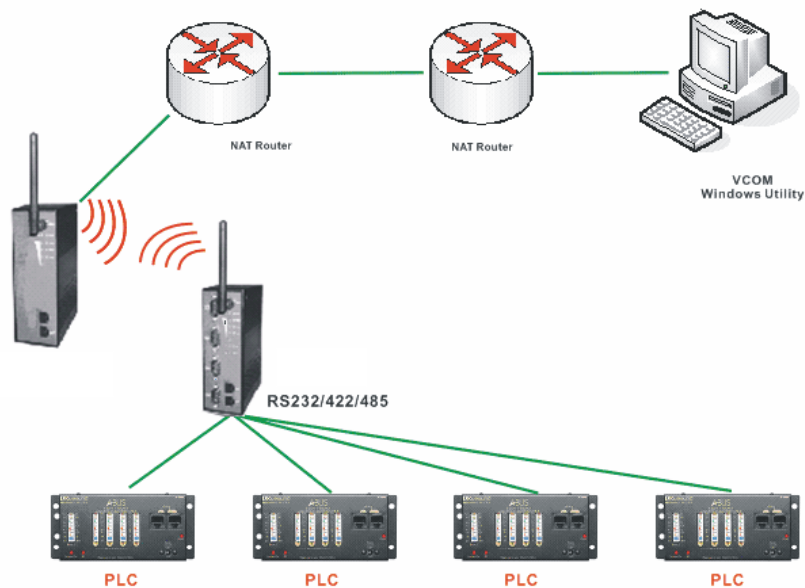

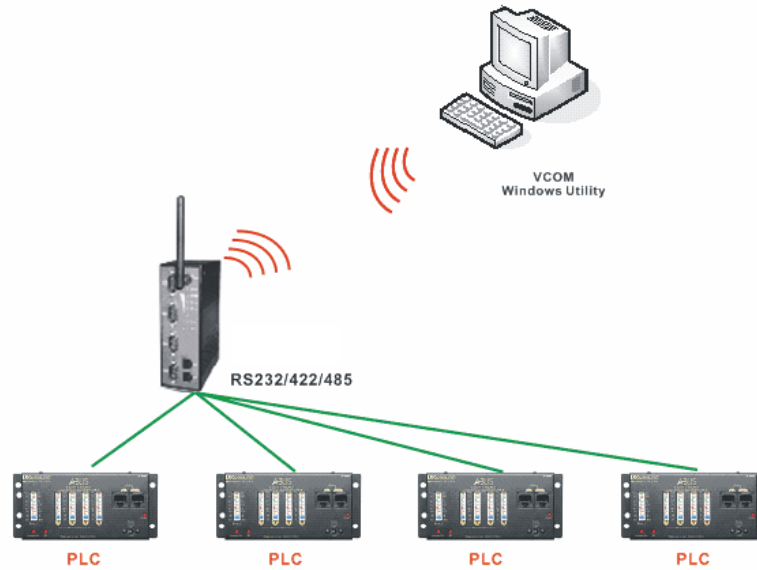Adhoc Network


General	Security	Networking	Wireless	Notification	Management	Upgrade Firmware	Save/Load
---------	----------	------------	----------	--------------	------------	------------------	-----------

Network Type: Adhoc
 SSID: tiarya [SSID Scan]
 Channel: Auto

Wireless Encryption
 No Encryption
 WEP

WEP Encryption Key: Character Input : 5 characters(WEP64)

1 [*****] 3 []
 2 [] 4 []

TKIP
 AES

WPA-PSK (Previously Shared Key) []
 Key Renewal Period : [] minutes

The following table describes the labels in this screen.

Label	Description
Network Type	Type includes Infra and Adhoc.
SSID	Service Set Identifier Default is the default setting. The SSID is a unique name that identifies a network. All devices on a network must share the same SSID name in order to communicate on the network.
Channel	All devices on the network must be set to the same channel to communicate on the network. You can select the Auto.
NO Encryption	You can set no encryption mode, but this mode is insecurity and don't suggest use.
WEP	You can set four encryption 5characters (WEP64), 13 characters (WEP128), 10 digits (WEP64), 26digits (WEP128).
TKIP	TKIP (Temporal Key Integrity Protocol) is a key management protocol.
AES	AES (Advanced Encryption System) is a variable bit length symmetric digital encryption algorithm.

**Simply unplug the RJ-45 to change into wireless connection*

Notification

Specify the events that should be notified to the administrator. The events can be notified by E-mail, SNMP trap, or system log.

General | Security | Networking | Wireless | Notification | Management | Upgrade Firmware | Save/Load

SNMP Trap Email Notification Syslog Notification

SNMP Settings | Email Settings | Syslog Settings

Notified Items

<input checked="" type="checkbox"/> Hardware Reset (Cold Start)	<input type="checkbox"/> DI_1 Changed
<input checked="" type="checkbox"/> Software Reset (Warm Start)	<input type="checkbox"/> DI_2 Changed
<input checked="" type="checkbox"/> Login Failed	<input type="checkbox"/> DI_3 Changed
<input checked="" type="checkbox"/> IP Changed	<input type="checkbox"/> DI_4 Changed
<input checked="" type="checkbox"/> Password Changed	<input type="checkbox"/> DO_1 Changed
<input checked="" type="checkbox"/> Access IP Blocked	<input type="checkbox"/> DO_2 Changed
<input checked="" type="checkbox"/> Redundant Power Changed	
<input checked="" type="checkbox"/> Redundant Ethernet Changed	

System Log Settings

Server IP: Port:

The following table describes the labels in this screen.

Label	Description
SNMP Trap	To notify events information by SNMP trap.
Email Notification	To notify events information by Email.
Syslog Notification	To notify events information by Syslog. You can use the current Host's Log server by click " Using Current Host's Log Server " button. You also can set other log server. (IDS-Tools log server port default 514)
Notify items	The events to be notified.
Apply	Apply current setting, but the setting will be lost after reboot.
Apply and Save	Apply and save current setting. Write configuration into flash memory.

Management

General | Security | Networking | Wireless | Notification | Management | Upgrade Firmware | Save/Load

Web Management Enable

Telnet Management Enable

SNMP Management Enable

SNMP Management Settings

Community

Location

Contact

Trap Server1

Trap Server2

Trap Server3

Trap Server4

The following table describes the labels in this screen.

Label	Description
Web Management Enable	To enable management from Web. Click "Goto Web Management" button to access device web page, then set the device by web.
Telnet Management Enable	To enable management by Telnet(SSH). Click "Goto Telnet Management" button to execute Telnet command.
SNMP Management Enable	To enable management by SNMP.
SNMP Management Settings	To configure SNMP server related settings.

Upgrade Firmware

General | Security | Networking | Wireless | Notification | Management | Upgrade Firmware | Save/Load

Firmware Image


The following table describes the labels in this screen.

Label	Description
Browsing	Browse the file and upgrade
Upgrade	Enable the firmware upgrade.


Save/Load

General | Security | Networking | Wireless | Notification | Management | Upgrade Firmware | Save/Load


Save Configuration to Flash

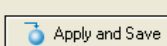



Load Default

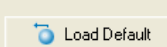

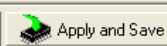


Reboot Device

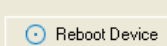

Import/Export Configuration

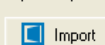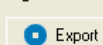The following table describes the labels in this screen.

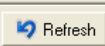Label	Description
Save Configuration to Flash	Save current configuration into flash memory.
Load Default	Load default configuration except the network settings. If you want to load all factory default, you need to press "Reset" button on the device (Hardware restore).
Reboot Device	Reboot the device server (warm start).
Import Configuration	Restore the previous exported configuration.
Export Configuration	Export current configuration to a file to backup the configuration.

5.1.2.3 Configure serial port

Serial Settings

Serial Settings
Service Mode
Notification

port1

Port Alias

Baudrate Stop Bits Performance

Parity Flow Control

Data Bits Interface

Delimiter Settings

Serial to Ethernet | Ethernet to Serial

Delimiter 1

 (HEX)
 Enabled

Delimiter 2

 (HEX)
 Enabled

Delimiter 3

 (HEX)
 Enabled

Delimiter 4

 (HEX)
 Enabled

Flush Serial to Ethernet Data Buffer After

 (0-65535) ms

Force TX interval time

 (0-65535) ms data 1 interval time data 2 interval time data 3

The received data will be queueing in the buffer until all the delimiters are matched. When the buffer is full (4K Bytes) or after "flush S2E data buffer" timeout, the data will also be sent.

The received data will be queueing in TX buffer until TX interval time is timeout or TX buffer is full (4K Bytes) , the data will also be sent. 0 is disable.

Refresh
 Apply Only
 Apply and Save

The following table describes the labels in this screen.

Label	Description
Port Alias	Remark the port to hint the connected device.
Interface	RS232 / RS422 / RS485(2-wires) / RS485(4-wires)
Baud rate	110bps/300bps/1200bps/2400bps/4800bps/9600bps/19200bps/ 38400bps/57600bps/115200bps/230400bps/460800bps
Data Bits	5, 6, 7, 8
Stop Bits	1, 2 (1.5)
Parity	No, Even, Odd, Mark, Space
Flow Control	No, XON/XOFF, RTS/CTS, DTR/DSR
Performance	Throughput: This mode optimized for highest transmission speed. Latency: This mode optimized for shortest response time.
Serial to Ethernet	<p>Delimiter: You can define max. 4 delimiters (00~FF, Hex) for each way. The data will be hold until the delimiters are received or the option-"Flush Serial to Ethernet data buffer" times out. 0 means disable. Factory default is 0.</p> <p>Flush Data Buffer After: The received data will be queuing in the buffer until all the delimiters are matched. When the buffer is full (4K Bytes) or after "flush S2E data buffer" timeout the data will also be sent. You can set the time from 0 to 65535 seconds.</p>
Ethernet to Serial	<p>Delimiter: You can define max. 4 delimiters (00~FF, Hex) for each way. The data will be hold until the delimiters are received or the option "Flush Ethernet to Serial data buffer" times out. 0 means disable. Factory default is 0.</p> <p>Flush Data Buffer After: The received data will be queuing in the buffer until all the delimiters are matched. When the buffer is full (4K Bytes) or after "flushE2S data buffer" timeout the data will also be sent. You can set the time from 0 to 65535 seconds.</p>
Force TX Interval Time	Force TX interval time is to specify the timeout when no data has been transmitted. When the timeout is reached or TX buffer is full (4K Bytes), the queued data will be sent. 0 means disable. Factory default value is 0.

Service Mode – Virtual COM Mode

In Virtual COM Mode, the IDS-Tools establishes a transparent connection between host and serial device by mapping the Port of the serial server serial port to local COM port on the host computer. Virtual COM Mode also supports up to 5 simultaneous connections, so that multiple hosts can send or receive data by the same serial device at the same time.


The following table describes the labels in this screen.

Label	Description
Map Virtual COM	Select a Virtual COM Name to map on.
Max Connection	The number of Max connection can support simultaneous connections are 5, default values is 1.
Idle Timeout	When serial port stops data transmission for a defined period of time (Idle Timeout), the connection will be closed and the port will be freed and try to connect with other hosts. 0 indicate disable this function. Factory default value is 0. If Multilink is configured, only the first host connection is effective for this setting.
Alive Check	The serial device will send TCP alive-check package in each defined time interval (Alive Check) to remote host to check the TCP connection. If the TCP connection is not alive, the connection will be closed and the port will be freed. 0 indicate disable this function. Factory default is 0.

**Not allowed to mapping Virtual COM from web*

Service Mode – TCP Server Mode

In TCP Server Mode, IDS is configured with a unique Port combination on a TCP/IP network. In this case, IDS waits passively to be contacted by the device. After a connection is established, it can then proceed with data transmission. TCP Server mode also supports up to 5 simultaneous connections, so that multiple device can receive data from the same serial device at the same time.

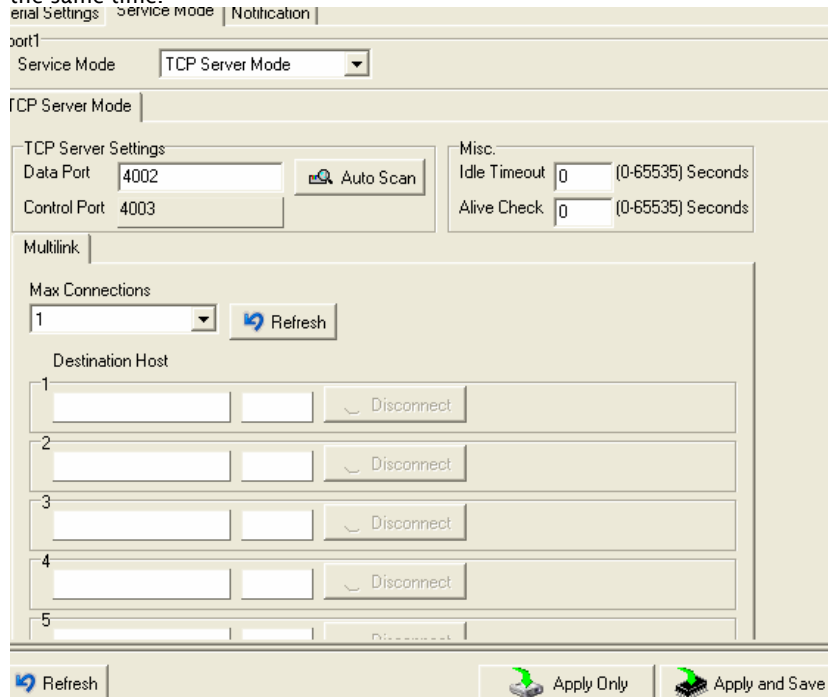


The following table describes the labels in this screen.

Label	Description
Data Port	Set the port number for data transmission.
Auto Scan	Scan the data port automatically.
Idle Timeout	When serial port stops data transmission for a defined period of time (Idle Timeout), the connection will be closed and the port will be freed and try to connect with other hosts. 0 indicate disable this function. Factory default value is 0. If Multilink is configured, only the first host connection is effective for this setting.
Alive Check	The serial device will send TCP alive-check package in each defined time interval (Alive Check) to remote host to check the TCP connection. If the TCP connection is not alive, the connection will be closed and the port will be freed. 0 indicate disable this function. Factory default is 0.
Max Connection	The number of Max connection can support simultaneous connections are 5, default values is 1.

Service Mode – TCP Client Mode

In TCP Client Mode, device can establish a TCP connection with server by the method you have settled (Startup or any character). After the data has been transferred, device can disconnect automatically from the server by using the TCP alive check time or Idle time settings.

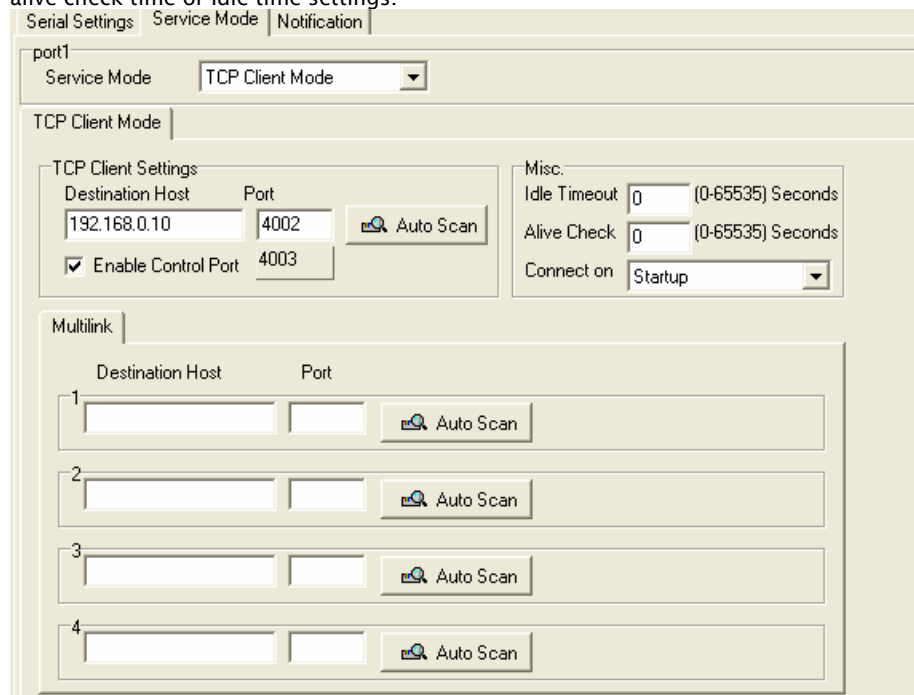

The following table describes the labels in this screen.

Label	Description
Destination Host	Set the IP address of host.
Port	Set the port number of data port.
Idle Timeout	When serial port stops data transmission for a defined period of time (Idle Timeout), the connection will be closed and the port will be freed and try to connect with other hosts. 0 indicate disable this function. Factory default value is 0. If Multilink is configured, only the first host connection is effective for this setting.
Alive Check	The serial device will send TCP alive-check package in each defined time interval (Alive Check) to remote host to check the TCP connection. If the TCP connection is not alive, the connection will be closed and the port will be freed. 0 indicate disable this function. Factory default is 0.
Connect on Startup	The TCP Client will build TCP connection once the connected serial device is started.
Connect on Any Character	The TCP Client will build TCP connection once the connected serial device starts to send data.

Service Mode – UDP Client Mode

Compared to TCP communication, UDP is faster and more efficient. In UDP mode, you can Uni-cast or Multi-cast data from the serial device server to host computers, and the serial device can also receive data from one or multiple host

Serial Settings | **Service Mode** | Notification

port1
 Service Mode: **UDP Mode**

UDP Mode

UDP Settings
 Listening Port:

Multilink

	Destination Host Begin	Destination Host End	Sending Port	
1	<input type="text" value="192.168.0.1"/>	to <input type="text" value="192.168.0.100"/>	<input type="text" value="10000"/>	<input type="button" value="Auto Scan"/>
2	<input type="text"/>	to <input type="text"/>	<input type="text"/>	<input type="button" value="Auto Scan"/>
3	<input type="text"/>	to <input type="text"/>	<input type="text"/>	<input type="button" value="Auto Scan"/>
4	<input type="text"/>	to <input type="text"/>	<input type="text"/>	<input type="button" value="Auto Scan"/>

Notification

Specify the events that should be noticed. The events can be notified by E-mail, SNMP trap or system log.

Serial Settings | Service Mode | **Notification**

SNMP Trap Email Notification Syslog Notification

SNMP Settings | Email Settings | Syslog Settings

Notified Items

<input type="checkbox"/> DCD Changed	<input type="checkbox"/> CTS Changed
<input type="checkbox"/> DSR Changed	<input type="checkbox"/> Port Connected
<input type="checkbox"/> RI Changed	<input type="checkbox"/> Port Disconnected

Email to:
 Mail Server:
 Mail to:

The following table describes the labels in this screen.


Label	Description
DCD changed	When DCD (Data Carrier Detect) signal changes, it indicates that the modem connection status has changed. Notification will be sent.
DSR changed	When DSR (Data Set Ready) signal changes, it indicates that the data communication equipment is powered off. A Notification will be sent.
RI changed	When RI (Ring Indicator) signal changes, it indicates that the incoming of a call. A Notification will be sent.
CTS changed	When CTS (Clear To Send) signal changes, it indicates that the transmission between computer and DCE can proceed. A notification will be sent.
Port connected	In TCP Server Mode, when the device accepts an incoming TCP connection, this event will be trigger. In TCP Client Mode, when the device has connected to the remote host, this event will be trigger. In Virtual COM Mode, Virtual COM is ready to use. A notification will be sent.
Port disconnected	In TCP Server/Client Mode, when the device lost the TCP link, this event will be trigger. In Virtual COM Mode, When Virtual COM is not available, this event will be trigger. A notification will be sent.

5.2 Configuration by Web Browser


5.2.1 CONNECT TO THE WEB PAGE

Step 1: Input the IP address of IDS with "https://192.168.1.1" in the Address input box of IE.

Step 2: Click "Yes" button on the dialog box.

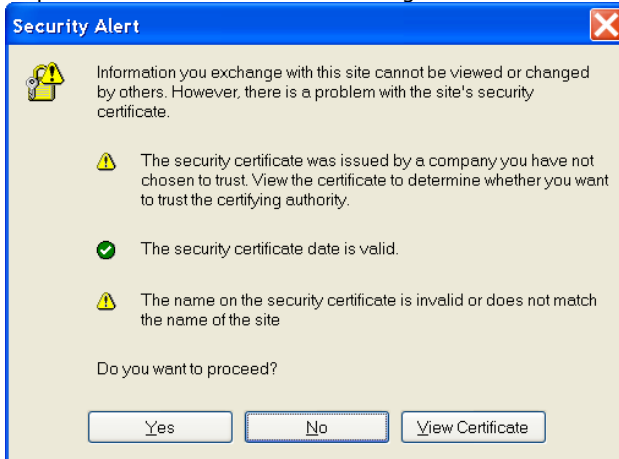


Step 3: Input the name and password, then click "OK".

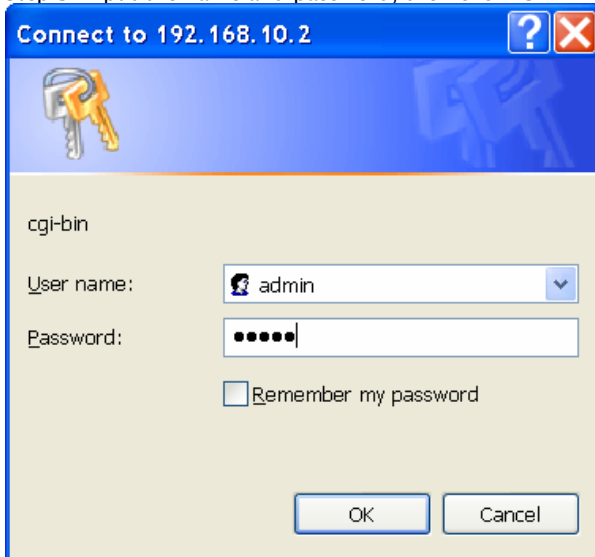

**Only if password is set.*

Step 4: The system information will be shown as below.

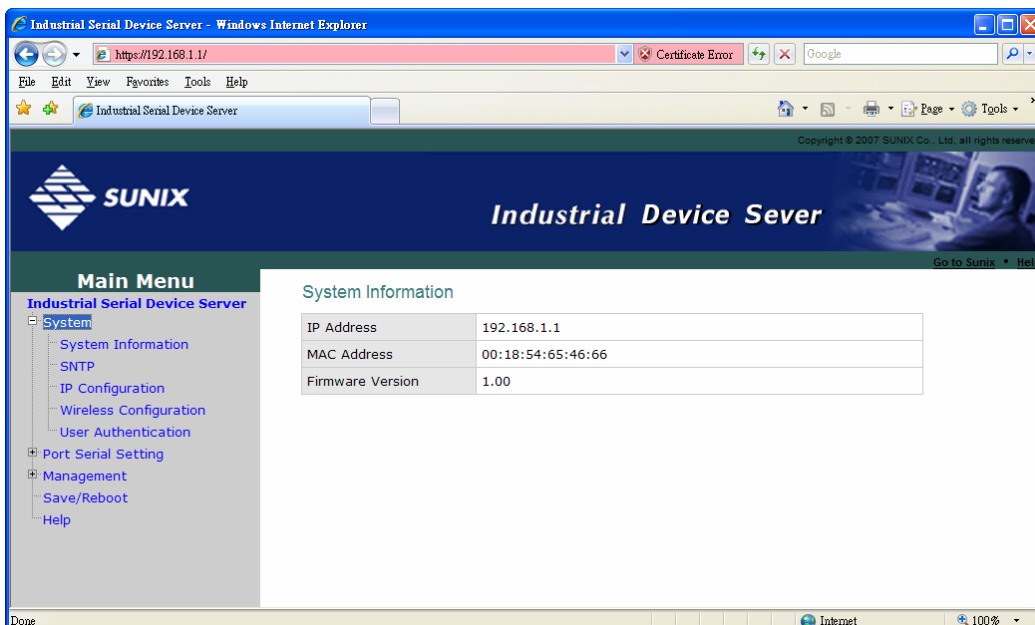


SNTP


The following table describes the labels in this screen.

Label	Description
Name	You can set the name of IDS
SNTP	Enable the SNTP server.
Time zone	After you set the SNTP enable, select the time zone you located.
Time server	Input SNTP server domain name or IP address and Port.
Console	Telnet Console (SSH) is included for security reasons. In some cases, you may need to disable this function to prevent unauthorized access from internet. The factory default is enable.

IP Configuration

You must assign a valid IP address for IDS before attached in your network environment. Your network administrator should provide you with the IP address and related settings. The IP address must be unique and within the network (otherwise, IDS will not have a valid connection to the network). You can choose from three possible "IP configuration" modes: Static, DHCP/BOOTP. The Factory Default IP address is "192.168.1.1"

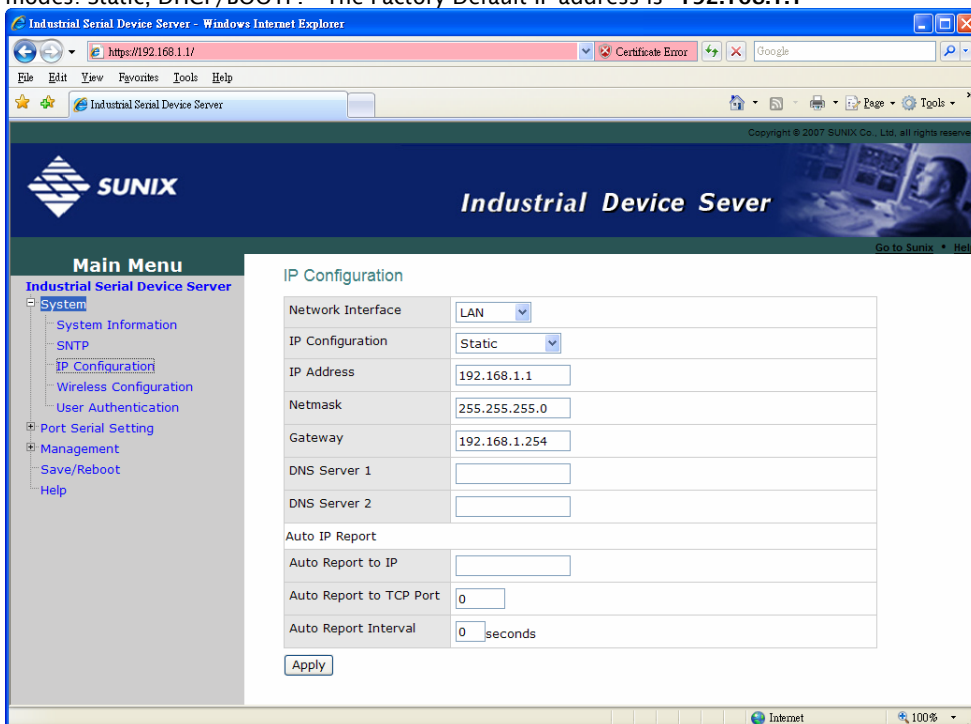


The following table describes the labels in this screen.

Label	Description
Network Type	Include Lan and Wireless.

DHCP/BOOTP	Obtain the IP address automatically from DHCP server.
Static IP Address	Assigning an IP address manually.
Subnet Mask	Set the subnet mask to communicate on the network.
Gateway	Enter the IP address of the router in you network.
DNS Server	Enter the IP address of the DNS server to translate domain names into IP address.
Auto IP Report	Set the report IP address and TCP port (60001 IDS-Tools default), then the device server will report it status periodically. At IDS-Tools->IP collection option show the device server status. The report interval is 0 indicate disable this setting (default). Also you can set the other IP or Port.

Wireless setting

Wireless Network type include two mode, Infra and Adhoc. The Infra type connect the network by wireless access point, but the Adhoc is formed by the association of wireless and mobile devices capable of communicating among themselves even if there is no networking infrastructure available.

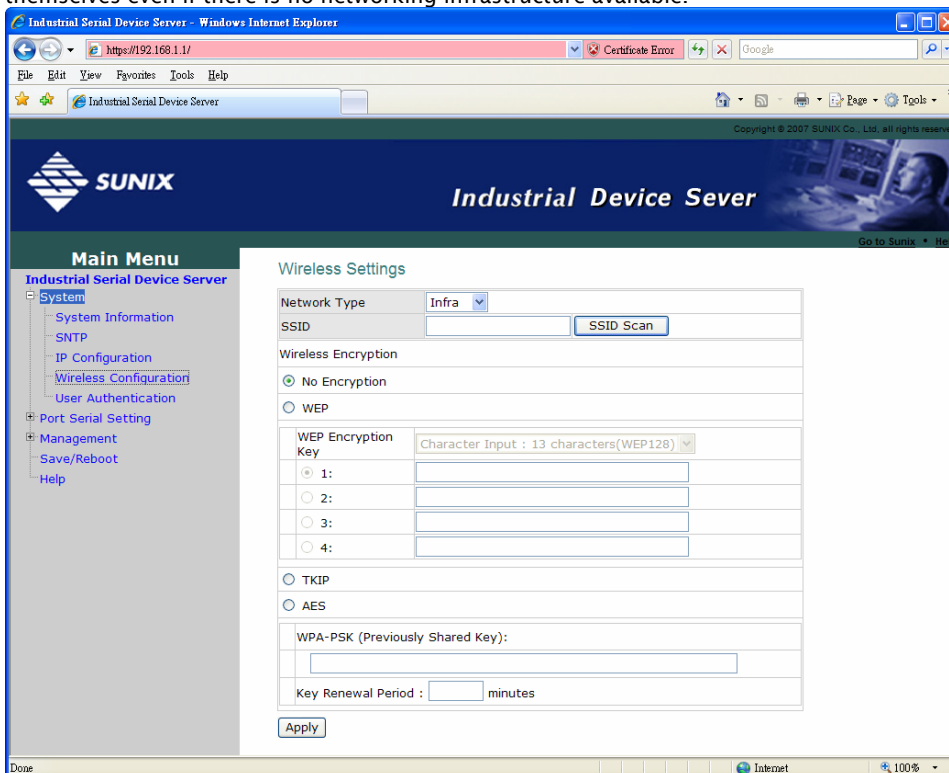

The following table describes the labels in this screen.

Label	Description
Network Type	Type include Infra and Adhoc.
SSID	Service Set Identifier Default is the default setting. The SSID is a unique name that identifies a network. All devices on a network must share the same SSID name in order to communicate on the network.
Channel	All devices on the network must be set to the same channel to communicate on the network. You can select the Auto.
NO Encryption	You can set no encryption mode, but this mode is insecurity and we don't suggest to use it.
WEP	You can set four encryption 5 characters (WEP64),13 characters(WEP128), 10 digits(WEP64),26 digits(WEP128).
TKIP	TKIP (Temporal Key Integrity Protocol) is a key management protocol.
AES	AES (Advanced Encryption System) is a variable bit length symmetric digital encryption algorithm.

Authentication

You can set the password to prevent unauthorized access from network. Input the "Old password" and "New password" to change the password. Factory default is "admin".

User Authentication

Old Password	<input type="password" value="..."/>
New Password	<input type="password"/>
Confirm New Password	<input type="password"/>

5.2.1.2 Port serial setting

Serial configuration

Serial Configuration

	Port1
Port Alias	<input type="text" value="Port0"/>
Interface	RS232 <input type="button" value="v"/>
Baud Rate	38400 <input type="button" value="v"/>
Data Bits	8 <input type="button" value="v"/>
Stop Bits	1 <input type="button" value="v"/>
Parity	None <input type="button" value="v"/>
Flow Control	None <input type="button" value="v"/>
Force TX Interval Time	<input type="text" value="0"/> ms
Performance	<input checked="" type="radio"/> Throughput <input type="radio"/> Latency

The following table describes the labels in this screen.

Label	Description
Port Alias	Remark the port to hint the connected device.
Interface	RS232 / RS422 / RS485(2-wires) / RS485(4-wires)
Baud rate	110bps/300bps/1200bps/2400bps/4800bps/9600bps/19200bps/ 38400bps/57600bps/115200bps/230400bps/460800bps
Data Bits	5, 6, 7, 8
Stop Bits	1, 2 (1.5)
Parity	No, Even, Odd, Mark, Space
Flow Control	No, XON/XOFF, RTS/CTS, DTR/DSR
Force TX Interval Time	Force TX interval time is to specify the timeout when no data has been transmitted. When the timeout is reached or TX buffer is full (4K Bytes), the queued data will be sent. 0 means disable. Factory default value is 0.
Performance	Throughput: This mode optimized for highest transmission speed. Latency: This mode optimized for shortest response time.
Apply	Activate settings on this page.

Port Profile

Port Profile

	Port1
Local TCP Port	<input type="text" value="4000"/>
Command Port	<input type="text" value="4001"/>
Mode	Serial to Ethernet
Flush Data Buffer After	<input type="text" value="0"/> ms
Delimiter(Hex 0~ff)	1: <input type="text" value="00"/> 2: <input type="text" value="00"/> 3: <input type="text" value="00"/> 4: <input type="text" value="00"/>
Mode	Ethernet to Serial
Flush Data Buffer After	<input type="text" value="0"/> ms
Delimiter(Hex 0~ff)	1: <input type="text" value="00"/> 2: <input type="text" value="00"/> 3: <input type="text" value="00"/> 4: <input type="text" value="00"/>

The following table describes the labels in this screen.

Label	Description
Serial to Ethernet	<p>Flush Data Buffer After: The received data will be queued in the buffer until all the delimiters are matched. When the buffer is full (4K Bytes) or after "flush S2E data buffer" timeout, the data will also be sent. You can set the time from 0 to 65535 seconds.</p> <p>Delimiter: You can define max. 4 delimiters (00~FF, Hex) for each way. The data will be hold until the delimiters are received or the option "Flush Serial to Ethernet data buffer" times out. 0 means disable. Factory default is 0</p>
Ethernet to serial	<p>Flush Data Buffer After: The received data will be queued in the buffer until all the delimiters are matched. When the buffer is full (4K Bytes) or after "flush E2S data buffer" timeout, the data will also be sent. You can set the time from 0 to 65535 seconds.</p> <p>Delimiter: You can define max. 4 delimiters (00~FF, Hex) for each way. The data will be hold until the delimiters are received or the option "Flush Ethernet to Serial data buffer" times out. 0 means disable. Factory default is 0</p>

Service Mode – Virtual COM Mode

In Virtual COM Mode, the driver establishes a transparent connection between host and serial device by mapping the Port of the serial server serial port to local COM port on the host computer. Virtual COM Mode also supports up to 5 simultaneous connections, so that multiple hosts can send or receive data by the same serial device at the same time.

Service Mode

	Port1
Service Mode	<input type="text" value="Virtual COM Mode"/>
Idle Timeout	<input type="text" value="0"/> (0~65535)seconds
Alive Check	<input type="text" value="0"/> (0~65535)seconds
Max Connection	<input type="text" value="1"/> max. connection (1~5)

The following table describes the labels in this screen.

Label	Description
Idle Timeout	When serial port stops data transmission for a defined period of time (Idle Timeout), the connection will be closed and the port will be freed and try to connect with other hosts. 0 indicate disable this function. Factory default value is 0. If Multilink is configured, only the first host connection is effective for this setting.
Alive Check	The serial device will send TCP alive-check package in each defined time interval (Alive Check) to remote host to check the TCP connection. If the TCP connection is not alive, the connection will be closed and the port will be freed. 0 indicate

	disable this function. Factory default is 0.
Max Connection	The number of Max connection can support simultaneous connections are 5, default values is 1.

*Not allowed to mapping Virtual COM from web

Service Mode – TCP Server Mode

In TCP Server Mode, IDS is configured with a unique Port combination on a TCP/IP network. In this case, IDS waits passively to be contacted by the device. After the device establishes a connection with the serial device, it can then proceed with data transmission. TCP Server mode also supports up to 5 simultaneous connections, so that multiple device can receive data from the same serial device at the same time.

Service Mode

	Port1
Service Mode	TCP Server Mode <input type="button" value="v"/>
TCP Server Port	<input type="text" value="4000"/>
Idle Timeout	<input type="text" value="0"/> (0~65535)seconds
Alive Check	<input type="text" value="0"/> (0~65535)seconds
Max Connection	<input type="button" value="v"/> 1 max. connection(1~5)

The following table describes the labels in this screen.

Label	Description
TCP Server Port	Set the port number for data transmission.
Idle Timeout	When serial port stops data transmission for a defined period of time (Idle Timeout), the connection will be closed and the port will be freed and try to connect with other hosts. 0 indicate disable this function. Factory default value is 0. If Multilink is configured, only the first host connection is effective for this setting.
Alive Check	The serial device will send TCP alive-check package in each defined time interval (Alive Check) to remote host to check the TCP connection. If the TCP connection is not alive, the connection will be closed and the port will be freed. 0 indicate disable this function. Factory default is 0.
Max Connection	Support up to 5 simultaneous connections are 5, default values is 1.

Service Mode – TCP Client Mode

In TCP Client Mode, device can establish a TCP connection with server by the method you have settled (Startup or any character). After the data has been transferred, device can disconnect automatically from the server by using the TCP alive check time or idle time settings.

Service Mode

	Port1
Service Mode	TCP Client Mode <input type="button" value="v"/>
Destination Host	<input type="text" value="0.0.0.0"/> : <input type="text" value="4000"/>
Idle Timeout	<input type="text" value="0"/> (0~65535)seconds
Alive Check	<input type="text" value="0"/> (0~65535)seconds
Connect on	<input checked="" type="radio"/> Startup <input type="radio"/> Any Character

	Destination Host	Port
1.	<input type="text" value="0.0.0.0"/>	<input type="text" value="65535"/>
2.	<input type="text" value="0.0.0.0"/>	<input type="text" value="65535"/>
3.	<input type="text" value="0.0.0.0"/>	<input type="text" value="65535"/>
4.	<input type="text" value="0.0.0.0"/>	<input type="text" value="65535"/>

The following table describes the labels in this screen.

Label	Description
Destination Host	Set the IP address of host and the port number of data port.
Idle Timeout	When serial port stops data transmission for a defined period of time (Idle Timeout), the connection will be closed and the port will be freed and try to connect with other hosts. 0 indicate disable this function. Factory default

	value is 0. If Multilink is configured, only the first host connection is effective for this setting.
Alive Check	The serial device will send TCP alive-check package in each defined time interval (Alive Check) to remote host to check the TCP connection. If the TCP connection is not alive, the connection will be closed and the port will be freed. 0 indicate disable this function. Factory default is 0.
Connect on Startup	The TCP Client will build TCP connection once the connected serial device is started.
Connect on Any Character	The TCP Client will build TCP connection once the connected serial device starts to send data.

Service Mode – UDP Client Mode

Compared to TCP communication, UDP is faster and more efficient. In UDP mode, you can Uni-cast or Multi-cast data from the serial device server to host computers, and the serial device can also receive data from one or multiple host

Service Mode

Port1		
Service Mode	UDP Mode <input type="button" value="v"/>	
Listen Port	4004	
Host start IP	Host end IP	Send Port
1. <input type="text" value="192.168.0.1"/>	<input type="text" value="192.168.0.100"/>	<input type="text" value="20000"/>
2. <input type="text" value="0.0.0.0"/>	<input type="text" value="0.0.0.0"/>	<input type="text" value="65535"/>
3. <input type="text" value="0.0.0.0"/>	<input type="text" value="0.0.0.0"/>	<input type="text" value="65535"/>
4. <input type="text" value="0.0.0.0"/>	<input type="text" value="0.0.0.0"/>	<input type="text" value="65535"/>

5.2.1.3 Management

Accessible IP Settings

Accessible IP Settings allow you to add or block the remote host IP addresses to prevent unauthorized access. If host's IP address is in the accessible IP table, then the host will be allowed to access the IDS. You can choose one of the following cases by setting the parameter.

1. Only one host with a special IP address can access the device server , "IP address /255.255.255.255" (e.g., "192.168.0.1/255.255.255.255").
2. Hosts on a specific subnet can access the device server. "IP address/255.255.255.0" (e.g., "192.168.0.2/255.255.255.0")
3. Any host can access the device server. Disable this function by un-checking the "Enable IP Filter" checkbox

Access IP Control List

Enable IP Filtering (Not check this option will allow any IP to have accessibility)

No.	Activate the IP	IP Address	Netmask
1	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
2	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
3	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
4	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
5	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
6	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
7	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
8	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
9	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
10	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
11	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
12	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
13	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
14	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
15	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
16	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>

SMTP/SNMP Configuration

Email Server configuration includes the mail server's IP address or domain. If the authentication is required, specify your name and password. There are 4 Email addresses that you can specify to receive the notification.

SNMP Server configuration includes the SNMP Trap Server IP address, Community, Location and Contact. There are 4 SNMP addresses you can specify to receive the notification.

SysLog server configuration includes the server IP and server Port. This option need to use with IDS-Tools.

SMTP/SNMP Configuration

E-mail Settings	
SMTP Server	<input type="text"/> Port <input type="text"/>
<input type="checkbox"/> My server requires authentication	
User Name	<input type="text"/>
Password	<input type="text"/>
E-mail Sender	<input type="text"/>
E-mail Address 1	<input type="text"/>
E-mail Address 2	<input type="text"/>
E-mail Address 3	<input type="text"/>
E-mail Address 4	<input type="text"/>
SNMP Trap Server	
SNMP Server 1	<input type="text"/>
SNMP Server 2	<input type="text"/>
SNMP Server 3	<input type="text"/>
SNMP Server 4	<input type="text"/>
Community	<input type="text"/>
Location	<input type="text"/>
Contact	<input type="text"/>
Syslog Server	
Syslog Server IP	<input type="text"/>
Syslog Server Port	<input type="text" value="0"/>

System Event Configuration

Specify the events that should be notified to the administrator. The events can be notified by E-mail, SNMP trap, or system log.

System Event Configuration

Device Event Notification			
Hardware Reset (Cold Start)	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog
Software Reset (Warm Start)	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog
Login Failed	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog
IP Address Changed	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog
Password changed	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog
Access IP Blocked	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog
Redundant Power Changed	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog
Redundant Ethernet Changed	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog
SNMP Access Failed	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog
Port Event Notification			
DCD Changed	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog
DSR Changed	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog
RI Changed	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog
CTS Changed	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog
Port Connected	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog
Port Disconnected	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog

The following table describes the labels in this screen.

Label	Description
Hardware Reset (Cold Start)	This refers to starting the system from power off (contrast this with warm start). When performing a cold start, IDS will automatically issue an Auto warning message by sending E-mail, log information or an SNMP trap after booting.
Software Reset (Warm Start)	This refers to restart the computer without turning the power off. When performing a warm start, IDS will automatically send an E-mail, log information or SNMP trap after reboot.
Login Failed	When an unauthorized access from the Console or Web interface, a notification will be sent.
IP Address Changed	When IP address of device changed, a notification will be sent.
Password Changed	When password of device changed, a notification will be sent.
Access IP Blocked	When the host accesses the device with blocked IP addresses, a notification will be sent.
Redundant Power Change	When status of power changed, a notification will be sent.
Redundant Ethernet Change	When status of Ethernet port changed, a notification will be sent.
DCD changed	When DCD (Data Carrier Detect) signal changes, it indicates that the modem connection status has been changed. A Notification will be sent.
DSR changed	When DSR (Data Set Ready) signal changes, it indicates that the data communication equipment is powered off. A Notification will be sent.
RI changed	When RI (Ring Indicator) signal changes, it indicates an incoming call. Notification will be sent.
CTS changed	When CTS (Clear To Send) signal changes, it indicates that the transmission between computer and DCE can proceed. A notification will be sent.
Port connected	In TCP Server Mode, when the device accepts an incoming TCP connection, this event will be trigger. In TCP Client Mode, when the device has connected to the remote host, this event will be trigger. In Virtual COM Mode, Virtual COM is ready to use. A notification will be sent.
Port disconnected	In TCP Server/Client Mode, when the device lost the TCP link, this event will be trigger. In Virtual COM Mode, When Virtual COM is not available, this event will be trigger. A notification will be sent.

5.2.1.4 Save/Reboot

Factory Default
 Reset to default configuration.
 Click Reset button to reset all configurations to the default value.

Restore Configuration
 You can restore the previous saved configuration to Device Server.

File to restore:

Backup Configuration
 You can save current EEPROM value from the Device Server as a backup file of configuration.

Upgrade Firmware
 Specify the firmware image to upgrade.
 Note: Please DO NOT power off this device while upgrading firmware.

Firmware:

Reboot Device
 Please click [**Reboot**] button to restart device.


The following table describes the labels in this screen.

Label	Description
Load Factory Default	Load default configuration except settings of Network. If you want load all factory default, you should press "Reset" button on the device (Hardware restore).
Import Configuration	Restore the previous exported configuration.
Export Configuration	Export the current configuration to a file.
Upgrade Firmware	Upgrade to a new firmware with specified file.
Reboot Device	Reboot the device server (warm start).

5.3 Configuration by SSH Console

5.3.1 CONNECT TO IDS

You can use SSH Tool (e.g., PuTTY) to access SSH console of IDS. The SSH console interface is shown below.

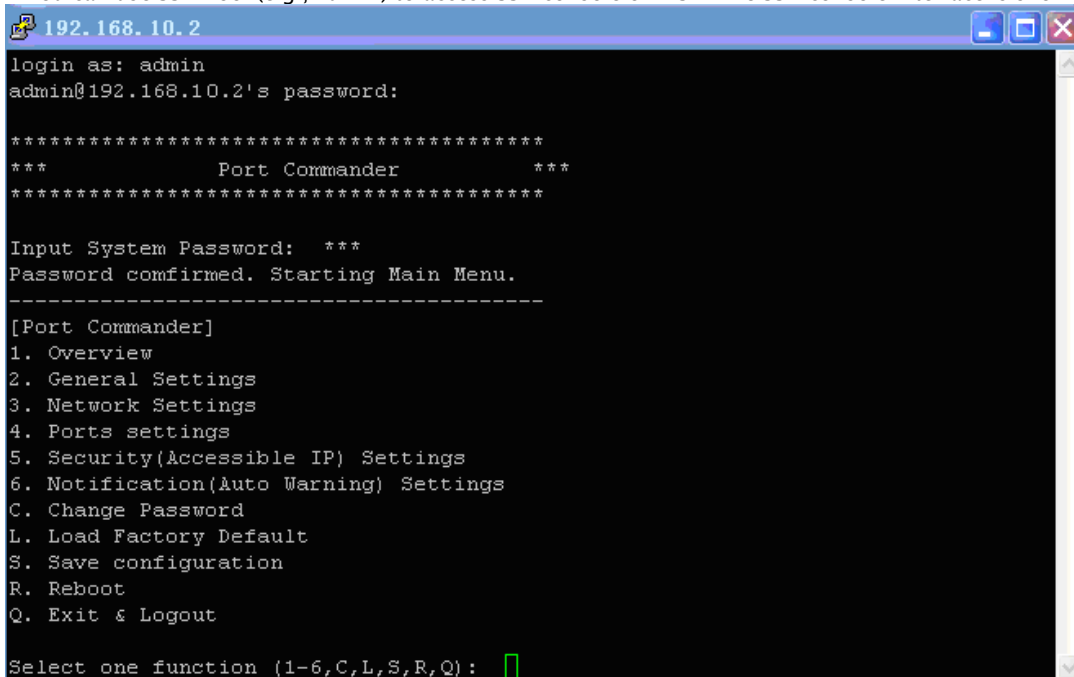

```

192.168.10.2
login as: admin
admin@192.168.10.2's password:

*****
***          Port Commander          ***
*****

Input System Password: ***
Password confirmed. Starting Main Menu.
-----
[Port Commander]
1. Overview
2. General Settings
3. Network Settings
4. Ports settings
5. Security(Accessible IP) Settings
6. Notification(Auto Warning) Settings
C. Change Password
L. Load Factory Default
S. Save configuration
R. Reboot
Q. Exit & Logout

Select one function (1-6,C,L,S,R,Q):
  
```

6

Technical Specifications

Network Interface	
Ethernet	2x 10/100Base-T(X) which support Redundant Dual Ethernet or Switch Mode support. Auto-recover less than 10ms
connector	RJ-45
Protection	Built-in 1.5KV magnetic isolation
Protocols	ICMP, IP, TCP, UDP, DHCP, BOOTP, ARP/RARP, DNS, SNMP MIB II, HTTPS, SSH
WLAN Feature	
Operating Mode	Client mode
Antenna Connector	Reverse SMA
Radio Frequency Type	DSSS
Modulation	IEEE802.11b: CCK, DQPSK, DBPSK IEEE802.11g: OFDM with BPSK, QPSK, 16QAM, 64QAM
Frequency Band	America/FCC: 2.412~2.462 GHz (11 channels) Europe CE/ETSI: 2.412~2.472 GHz (13 channels)
Transmission Rate	IEEE802.11b: 1/ 2/ 5.5/ 11 Mbps IEEE802.11g: 6/ 9/ 12/ 18/ 24/ 36/ 48/ 54 Mbps
Transmit Power	IEEE802.11b/g: 18dBm
Receiver Sensitivity	-81dBm @ 11Mbps, PER< 8%; -64dBm @ 54Mbps, PER< 10%
Encryption Security	WEP: (64-bit, 128-bit key supported) WPA: WPA2 :802.11i(WEP and AES encryption) PSK (256-bit key pre-shared key supported) 802.1X and Radius supported TKIP encryption
Wireless Security	SSID broadcast disable
Serial Interface	
Interface	IDS-3042W: 4x RS232 / RS422 / 4(2)-Wire RS485. Which can be configured by IDS-Tools IDS-2042W-I: 4x RS422 / 4(2)-Wire RS485. Which can be configured by IDS-Tools
Connector	IDS-3042W: Male DB9 IDS-2042W-I: 5 pin terminal block
Serial Baud Rate	110 bps to 460.8 Kbps
Data Bits	5, 6, 7, 8
Parity	odd, even, none, mark, space
Stop Bits	1, 1.5, 2
RS-232 signals	TxD, RxD, RTS, CTS, DTR, DSR, DCD, RI, GND (DS-42-W only)
RS-422 signals	Tx+, Tx-, Rx+, Rx-, GND
RS-485 (4 wire) signals	Tx+, Tx-, Rx+, Rx-, GND
RS-485 (2 wire) signals	Data+, Data-, GND
Flow control	XON/XOFF, RTS/CTS, DTR/DSR
Serial Line Protection	Built-in 15KV ESD protection 2KV DC isolation for each port (DS-42-IW only)
LED Indicators	PWR 1(2) / Ready: 1) Red On: Power is on and booting up. Red Blinking: Indicates an IP conflict, or DHCP or BOOTP server did not respond properly. 2) Green On: Power is on and functioning normally. Green Blinking: Located by Administrator. ETH1(2) Link / ACT: Orange ON/Blinking: 10 Mbps Ethernet Green ON/Blinking: 100 Mbps Ethernet Serial TX / RX LEDs: Red: Serial port is receiving data Green: Serial port is transmitting data. Fault: Fault alarm (Red) WLAN LED: ON/Blinking: WLAN LNK/ACT

	WLAN Signal: Green ON : 4 / 3 / 2 / 1 / 0 LED(s) correspond to WLAN signal strength 100% / 75% / 50% / 25% / BAD
Power Requirements	
Power Input	PWR1/2: 12~48VDC in 6-pin Terminal Block
Reverse Polarity Protection	Present at terminal block
Power Consumption	7 Watts MAX
Software Utility	
Utility	IDS-Tools for Windows NT/2000/XP/2003/VISTA which include Device discovery Auto IP report Device setting (run-time change, no rebooting) Access control list Group setting Device monitoring Serial port monitoring Log info Group Firmware update
Serial Mode	Virtual Com / TCP Server / TCP Client / UDP /Serial Tunnel TCP Alive Check Timeout Inactivity Timeout Delimiter for Data Packing Force TX Timeout for Data Packing
Multiple Link	5 Hosts simultaneous connection: Virtual Com / TCP server / TCP Client / UDP
VCOM Driver	Windows NT/2000/XP/2003/VISTA
Configuration	Web HTTPS console, SSH console, IDS-Tools for Windows NT/2000/XP/VISTA
Environmental	
Operating Temperature	-10 to 55°C (14 to 131°F)
Operating Humidity	5% to 95%(Non-condensing)
Storage Temperature	-20 to 85°C (-4 to 185°F)
Mechanical	
Dimensions(W x D x H)	52mm(W)x106mm(D)x144mm(H)
Casing	IP-30 protection
Regulatory Approvals	
Shock	IEC60068-2-27
Free Fall	IEC 60068-2-32
Vibration	IEC 60068-2-6
EMI	FCC Part 15, CISPR (EN55022) class A
EMS	EN61000-4-2 (ESD), EN61000-4-3 (RS), EN61000-4-4 (EFT), EN61000-4-5 (Surge), Level 3, EN61000-4-6 (CS), Level 3
MBTF	200,000 hours at least
Warranty	5 years

6.1. Contact Information

Customer satisfaction is our number one concern, and to ensure that customers receive the full benefit of our products, SUNIX services has been set up to provide technical support, driver updates, product information, and user's manual updates.

The following services are provided

E-mail for technical support..... info@sunix.com.tw
 World Wide Web (WWW) Site for product information:.....http://www.sunix.com.tw