



ADLINK
TECHNOLOGY INC.

GIE62+
2-CH PoE Gigabit Ethernet Vision
(GigE Vision) Interface Card

User's Manual

Manual Rev. 2.00
Revision Date: November 19, 2009
Part No: 50-11168-1000



Recycled Paper

Advance Technologies; Automate the World.



Copyright 2009 ADLINK TECHNOLOGY INC.

All Rights Reserved.

The information in this document is subject to change without prior notice in order to improve reliability, design, and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

Trademarks

Product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective companies.

Getting Service

Contact us should you require any service or assistance.

ADLINK Technology Inc.

Address: 9F, No.166 Jian Yi Road, Chungho City,
Taipei County 235, Taiwan
台北縣中和市建一路 166 號 9 樓

Tel: +886-2-8226-5877
Fax: +886-2-8226-5717
Email: service@adlinktech.com

Ampro ADLINK Technology Inc.

Address: 5215 Hellyer Avenue, #110, San Jose, CA 95138, USA

Tel: +1-408-360-0200
Toll Free: +1-800-966-5200 (USA only)
Fax: +1-408-360-0222
Email: info@adlinktech.com

ADLINK Technology Beijing

Address: 北京市海淀区上地东路 1 号盈创动力大厦 E 座 801 室
(100085)
Rm. 801, Power Creative E, No. 1, B/D
Shang Di East Rd., Beijing 100085, China

Tel: +86-10-5885-8666
Fax: +86-10-5885-8625
Email: market@adlinktech.com

ADLINK Technology Shanghai

Address: 上海市漕河泾高科技开发区钦江路 333 号 39 幢 4 层
(200233)

Tel: +86-21-6495-5210
Fax: +86-21-5450-0414
Email: market@adlinktech.com

ADLINK Technology Shenzhen

Address: 深圳市南山区科技园南区高新南七道 数字技术园
A1 栋 2 楼 C 区 (518057)
2F, C Block, Bld. A1, Cyber-Tech Zone,
Gao Xin Ave. Sec 7, High-Tech Industrial Park S.,
Shenzhen, 518054 China

Tel: +86-755-2643-4858
Fax: +86-755-2664-6353
Email: market@adlinktech.com

ADLINK Technology Inc. (German Liaison Office)

Address: Nord Carree 3, 40477 Duesseldorf, Germany
Tel: +49-211-495-5552
Fax: +49-211-495-5557
Email: emea@adlinktech.com

ADLINK (French Liaison Office)

Address: 15 rue Emile Baudot, 91300 MASSY Cedex, France
Tel: +33 (0) 1 60 12 35 66
Fax: +33 (0) 1 60 12 35 66
Email: france@adlinktech.com

ADLINK Technology Japan Corporation

Address: 151-007 2 東京都渋谷区幡ヶ谷
1-1-2 朝日生命幡ヶ谷ビル 8F
Asahiseimei Hatagaya Bldg. 8F
1-1-2 Hatagaya, Shibuya-ku, Tokyo 151-0072, Japan
Tel: +81-3-4455-3722
Fax: +81-3-5333-6040
Email: japan@adlinktech.com

ADLINK Technology Inc. (Korean Liaison Office)

Address: 서울시 서초구 서초동 15 06-25 한도 B/D 2 층
2F, Hando B/D, 1506-25, Seocho-Dong,
Seocho-Gu, Seoul, 137-070, Korea
Tel: +82-2-2057-0565
Fax: +82-2-2057-0563
Email: korea@adlinktech.com

ADLINK Technology Singapore Pte Ltd.

Address: 84 Genting Lane #07-02A, Cityneon Design Centre,
Singapore 349584
Tel: +65-6844-2261
Fax: +65-6844-2263
Email: singapore@adlinktech.com

ADLINK Technology Singapore Pte Ltd. (Indian Liaison Office)

Address: No. 1357, "Anupama", Sri Aurobindo Marg, 9th Cross,
JP Nagar Phase I, Bangalore - 560078, India
Tel: +91-80-65605817
Fax: +91-80-22443548
Email: india@adlinktech.com

Table of Contents

| | |
|---|------------|
| List of Tables | ii |
| List of Figures | iii |
| 1 Introduction | 1 |
| 1.1 Features..... | 2 |
| 1.2 Applications | 2 |
| 2 Hardware Reference | 3 |
| 2.1 GiE62+ | 3 |
| GiE62+ Specifications | 3 |
| GiE62+ Connectors & Pin Definitions | 4 |
| 3 Installation Guide | 19 |
| 3.1 Hardware Installation | 19 |
| 3.2 Driver Installation | 20 |
| 4 Function Library | 29 |
| 4.1 Function List | 29 |
| 4.2 Functions | 30 |
| GiE62_Initialize | 30 |
| GiE62_GetTotalDeviceNum | 31 |
| GiE62_GetTotalDeviceID | 32 |
| GiE62_OpenDevice | 33 |
| GiE62_ResetDevice | 34 |
| GiE62_GetFirmwareVersion | 35 |
| GiE62_SetDOSStatus | 36 |
| GiE62_GetDIStatus | 37 |
| GiE62_SetTriggerDelayTime | 38 |
| GiE62_SetTriggerOutWidth | 39 |
| GiE62_SetTriggerOutPolarity | 40 |
| GiE62_SetTriggerInPolarity | 41 |
| GiE62_GetTriggerDelayTime | 42 |
| GiE62_GetTriggerOutWidth | 43 |
| GiE62_GetTriggerOutPolarity | 44 |
| GiE62_GetTriggerInPolarity | 45 |
| 4.3 Error Codes | 46 |

List of Tables

| | | |
|------------|--------------------------------|----|
| Table 2-1: | J2 RJ-45: LAN 1 Port | 5 |
| Table 2-2: | LAN status LED | 5 |
| Table 2-3: | SW1: Card ID Select | 6 |
| Table 2-4: | Card ID Select Table | 6 |
| Table 2-5: | SW2: PoE Function Select | 7 |
| Table 2-6: | CN3: GPIO & Trigger | 8 |
| Table 2-7: | CN3: GPIO & Trigger | 8 |
| Table 2-8: | CN3: Power Connector | 9 |
| Table 2-9: | Hardware Features | 16 |
| Table 4-1: | Error Codes | 46 |

List of Figures

Figure 2-1: GIE62+ Layout 4

1 Introduction

The ADLINK GIE62+ is a PCI Express® x4 lane frame grabber that supports two Power over Ethernet cameras and delivers unprecedented image acquisition rates of up to 2 Gbps and long cable distances of up to 100 m. The GIE62+ supports Power over Ethernet (PoE) to simplify installation, lower maintenance costs, and reduce the total cost of ownership.

The ADLINK GIE62+ supports the Link aggregation control protocol, offering an inexpensive way to set up a double-speed backbone network that transfers much more data than any one single Gigabit Ethernet port or device.

The GIE62+ is also ideal for automation applications by providing two of each isolated TTL digital inputs, outputs, and programmable trigger output pulses to connect to external devices such as position sensors and strobe lighting.

1.1 Features

- ▶ IEEE802.3af (48 V,15.4 W/channel) compliant
- ▶ Supports two independent GbE ports
- ▶ Supports Link aggregation
- ▶ Supports jumbo frames (9.5 KByte)
- ▶ PCI Express x4 compliant
- ▶ Provides Industrial screw lock connector
- ▶ 2 isolation digital inputs/outputs
- ▶ 2 isolation TTL level programmable trigger output pulses

1.2 Applications

- ▶ Machine Vision Inspection System
- ▶ Scientific Research Instrumentation
- ▶ Medical Research Instrumentation

2 Hardware Reference

2.1 GIE62+

2.1.1 GIE62+ Specifications

Power over Ethernet Port

- ▶ Two full-integrated Gigabit Ethernet Media Access Control (MAC) and physical layer (PHY) ports.
- ▶ The Power over Gigabit Ethernet Controller complies with the IEEE 802.3.af standard for a minimum of 15.4 watts with power up to 48 V over the existing CAT-5 Ethernet infrastructure without the need to make any modifications.
- ▶ The Power over Gigabit Ethernet Controller provides a standard IEEE 802.3 Ethernet interface for 1000BASE-T, 100BASE-TX, and 10BASE-T applications (802.3, 802.3u, and 802.3ab).
- ▶ 9 kB jumbo frame support

IO Triggers

- ▶ 2 isolated digital inputs
- ▶ 2 isolated digital outputs
- ▶ 2 isolated trigger inputs
- ▶ 2 isolated trigger outputs

Isolated Voltage

- ▶ Rated Isolation Voltage 1000 V @ 60 seconds

Form Factor

- ▶ PCI Express interface, x4 lanes

Dimensions

- ▶ W x L: 129.5 x 111.15 mm

Operating Environment

- ▶ Temperature: 0 to 55°C
- ▶ Humidity: 5 to 90% RHNC

Storage Environment

- ▶ Temperature: 0 to 85°C
- ▶ Humidity: 0 to 95% RHNC

Power Requirements

- ▶ Power from the PCIe slot:
 - ▷ +12 V max @ 0.2 A
 - ▷ +3.3 V max @ 1.5 A
- ▶ Power from power connector (CN3)
 - ▷ +12V max @ 3A (when the two Power over Ethernet ports are fully loaded, each port consumes 15.4 W)

2.1.2 GIE62+ Connectors & Pin Definitions


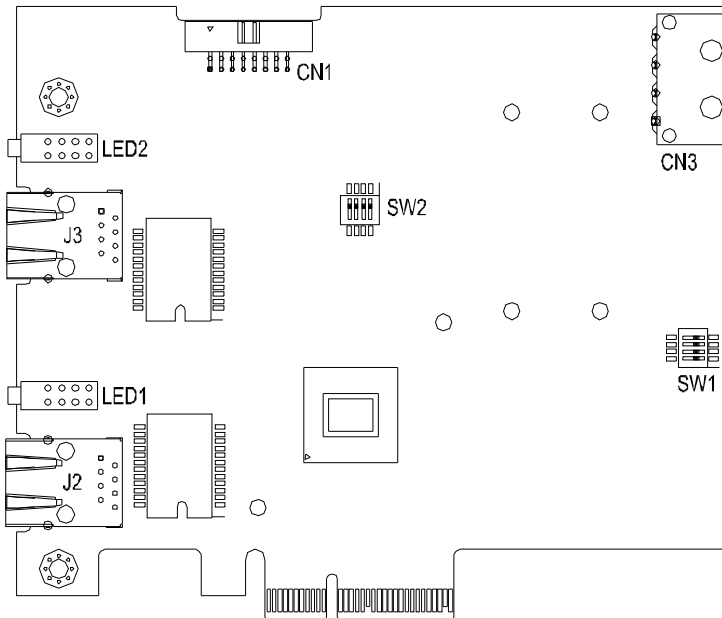


Figure 2-1: GIE62+ Layout

J2, J3 RJ-45 Ethernet Port

- ▶ J2 RJ-45: LAN 1 Port
- ▶ J3 RJ-45: LAN 2 Port

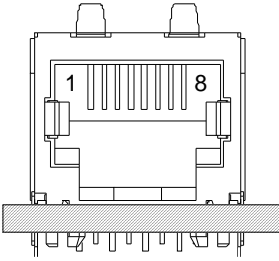


| Pin | Signal | Pin | Signal |
|-----|----------------------|-----|----------------------|
| 1 | MDI0+ (PoE_DC48V) | 5 | MDI2- (PoE_DC48V) |
| 2 | MDI0- (PoE_DC48V) | 6 | MDI1- (PoE_DC0V) |
| 3 | MDI1+ (PoE_DC0V) | 7 | MDI3+ (PoE_DC0V) |
| 4 | MDI2+ (PoE_DC48V) | 8 | MDI3- (PoE_DC0V) |

Table 2-1: J2 RJ-45: LAN 1 Port

LED1: LAN 1 status LED

LED2: LAN 2 status LED

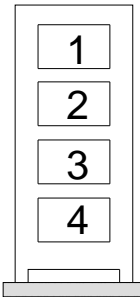


| LED (Yellow) | Status | Function |
|-------------------|----------|---------------------------|
| 1 Speed status | On | 1000 Mbps |
| | Off | 1000 Mbps link off |
| 2 Speed status | On | 100 Mbps |
| | Off | 100 Mbps link off |
| 3 Link status | ON | Data link |
| | OFF | Data link off |
| | Blinking | Data transfer in progress |
| 4 PoE status | On | PoE link |
| | Off | PoE link off |

Table 2-2: LAN status LED

SW1: Card ID Select

The Card ID supports up to four cards

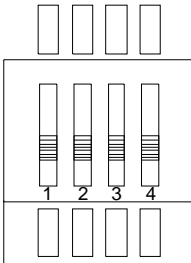


| Pin | Signal Name | Default |
|-----|-------------------|---------|
| 1 | Board ID Select 0 | ON |
| 2 | Board ID Select 1 | ON |
| 3 | Not used | ON |
| 4 | Not used | ON |

Table 2-3: SW1: Card ID Select

| Card ID | Board ID Select 0 | Board ID Select 1 |
|---------|-------------------|-------------------|
| 0 | ON | ON |
| 1 | OFF | ON |
| 2 | ON | OFF |
| 3 | OFF | OFF |

Table 2-4: Card ID Select Table

SW2: PoE Function Select

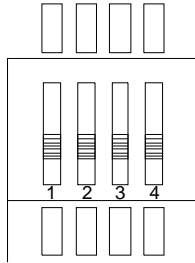


| Pin | Signal Name | Default |
|-----|-----------------------|---------|
| 1 | Shut off +48 V supply | OFF |
| 2 | Not used | OFF |
| 3 | PoE 1 shutdown | OFF |
| 4 | PoE 2 shutdown | OFF |

| LAN Port | PoE Function | Shut Off +48V Supply | PoE 1 Shutdown | PoE 2 Shutdown |
|----------|--------------|----------------------|----------------|----------------|
| 1 | ON | OFF | OFF | |
| | OFF | | ON | |
| 2 | ON | OFF | | OFF |
| | OFF | | | ON |

Table 2-5: SW2: PoE Function Select


CN1: GPIO & Trigger

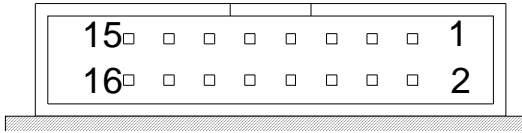

| PIN | PIN NAME | TYPE | PIN | PIN NAME | TYPE |
|-----|--------------|------|-----|-----------|------|
| 1 | In01 | IN | 2 | ComI01 | IN |
| 3 | In02 | IN | 4 | ComI02 | IN |
| 5 | Out01 | OUT | 6 | ComO01 | OUT |
| 7 | Out02 | OUT | 8 | ComO02 | OUT |
| 9 | TrgIn1 | IN | 10 | TrgComI01 | IN |
| 11 | TrgIn2 | IN | 12 | TrgComI02 | IN |
| 13 | TrgOut1 | OUT | 14 | TrgOut2 | OUT |
| 15 | Frame Ground | OUT | 16 | | |

Table 2-6: CN3: GPIO & Trigger


The extension cable connector is a D-sub 15 pin female connector.



| PIN | PIN NAME | TYPE | PIN | PIN NAME | TYPE |
|-----|--------------|------|-----|-----------|------|
| 1 | In01 | IN | 9 | ComI01 | IN |
| 2 | In02 | IN | 10 | ComI02 | IN |
| 3 | Out01 | OUT | 11 | ComO01 | OUT |
| 4 | Out02 | OUT | 12 | ComO02 | OUT |
| 5 | TrgIn1 | IN | 13 | TrgComI01 | IN |
| 6 | TrgIn2 | IN | 14 | TrgComI02 | IN |
| 7 | TrgOut1 | OUT | 15 | TrgOut2 | OUT |
| 8 | Frame Ground | OUT | | | |

Table 2-7: CN3: GPIO & Trigger

CN3: Power Connector

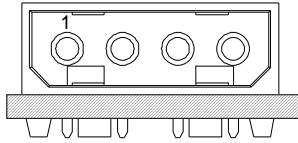


| Pin | Signal |
|-----|--------|
| 1 | +12V |
| 2 | GND |
| 3 | GND |
| 4 | NC |


Table 2-8: CN3: Power Connector

Note: When using the PoE feature, CN3 must be connected to the power supply.


Trigger control setting flow chart

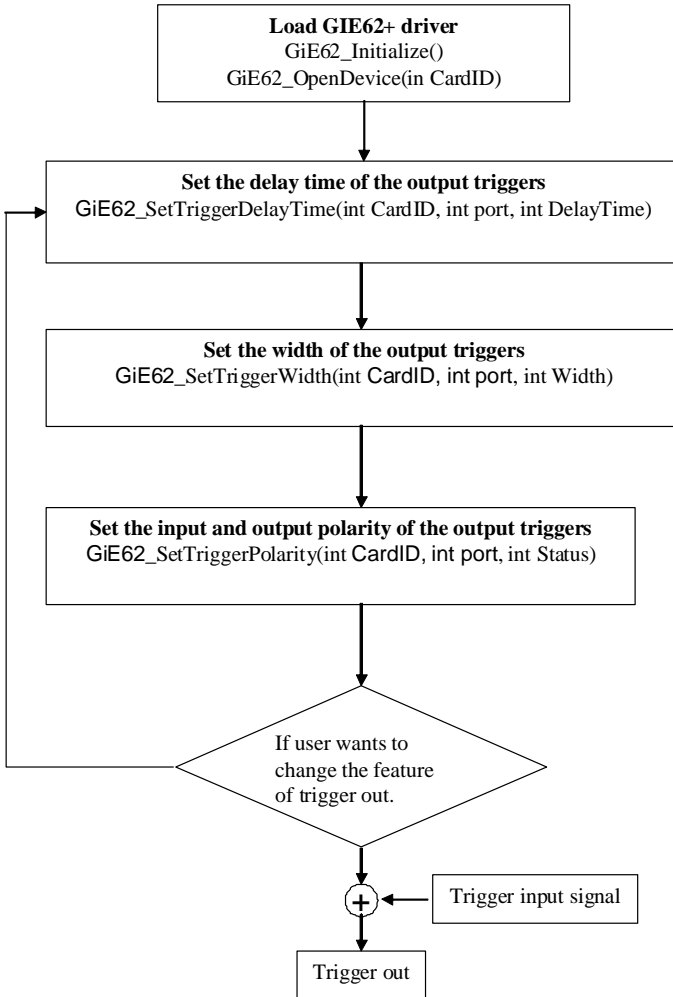


Digital Input Circuit

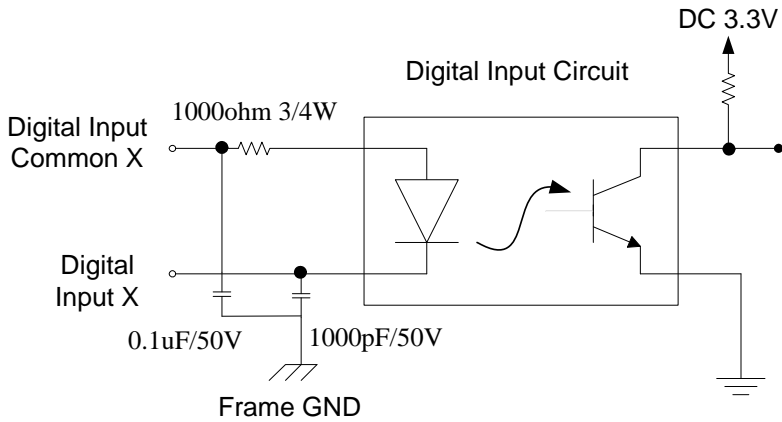


Digital Output Circuit

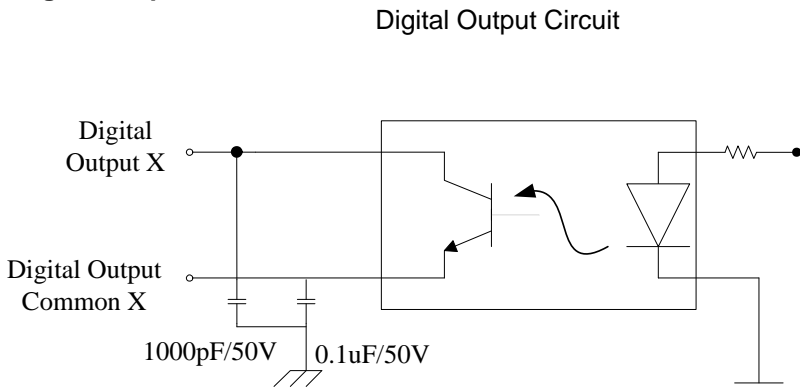

Trigger Input Circuit

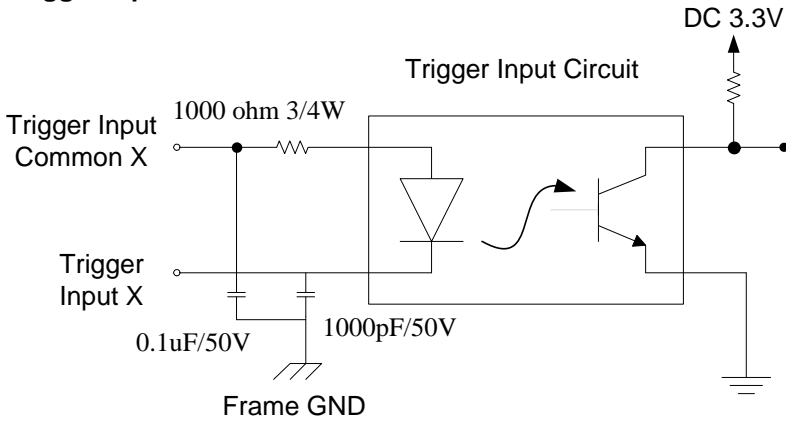


Trigger Output Circuit

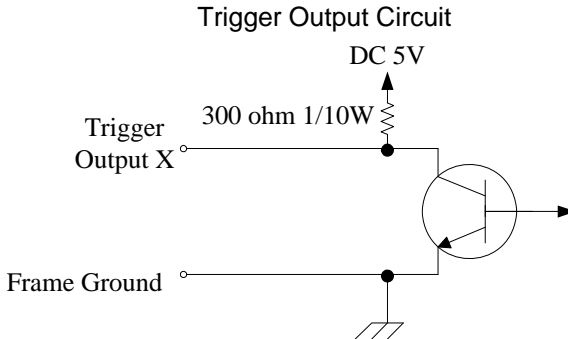


Connection Sample with External I/O Device

- ▶ Digital input or trigger input connection for switch input.

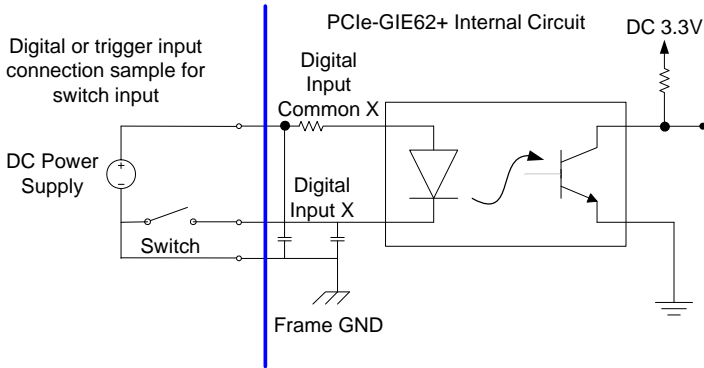


- ▶ Digital input or trigger input connection for TTL signal input.


Note: The response of the computer needs to be inverted in this connection condition mode.
If the external device output controls the digital input common contact, the response of the computer must be inverted.

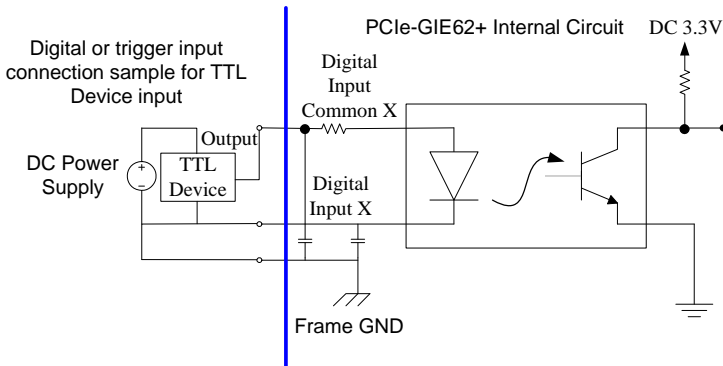


► Digital output connection for user device control.

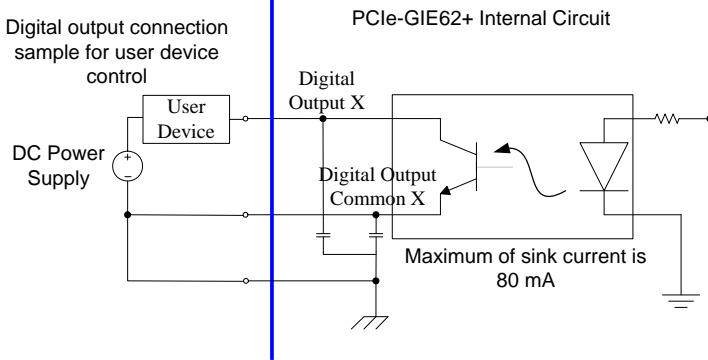


► Digital output connection for a logic signal output.

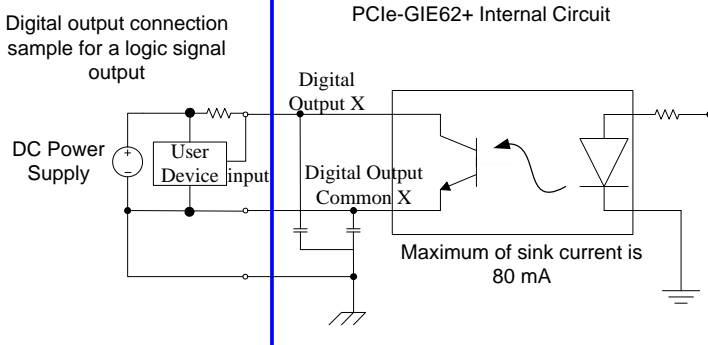

► Trigger output connection for a trigger signal output.

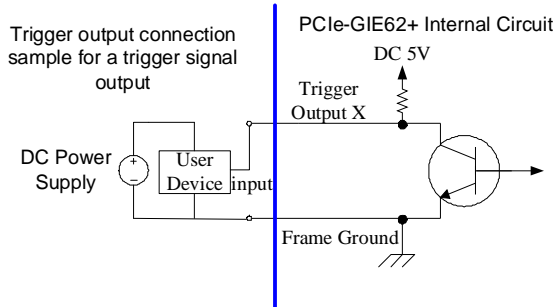

► Loop back connection.

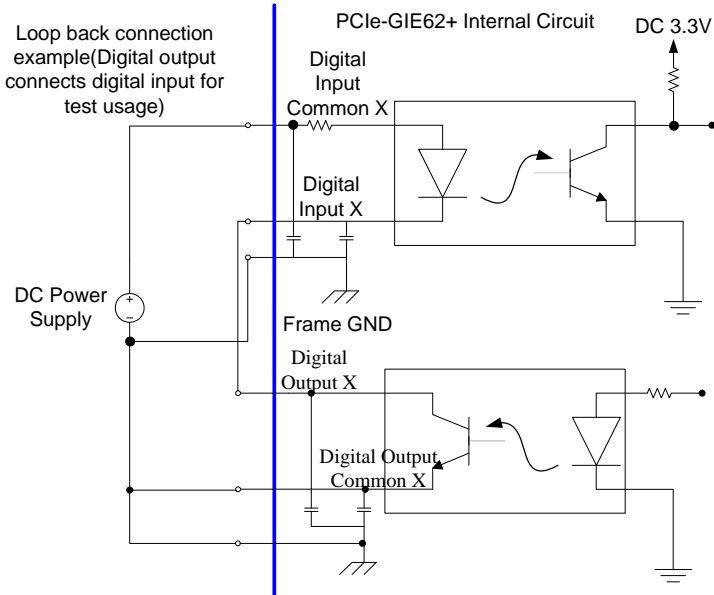


Hardware Features


| Function | Electronic specification |
|--|--|
| Isolated Digital Input | Photo Coupled Input x 2 ch |
| Status | Normal is High, active is Low |
| Input voltage range (ComI to In) | 0 to 25 V |
| High Level (active off) | ComI to In < 0.5 V |
| Low Level (active on) | ComI to In > 2.2 V |
| Isolated Digital Output | Photo Coupled Output x 2 ch |
| Status | Normal is Open, active is Low |
| Load voltage range | 3 to 24V |
| Output sink current | 80 mA (Max) |
| Output voltage drop | 1.0 V (Max) |
| Leak current | 0.1 mA (Max) |
| Reverse voltage | -6 V |
| Isolated Trigger Input | Photo Coupled Trigger input x2 ch |
| Status | Normal is High, active is Low |
| Input voltage range (TrgComI to TrgIn) | 0 to 25 V |
| High Level (active off) | TrgComI to TrgIn < 0.5 V |
| Low Level (active on) | TrgComI to TrgIn > 2.4 V |
| Minimum pulse width | 0.1 ms |
| Trigger In Control | |
| Polarity (Trigger edge) | Rising / Falling edge selectable |
| Isolated Trigger out | Photo Coupled Trigger output x2 ch |
| Status | Normal is High, active is Low |
| Load voltage range | 0 to 5 V |
| Output current | 16 mA (Max) |
| Output voltage drop | 0.4 V Max(@16 mA) |
| Trigger Out Control | |
| Trigger delay | 0 ms to 1000 ms selectable (1 ms/step.) |
| Trigger out pulse width | 0 ms to 50 ms selectable (0.1 ms/step) Set at 0 ms to disable |
| Polarity | Positive / Negative Selectable |

Table 2-9: Hardware Features

Trigger Control Timing Chart

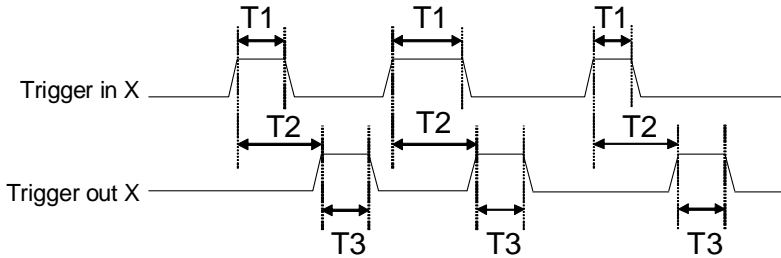

| Symbol | Characteristic | Specification |
|--------|----------------------------|---------------------------------------|
| T1 | Trigger input pulse width | Minimum width is 0.1 msec |
| T2 | Trigger delay | 0-1000 msec selectable(1 msec/step) |
| T3 | Output trigger pulse width | 0.1-50 msec selectable(0.1 msec/step) |

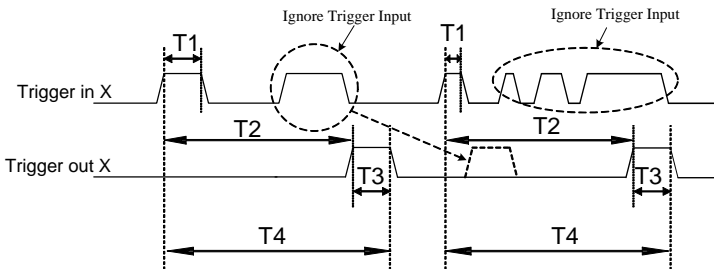

$$T4(\text{Trigger counter busy time})=T2+T3;$$

If signal is on Trigger input channel during trigger counter busy time, it will be ignored.

3 Installation Guide

3.1 Hardware Installation

Use the following steps to install the GIE62+ series board on the PCI express bus:

1. Remove the computer cover using the instructions from the computer manual.
2. Check that there is an empty PCI express slot. If there is not an empty slot, remove a PCI express board from the computer to make room for the GIE62+ board and take note of the chosen slot number.
3. Remove the blank metal plate located at the back of the selected slot (if any). Keep the removed screw to fasten the GIE62+ board after installation.
4. Carefully position the GIE62+ in the selected PCI express slot. If using a tower computer, align the board with the board slots.
5. Press the board firmly, but carefully into the connector.
6. Anchor the board by replacing the screw.
7. Plug in the cable to the PoE power connector (CN3).
8. Connect device via a Gigabit Ethernet connector.
9. Turn on the computer.


Note: The GIE62+ can be installed in a PCI Express x4, x8, and x16 slot.

3.2 Driver Installation



This is a two-part driver installation which includes installation of the Intel network connections driver and installation of the GIE62+ driver. The former is used for network connections between GIE62+ cards and PoE or Non-PoE GigE Vision cameras; the later is used for GIE62+ DIO and trigger functions.

1. Double Click GIE62+_XP32.exe (for 2K/XP) or GIE62+_Vista32.exe (for Vista) to start driver installation of the Intel network chipsets according to your operating system, and the Intel network connections driver installation will begin first.





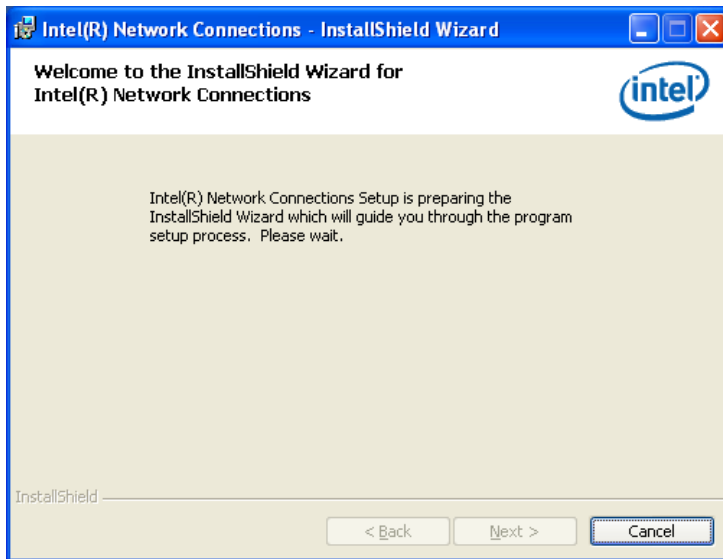


2. Select "I accept the terms in the license agreement" and click "Next" to continue driver installation.

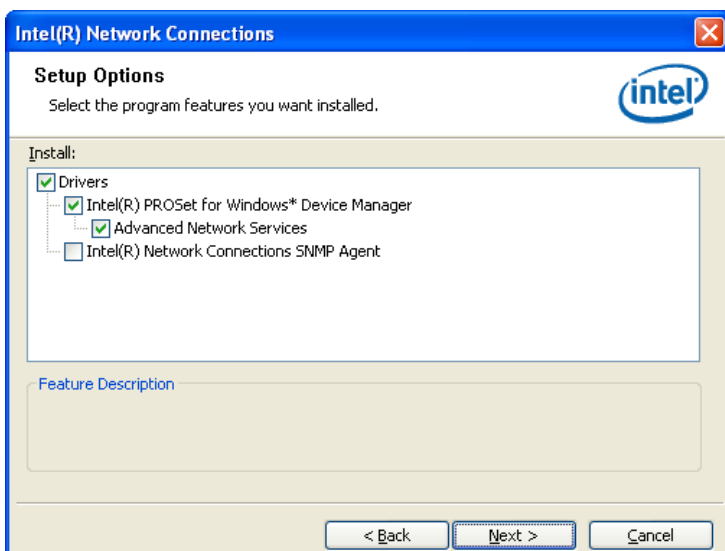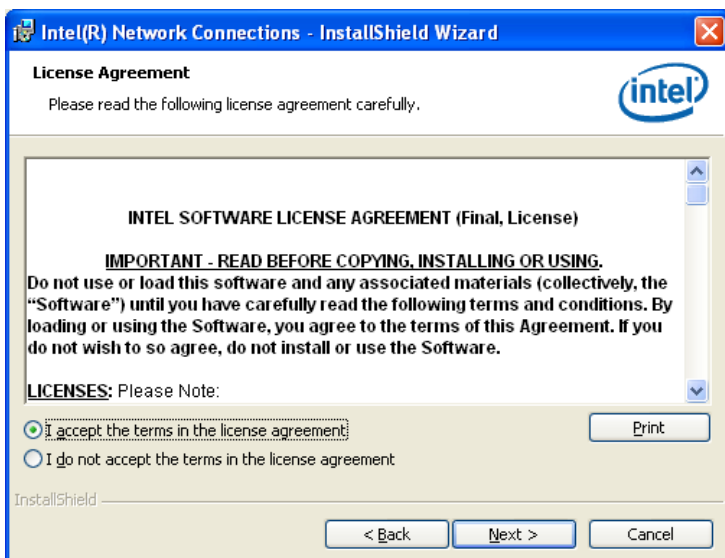


3. Click “Install” to start installing.

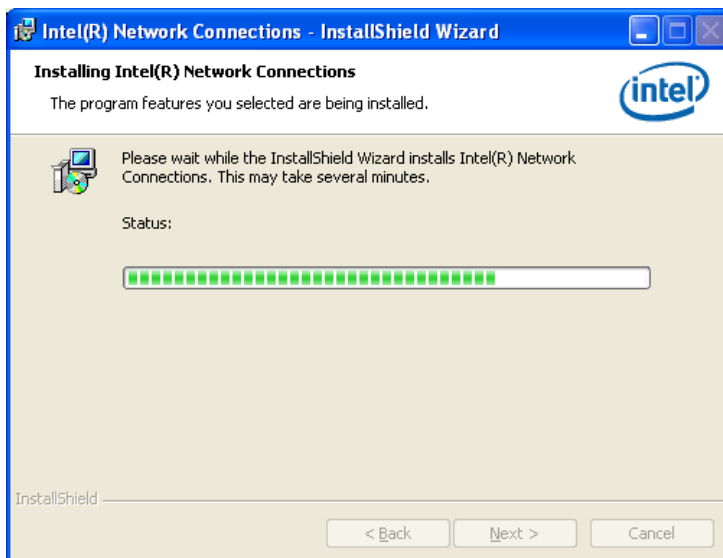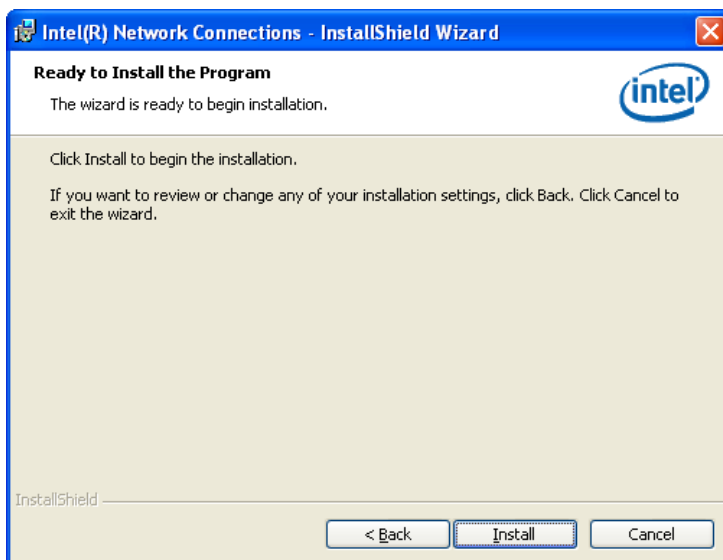


4. Click “Finish” to complete Intel network connections driver installation.

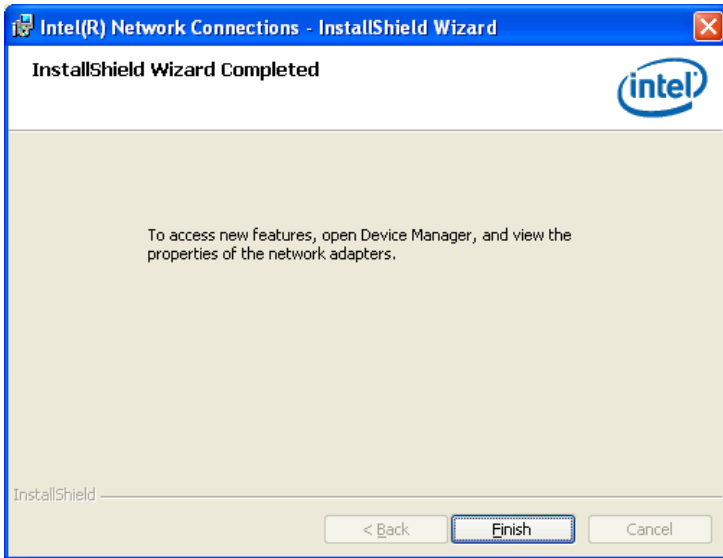


5. After completing the Intel network connections driver installation, the GiE62+ driver installation phase will begin.

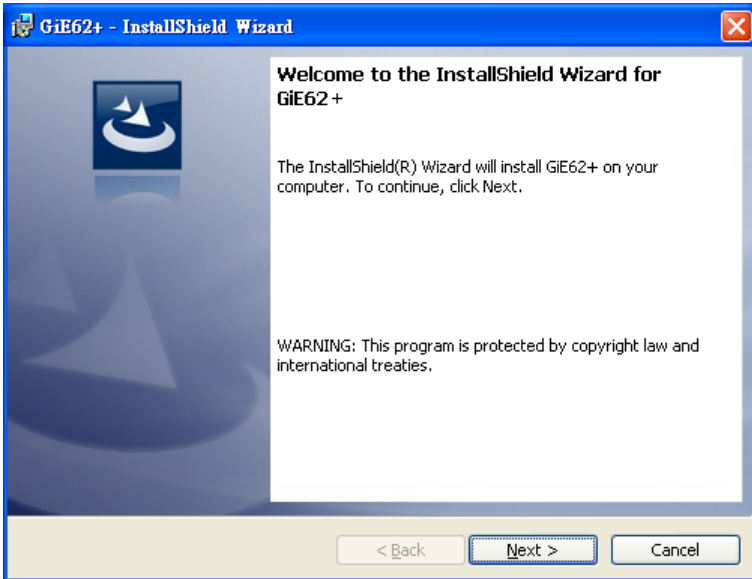


6. Click “Next” to continue driver installation.

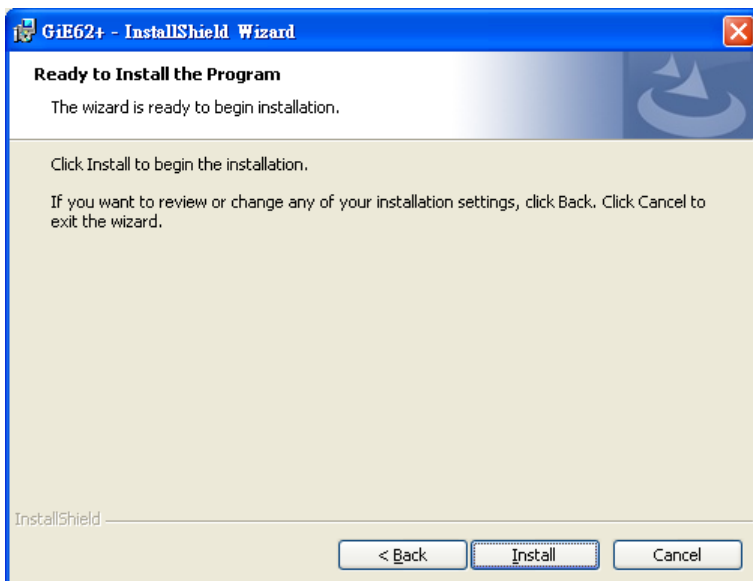

7. Click “Install” to start installing.

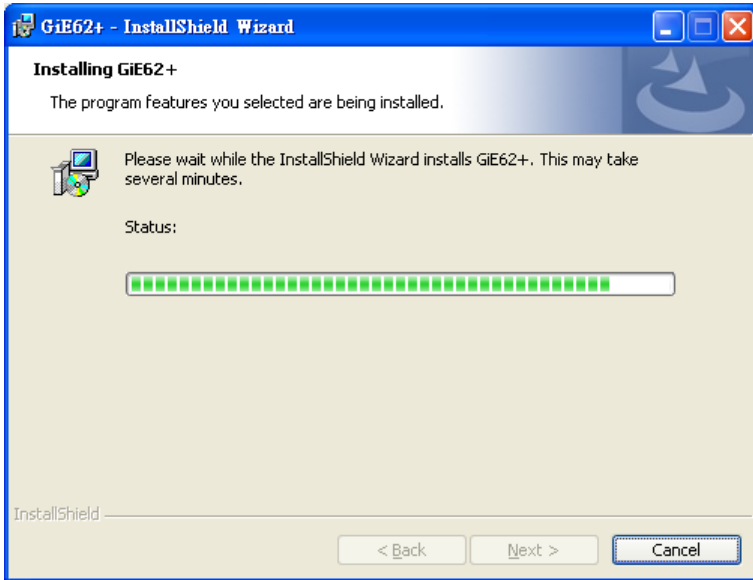


8. Click “Finish” to complete GIE62+ driver installation.

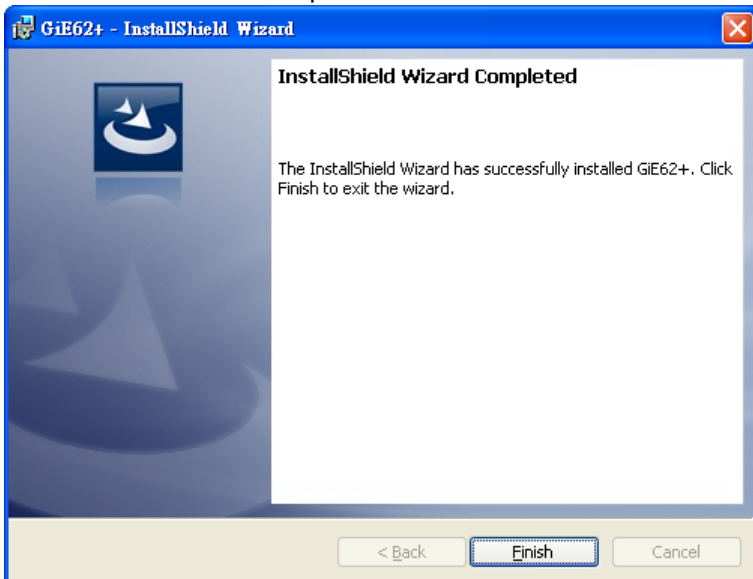

9. To ensure the Intel network connections driver has been installed successfully, go to the “Device Manager” and check “Network adapters”. You should see the following two items:

- ▷ Intel(R) PRO/1000 PT Dual Port Server Adapter
- ▷ Intel(R) PRO/1000 PT Dual Port Server Adapter #2

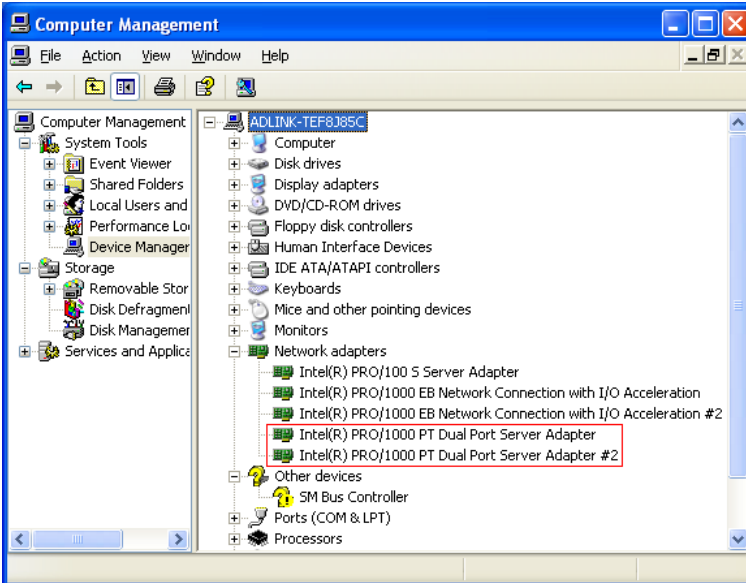

4 Function Library

This chapter describes the API for GiE62+ cards. Please refer to the sample programs in the installation folder, and then use these functions to develop application programs in C#, Visual Basic.NET, Visual Basic, Visual C++, or C++ Builder.

Note: C# and Visual Basic.NET sample programs were developed with Visual Studio 2005.

4.1 Function List

| Function name | Description |
|-----------------------------|--|
| System Functions | |
| GiE62_Initialize | Load the driver of GiE62+ card. You must call this function before any other functions |
| GiE62_GetTotalDeviceNum | Get the number of GiE62+ cards in your system |
| GiE62_GetTotalDeviceID | Get the CardID(s) of all GiE62+ cards in your system |
| GiE62_OpenDevice | Open GiE62+ card and set it to the default status |
| GiE62_ResetDevice | Reset GiE62+ card to the default status |
| GiE62_GetFirmwareVersion | Get the firmware version of GiE62+ card |
| DIO Functions | |
| GiE62_SetDOStatus | Set general purpose digital output status |
| GiE62_GetDIStatus | Get general purpose digital input status |
| Trigger Functions | |
| GiE62_SetTriggerDelayTime | Set the delay time of output triggers |
| GiE62_SetTriggerOutWidth | Set the width of output triggers |
| GiE62_SetTriggerOutPolarity | Set the output polarity of output triggers |
| GiE62_SetTriggerInPolarity | Set the input polarity of output triggers |
| GiE62_GetTriggerDelayTime | Get the delay time of output triggers |
| GiE62_GetTriggerOutWidth | Get the width of output triggers |
| GiE62_GetTriggerOutPolarity | Get the output polarity of output triggers |
| GiE62_GetTriggerInPolarity | Get the input polarity of output triggers |

4.2 Functions

4.2.1 GiE62_Initialize

Description

Load the driver of GiE62+ card. You must call this function before any other functions.

Syntax

```
int GiE62_Initialize();
```

4.2.2 GiE62_GetTotalDeviceNum

Description

Get the number of GiE62+ cards from the value returned by this function.

Syntax

```
int GiE62_GetTotalDeviceNum();
```

4.2.3 GiE62_GetTotalDeviceID

Description

Get the CardID(s) of each GIE62+ cards in your system.

Syntax

```
int GiE62_GetTotalDeviceID(int *DeviceID);
```

Parameters

DeviceID

[out] Pointer to a 32-bit integer array with four elements which stores the read out CardID(s). Please note that the array size cannot be less than 4, and each GIE62+ card must be assigned a different CardID by through the DIP switch on board. If the array size is more than 4, only the first 4 elements contain CardID(s) since GIE62+ supports 4 cards at most in a system.

4.2.4 GiE62_OpenDevice

Description

Open the GiE62+ card and set it to the default status.

Syntax

```
int GiE62_OpenDevice(int CardID);
```

Parameters

CardID

[in] Card ID of GiE62+. The card ID could be 0, 1, 2 and 3. It is defined by the DIP switch on the board.

4.2.5 GiE62_ResetDevice

Description

Reset the GIE62+ card and set it to the default status.

Syntax

```
int GiE62_ResetDevice(int CardID);
```

Parameters

CardID

[in] Card ID of GIE62+. The card ID could be 0, 1, 2 and 3. It is defined by the DIP switch on the board.

4.2.6 GiE62_GetFirmwareVersion

Description

Get the firmware version of the GiE62+ card.

Syntax

```
int GiE62_GetFirmwareVersion(int CardID, char  
*FirmwareVersion, int StringSize);
```

Parameters

CardID

[in] Card ID of GiE62+. The card ID could be 0, 1, 2 and 3. It is defined by the DIP switch on the board.

FirmwareVersion

[out] Pointer to a character array which stores the read out firmware version.

StringSize

[in] Size of the character array that will be returned.

4.2.7 GiE62_SetDOStatus

Description

Set the general purpose digital output status.

Syntax

```
int GiE62_SetDOStatus(int CardID, int port, int status);
```

Parameters

CardID

[in] Card ID of GIE62+. The card ID could be 0, 1, 2 and 3. It is defined by the DIP switch on the board.

port

[in] Port number of GIE62+. The port number could be 1 and 2.

status

[in] A 32-bit integer variable which represents the status of digital output.

- ▷ 0: Low
- ▷ 1: High

4.2.8 GiE62_GetDIStatus

Description

Get the general purpose digital input status.

Syntax

```
int GiE62_GetDIStatus(int CardID, int port, int  
*status);
```

Parameters

CardID

[in] Card ID of GIE62+. The card ID could be 0, 1, 2 and 3. It is defined by the DIP switch on the board.

port

[in] Port number of GIE62+. The port number could be 1 and 2.

status

[out] Pointer to a 32-bit integer variable which stores the read out digital input status.

- ▷ 0: Low
- ▷ 1: High

4.2.9 GiE62_SetTriggerDelayTime

Description

Set the delay time of output triggers.

Syntax

```
int GiE62_SetTriggerDelayTime(int CardID, int port,  
int DelayTime);
```

Parameters

CardID

[in] Card ID of GIE62+. The card ID could be 0, 1, 2 and 3. It is defined by the DIP switch on the board.

port

[in] Port number of GIE62+. The port number could be 1 and 2.

DelayTime

[in] A 32-bit integer variable which specifies the delay time of output triggers. The unit of delay time is in milliseconds (ms).

The value should be 0 - 1000.

4.2.10 GiE62_SetTriggerOutWidth

Description

Set the width of output triggers.

Syntax

```
int GiE62_SetTriggerOutWidth(int CardID, int port,  
int width);
```

Parameters

CardID

[in] Card ID of GIE62+. The card ID could be 0, 1, 2 and 3. It is defined by the DIP switch on the board.

port

[in] Port number of GIE62+. The port number could be 1 and 2.

width

[in] A 32-bit integer variable which specifies the width of output triggers. The unit of width is in 0.1 milliseconds (ms).

The value should be 0 - 500.

4.2.11 GiE62_SetTriggerOutPolarity

Description

Set the output polarity of output triggers.

Syntax

```
int GiE62_SetTriggerOutPolarity(int CardID, int  
port, int OutPolarity);
```

Parameters

CardID

[in] Card ID of GIE62+. The card ID could be 0, 1, 2 and 3. It is defined by the DIP switch on the board.

port

[in] Port number of GIE62+. The port number could be 1 and 2.

OutPolarity

[in] A 32-bit integer variable which specifies the output polarity of output triggers.

The value should be 0 or 1.

- ▷ 0: Negative
- ▷ 1: Positive

4.2.12 GiE62_SetTriggerInPolarity

Description

Set the input polarity of output triggers.

Syntax

```
int GiE62_SetTriggerInPolarity(int CardID, int  
port, int InPolarity);
```

Parameters

CardID

[in] Card ID of GIE62+. The card ID could be 0, 1, 2 and 3. It is defined by the DIP switch on the board.

port

[in] Port number of GIE62+. The port number could be 1 and 2.

InPolarity

[in] A 32-bit integer variable which specifies the input polarity of output triggers.

The value should be 0 or 1.

- ▷ 0: Falling
- ▷ 1: Rising

4.2.13 GiE62_GetTriggerDelayTime

Description

Get the delay time of output triggers.

Syntax

```
int GiE62_GetTriggerDelayTime(int CardID, int port,  
int *DelayTime);
```

Parameters

CardID

[in] Card ID of GIE62+. The card ID could be 0, 1, 2 and 3. It is defined by the DIP switch on the board.

port

[in] Port number of GIE62+. The port number could be 1 and 2.

DelayTime

[out] Pointer to a 32-bit integer variable which stores the read out delay time of output triggers. The unit of delay time is in milliseconds (ms).

4.2.14 GiE62_GetTriggerOutWidth

Description

Obtain the width of output triggers.

Syntax

```
int GiE62_GetTriggerOutWidth(int CardID, int port,  
int *width);
```

Parameters

CardID

[in] Card ID of GIE62+. The card ID could be 0, 1, 2 and 3. It is defined by the DIP switch on the board.

port

[in] Port number of GIE62+. The port number could be 1 and 2.

width

[out] Pointer to a 32-bit integer variable which stores the read out width of output triggers. The unit of width is in 0.1 milliseconds (ms).

4.2.15 GiE62_GetTriggerOutPolarity

Description

Get the output polarity of output triggers.

Syntax

```
int GiE62_GetTriggerOutPolarity(int CardID, int  
port, int *OutPolarity);
```

Parameters

CardID

[in] Card ID of GIE62+. The card ID could be 0, 1, 2 and 3. It is defined by the DIP switch on the board.

port

[in] Port number of GIE62+. The port number could be 1 and 2.

polarity

[out] Pointer to a 32-bit integer variable which stores the read out output polarity of output triggers.

- ▷ 0: Negative
- ▷ 1: Positive

4.2.16 GiE62_GetTriggerInPolarity

Description

Get the input polarity of output triggers.

Syntax

```
int GiE62_GetTriggerInPolarity(int CardID, int  
port, int *InPolarity);
```

Parameters

CardID

[in] Card ID of GIE62+. The card ID could be 0, 1, 2 and 3. It is defined by the DIP switch on the board.

port

[in] Port number of GIE62+. The port number could be 1 and 2.

InPolarity

[out] Pointer to a 32-bit integer variable which stores the read out input polarity of output triggers.

- ▷ 0: Falling
- ▷ 1: Rising

4.3 Error Codes

| Error Code | Meaning |
|------------|----------------------------|
| 0 | ERROR_NoError |
| -1 | ERROR_Invalid_CardID |
| -2 | ERROR_Invalid_PortNo |
| -3 | ERROR_DeviceNotOpened |
| -4 | ERROR_DeviceAlreadyOpened |
| -5 | ERROR_ParameterExceedLimit |
| -6 | ERROR_DeviceCannotAccess |

Table 4-1: Error Codes