\_ GIGABIT

SWITCH

INDUSTRIAL


## **Q**uick Installation Guide

### Introduction

Featuring network redundancy capabilities, the IGS-R9812GP is a managed Ethernet switch with 8x10/100/1000Base-T(X) ports and 12x100/1000Base-X SFP ports. The device supports Layer-3 routing for higher network performance on large-scale LANs. The hardware Layer-3 switch is optimized to transmit data as fast as Layer-2 switches. With complete support of Ethernet redundancy protocols, O-Ring (recovery time <30ms for over 250 connected devices) and MSTP (RSTP/STP compatible) can protect your mission-critical applications from network interruptions or temporary malfunctions. With a wide operating temperature from -40~70°C, IGS-R9812GP also can be managed centralized via ORing's proprietary Open-Vision platform as well as via Web-based interfaces, Telnet and console (CLI). Therefore, the switch is one of the most reliable choice for highly-managed and fiber Ethernet applications.

#### Package Contents


The device is shipped with the following items. If any of these items is missing or damaged, please contact your customer service representative for assistance.

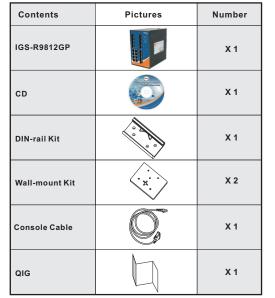

#### Preparation

Before you begin installing the switch, make sure you have all of the package contents available and a PC with Microsoft Internet Explorer 6.0 or later, for using web-based system management tools.

#### Safety & Warnings

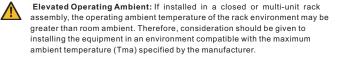


Reduced Air Flow: Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised


**IGS-R9812GP** 


Mechanical Loading: Mounting of the equipment in the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading


Circuit Overloading: Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of the circuits might have on overcurrent protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

#### Dimension

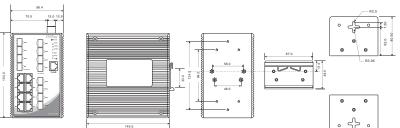

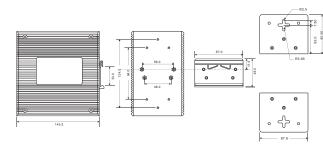

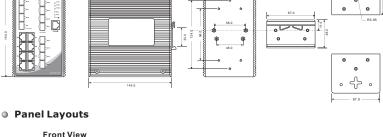

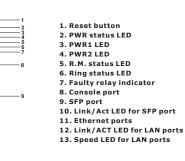


Top Panel

1. Terminal blocks: PWR1, PWR2

, Relay

2. Ground wire

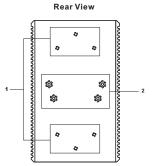

1. Wall-mount screw holes 2. Din-rail screw holes


### **Industrial Managed Gigabit Switch**

### Installation

#### • DIN-rail Installation

Step 1: Slant the switch and screw the Din-rail kit onto the back of the switch, right in the middle of the back panel Step 2: Slide the switch onto a DIN-rail from the Din-rail kit and make sure the switch

clicks into the rail firmly

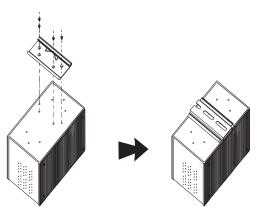


#### Wall-mounting

Step 1: Screw the two pieces of wall-mount kits onto both ends of the rear panel of the switch. A total of six screws are required, as shown below. Step 2: Use the switch, with wall mount plates attached, as a guide to mark the

correct locations of the four screws. Step 3: Insert four screw heads through the large parts of the keyhole-shaped apertures,

and then slide the switch downwards. Tighten the four screws for added stability.

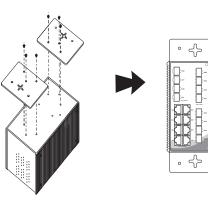

Network Connection

The switch provides standard Ethernet ports. According to the link type, the switch uses CAT 3, 4, 5, 5e UTP cables to connect to any other network devices (PCs, servers, switches, routers, or hubs). Please refer to the following table for cable specifications.

#### **Cable Types and Specifications:**

Cable	Туре	Max. Length	Connector
10BASE-T	Cat. 3, 4, 5 100-ohm	UTP 100 m (328 ft)	RJ-45
100BASE-TX	Cat. 5 100-ohm UTP	UTP 100 m (328 ft)	RJ-45
1000BASE-T	Cat. 5 / Cat. 5e 100-ohm UTP	UTP 100 m (328 ft)	RJ-45

# Quick Installation Guide

For pin assignments for different types of cables, please refer to the following

Pin No.

# 1

#2

#3

#4 #5

#6

#7

#8

Pin Number

3

4

1000Base-T RJ-45 Port Assignments

BI DA+

BI\_DA-

BI DB+

BI\_DC+

BI DC-

BI\_DB-

BI\_DD+

BI\_DD-

MDI-X port

BI DB+

BI\_DB-

BI DA+

BI\_DD+ BI DD-

BI\_DA-

BI\_DC+

BI DC-

1 0 @ 24

1000Base-T MDI/MDI-X

MDI port

BI DA+

BI\_DA-

BI DB+

BI\_DC+

BI DC-

BI DB-

BI\_DD+

BI DD-

# **IGS-R9812GP**

## **Industrial Managed Gigabit Switch**

After installing the switch, the green power LED should turn on. Please refer to the following tablet for LED indication.

LED	Color	Status	Description	
PWR	Green	On	DC power on	
PWR1	Green	On	DC power module 1 activated	
PWR2	Green	On	DC power module 2 activated	
R.M	Green	On	Ring Master	
Ring	Green	On	Ring enabled	
		Blinking	Ring structure is broken (i.e. part of the ring is	
			disconnected)	
Fault	Amber	On	Faulty relay (power failure or port disconnected)	
10/100/1000Base-T(X) Gigabit Ethernet ports				
LNK/ACT	Green	On	Port link up	
		Blinking	Data transmitted	
Speed	Green	On	Port link at 1000Mbps	
	Amber	On	Port link at 100Mbps	
	Green/Amber	Off	Port link at 10Mbps	
SFP ports				
LNK/ACT	Green	On	Port link up	
		Blinking	Data transmitted	

Follow the steps to set up the switch:

**Configurations** 

1. Launch the Internet Explorer and type in IP address of the switch. The default static IP address is 192.168.10.1



Address http://192.168.10.1 2. Log in with default user name and password

(both are admin). After logging in, you should see the following screen. For more information on configurations, please refer to the user manual. For information on operating the switch using ORing's Open-Vision management utility, please go to ORing website.



#### Resetting

To reboot the switch, press the Reset button for 2-3 seconds.

To restore the switch configurations back to the factory defaults, press the Reset button for 5 seconds.



### **Specifications**

ORing Switch Model	1GS-R9812GP			
Physical Ports				
10/100/1000Base-T(X) with Ports in RJ45 Auto MDI/MDIX	8			
100/1000Base-X with SFP port	12			
Technology	**			
Ethernet Standards	IEEE 802.3 for 108ase-T IEEE 802.3 bfor 1008ase-TX and 1008ase-FX IEEE 802.3 bfor 1008ase-TX IEEE 802.3 bfor 1008ase-TX IEEE 802.3 bfor 10008ase-X IEEE 802.3 bfor LACP (Link Aggregation Control Protocol) IEEE 802.1 bfor COS (Class of service) IEEE 802.1 bfor COS (Class of service) IEEE 802.1 bfor HSTF (Millight Spanning Tree Protocol) IEEE 802.1 bfor HSTF (Millight Spanning Tree Protocol) IEEE 802.1 bfor LATP (Link Layer Discovery Protocol) IEEE 802.1 bfor LDP (Link Layer Discovery Protocol)			
MAC Table	8К			
	8			
Priority Queues Processing	o Store-and-Forward			
Switch Properties	Solice allow of ward Switch latery (? Jus Switch bandwidth: 40Gbps Max, Number of Available VLANs: 256 IGMP multicast groups: 128 for each VLAN Port rate limiting: User Define			
Jumbo frame	Up to 9.6K Bytes			
Security Features	Device Binding security feature Enable/disble ports, MAC based port security Port based network access control (802.1x) Single 802.1x and Multiple 800.1x Qos sasignment Gos sasignment Gos sasignment Caddress limit TACAC5+ VLAN (802.1Q) to segregate and secure network traffic Radius certailized password management SINMPA encrypted authentication and access security Wash back to extension and authorization IP source guard IPS enchance network security			
Software Features	Hardware routing, RIP and static routing IEEE 15802 (cots synchronization) IEEE 0502.10 Defde, auto MAC address learning/aging and MAC address (static) IEEE 0502.10 Defde, auto MAC address learning/aging and MAC address (static) Redundant King (O-King) with recovery time less than 30ms over 250 units TOS/DIffers vupported Quality of Service (802.14) (or real-time tenffic VLNR (802.10) with VLAN tagging Voice VLAN U-based hardworping I D-based hardworping Differs and prevention DOS/DIOS auto prevention Port configuration, status, statistics, monitoring, security DIFG Server/Link1anopping DIFG Server/Link1anopp			
Network Redundancy	O-Ring, Open-Ring, O-Chain, MRP, MSTP (RSTP/STP compatible)			
RS-232 Serial Console Port	RS-232 in RJ45 connector with console cable. Baud rate setting: 115200bps, 8, N, 1			
Fault Contact				
Relay	Relay output to carry capacity of 1A at 24VDC			
Power				
Redundant Input power	Dual DC inputs. 12~48VDC on 6-pin terminal block			
Power consumption(Typ.) (PoE output not included)	23W			
Overload current protection	Present			
Reverse Polarity Protection	Present			
	1 Finalia Hi.			
Physical Characteristic	10.30			
Enclosure	IP-30 96.4 x 145.5 x 154 mm (3.8 x 5.73 x 6.06 inch)			
Dimension (W x D x H)				
Weight (g)	1520 g			
Environmental				
Storage Temperature	-40 to 85°C (-40 to 185°F)			
Operating Temperature	-40 to 70°C (-40 to 158'F)			
Operating Humidity	5% to 95% Non-condensing			
Regulatory Approvals				
EMI	FCC Part 15, CISPR (EN55022) class A			
EMS	EN61000-4-2 (ESD), EN61000-4-3 (RS), EN61000-4-4 (EFT), EN61000-4-5 (Surge), EN61000-4-6 (CS), EN61000-4-8, EN61000-4-11			
Shock	IEC60068-2-27			
Free Fall	IEC60068-2-32			
	IEC60068-2-6			
Vibration	IEC60068-2-6			
Vibration Safety	IEC60068-2-6 EN60950-1			

The switch supports dual redundant power supplies, Power Supply1 (PWR1) and Power Supply 2 (PWR2). The connections for PWR1, PWR2 and the RELAY are located on the terminal block. STEP 1: Insert the negative/positive wires into the V-/V+ terminals,

RJ45 pin assignment

PIN#2 RxD

PIN#3 TxD

PIN#5 GND

STEP 2: To keep the DC wires from pulling loose, use a small flatblade screwdriver to tighten the wire-clamp screws on the front of the terminal block connector.

#### **Relay contact**

Wiring

**Power inputs** 

respectively

\_\_ GIGABIT

SWITCH

INDUSTRIAL

tables

Pin No.

# 1

#2

#3

#6

wire pair. **Console Port Pin Definition** 

assignment information

PC (male) pin assignmen

PIN#2 RxD

PIN#3 TxD

PIN#5 GND

10/100Base-T(X) RJ-45 Port

10/100 Base-T(X) MDI/MDI-X

Pin Number MDI port MDI-X port

RD+(receive)

Not used

Not used

RD-(receive)

Not used

Not used

Assignments

TD+

TD-

RD+

RD-

TD+(transmit) RD+(receive)

TD-(transmit) RD-(receive)

TD+(transmit

Not used

Not used

TD-(transmit

Not used

Not used

Note: "+" and "-" signs represent the polarity of the wires that make up each

To connect the console port to an external management device, you need an RJ-45 to

DB-9 cable, which is also supplied in the package. Below is the console port pin

RS-232 with DB9 (female) pin

assignment (RJ45-DB9 cable)

PIN#2 RxD

PIN#3 TxD

PIN#5 GND

The two sets of relay contacts of the 6-pin terminal block connector are used to detect userconfigured events. The two wires attached to the fault contacts form an close circuit when a user-configured when an event is triggered. If a user-configured event does not occur, the fault circuit remains opened.

#### Grounding

Grounding and wire routing help limit the effects of noise due to electromagnetic interference (EMI). Run the ground connection from the ground screws to the grounding surface prior to connecting devices.